

**DAYTONA 2 USA STD TABLE OF CONTENTS**

|                                                                    |       |
|--------------------------------------------------------------------|-------|
| <a href="#">INTRODUCTION TO THE OWNER'S MANUAL</a>                 | 1     |
| <a href="#">GENERAL PRECAUTIONS</a>                                | 2~3   |
| <a href="#">1. PRECAUTIONS TO BE HEDED FOR OPERATION</a>           | 4~5   |
| <a href="#">2. NAME OF PARTS</a>                                   | 6     |
| <a href="#">3. ACCESSORIES</a>                                     | 7~8   |
| <a href="#">4. ASSEMBLY AND INSTALLATION</a>                       | 9~15  |
| <a href="#">5. PRECAUTIONS TO BE HEDED FOR WHEN MOVING MACHINE</a> | 16    |
| <a href="#">6. CONTENTS OF GAME</a>                                | 17~21 |
| <a href="#">7. EXPLANATION OF TEST AND DATA DISPLAY</a>            | 22~32 |
| <a href="#">7-1 SWITCH UNIT AND COIN METER</a>                     | 23    |
| <a href="#">7-2 TEST MODE</a>                                      | 24    |
| <a href="#">7-3 MEMORY TEST</a>                                    | 24    |
| <a href="#">7-4 T.G.P. TEST</a>                                    | 25    |
| <a href="#">7-5 INPUT TEST</a>                                     | 26    |
| <a href="#">7-6 OUTPUT TEST</a>                                    | 26    |
| <a href="#">7-7 SOUND TEST</a>                                     | 27    |
| <a href="#">7-8 C.R.T. TEST</a>                                    | 27    |
| <a href="#">7-9 GAME ASSIGNMENTS</a>                               | 28    |
| <a href="#">7-10 COIN ASSIGNMENTS</a>                              | 29~31 |
| <a href="#">7-11 BOOKKEEPING</a>                                   | 32    |
| <a href="#">7-12 BACKUP DATA CLEAR</a>                             | 32    |
| <a href="#">8. HANDLE MECHA</a>                                    | 33~37 |
| <a href="#">8-1 REMOVING THE CONTROL PANEL</a>                     | 33~34 |
| <a href="#">8-2 REPLACING AND ADJUSTING THE HANDLE'S V.R.</a>      | 35    |
| <a href="#">8-3 GREASING</a>                                       | 36    |
| <a href="#">8-4 SWITCH REPLACEMENT</a>                             | 37    |
| <a href="#">9. SHIFT LEVER</a>                                     | 38~40 |
| <a href="#">9-1 REMOVING THE SHIFT LEVER</a>                       | 38~39 |
| <a href="#">9-2 SWITCH REPLACEMENT</a>                             | 39~40 |
| <a href="#">10. ACCEL &amp; BRAKE</a>                              | 41~46 |
| <a href="#">10-1 ADJUSTMENT AND REPLACEMENT OF VOLUME</a>          | 41~42 |
| <a href="#">10-2 GREASING</a>                                      | 43~44 |
| <a href="#">11. COIN SELECTOR</a>                                  | 47~49 |
| <a href="#">12. MONITOR</a>                                        | 50~63 |
| <a href="#">12-1 PRECAUTIONS TO BE HEDED WHEN</a>                  | 50    |

|                                                               |         |
|---------------------------------------------------------------|---------|
| <a href="#">HANDLING MONITOR</a>                              |         |
| <a href="#">12-2 CLEANING THE CRT SURFACES</a>                | 51~53   |
| <a href="#">13. REPLACEMENT OF FLUORESCENT LAMP AND LAMPS</a> | 54      |
| <a href="#">13-1 REPLACEMENT OF FLUORESCENT LAMP</a>          | 54      |
| <a href="#">14. PERIODIC INSPECTION TABLE</a>                 | 55      |
| <a href="#">15. TROUBLESHOOTING</a>                           | 56      |
| <a href="#">15-1 REPLACEMENT OF FUSES</a>                     | 57      |
| <a href="#">16. GAME BOARD</a>                                | 68~69   |
| <a href="#">16-1 REMOVING THE IC BOARD</a>                    | 70      |
| <a href="#">16-2 COMPOSITION OF GAME BOARD</a>                | 71      |
| <a href="#">17. DESIGN RELATED PARTS</a>                      | 72~73   |
| <a href="#">18. PARTS LIST</a>                                | 74~124  |
| <a href="#">TOP ASSY DAYTONA 2 STD</a>                        | 74~75   |
| <a href="#">ASSY BILLBOARD STD</a>                            | 76~77   |
| <a href="#">ASSY COIN CHUTE TOWER</a>                         | 78      |
| <a href="#">ASSY SW UNIT</a>                                  | 79      |
| <a href="#">AC UNIT</a>                                       | 80      |
| <a href="#">ASSY MONITOR COVER (BOTH SIDES)</a>               | 81      |
| <a href="#">ASSY SPEAKER</a>                                  | 82      |
| <a href="#">ASSY VIRTUAL BUTTON</a>                           | 83~84   |
| <a href="#">ASSY BASE BOX</a>                                 | 85      |
| <a href="#">MAIN BASE</a>                                     | 86      |
| <a href="#">ASSY SEAT</a>                                     | 87~88   |
| <a href="#">ASSY WOOFER</a>                                   | 89      |
| <a href="#">ASSY 4 SPEED SHIFTER</a>                          | 90      |
| <a href="#">ASSY ACCEL&amp;BRAKE</a>                          | 91~92   |
| <a href="#">ASSY HANDLE MECHA</a>                             | 93~95   |
| <a href="#">ASSY SOUND BD</a>                                 | 96      |
| <a href="#">ASY SHIELD CASE</a>                               | 97~98   |
| <a href="#">ASSY MAIN BD</a>                                  | 99~100  |
| <a href="#">ASSY ELEC BASE</a>                                | 101     |
| <a href="#">ASSY DRIVE BD</a>                                 | 102~103 |
| <a href="#">ASSY COCKPIT</a>                                  | 104~105 |
| <a href="#">ASSY CONTROL PANEL</a>                            | 106~107 |
| <a href="#">ASSY MAIN BASE 1P</a>                             | 108     |
| <a href="#">19. WIRING DIAGRAMS</a>                           | XXX     |

[\[Previous page\]](#)[\[Next page\]](#)[\[Table of Contents\]](#)

---

## INTRODUCTION OF THE OWNERS MANUAL

---

### SPECIFICATIONS

Installation space: 68 in.(L) x 45 in.(W)

Height: 70 in.

Weight: Approx. 570 lbs.

Power maximum current: 8.4 Amp AC 120V 60 Hz

MONITOR: 50 INCH PROJECTION DISPLAY

---

SEGA ENTERPRISES, LTD., has for more than 30 years been supplying various innovative and popular amusement products to the world market. This Owners Manual is intended to provide detailed descriptions together with all the necessary installation, game settings and parts ordering information related to the SEGA DAYTONA 2 STD, a new SEGA product.

This manual is intended for those who have knowledge of electricity and technical expertise, especially in ICs, CRTs, microprocessors, and circuit boards. Read this manual carefully to acquire sufficient knowledge before working on the machine. Should there be a malfunction, non-technical personnel should under no circumstances touch the interior system. Should the need arise, contact our main office, or the closest branch office listed below.

SEGA ENTERPRISES, INC. (USA)

**Customer Service**

45133 Industrial Drive

Fremont, CA 94538

Phone 650-802-1750

Fax 650-802-1754

7:30 am - 4:00 pm, Pacific Standard Time

Monday thru Friday

[\[Previous page\]](#)[\[Next page\]](#)[\[Table of Contents\]](#)

---

## ***General Precautions***

**Follow Instructions:** All operating and use instructions should be followed.

**Attachments:** Do not use attachments not recommended by the product manufacturer as they may cause hazards.

**Accessories:** Do not place this product on an unstable cart, stand, tripod, bracket, or table. The product may fall, causing serious injury to a child or adult, and serious damage to the product. Use only with a cart, stand, tripod, bracket, or table recommended by the manufacturer, or sold with the product. Any mounting of the product should follow the manufacturer's instructions, and should use only mounting accessories recommended by the manufacturer.

**Moving the Product:** This product should be moved with care. Quick stops, excessive force, and uneven surfaces may cause the product to overturn.

**Ventilation:** Slots and openings in the cabinet are provided for ventilation, to ensure reliable operation of the product and to protect it from overheating; these openings must not be blocked or covered. The openings should never be blocked by placing the product in a built-in installation such as a bookcase or rack unless proper ventilation is provided or the manufacturer's instructions have been adhered to.

**Power Sources:** This product should be operated only from the type of power source indicated on the marking label. If you are not sure of the type of power supply to your location, consult your local power company. For products intended to operate from battery power or other sources, refer to the operating instructions.

**Grounding or Polarization:** This product is equipped with a three-wire grounding-type plug, a plug having a third (grounding) pin. This plug will only fit into a grounding-type power outlet. This is a safety feature. If you are unable to insert the plug into the outlet, contact your electrician to replace your obsolete outlet. Do not defeat the safety purpose of the grounding-type plug.

**Power Cord Protection:** Power-supply cords should be routed so that they are not likely to be walked on or pinched by items placed upon or against them, paying particular attention to cords at plugs, convenience receptacles, and the point where they exit from the product.

**Overloading:** Do not overload wall outlets, extension cords, or integral convenience receptacles as this can result in a risk of fire or electric shock.

**Object and Liquid Entry:** Never push objects of any kind into this product through openings as they may touch dangerous voltage points or short-out parts that could result in a fire or electric shock. Never spill liquid of any kind on the product.

**Servicing:** Do not attempt to service this product yourself as opening or removing covers may expose you to dangerous voltage or other hazards. Refer all servicing to qualified service personnel.

**Damage Requiring Service:** Unplug this product from the wall outlet and refer servicing to qualified service personnel under the following conditions:

- a) If the power cord or plug is damaged;
- b) If liquid has been spilled, or objects have fallen into the product;
- c) If the product has been exposed to rain or water;
- d) If the product does not operate normally when following the operating instructions. Adjust only those controls that are explained in the operating instructions. An improper adjustment of other controls may result in damage and will often require extensive work by a qualified technician to restore the product to its normal operation;
- e) If the product has been dropped or damaged in any way;
- f) When the product exhibits a distinct change in performance, this indicates a need for service.

**Replacement Parts:** When replacement parts are required, be sure the service technician has used replacements parts specified by the manufacturer or that have the same characteristics as the original part. Unauthorized substitutions may result in fire, electric shock, or other hazards.

**Safety Check:** Upon completion of any service or repairs to this product, ask the service technician to perform safety checks to determine that the product is in proper operating condition.

**Heat:** The product should be situated away from heat sources such as radiators, heat registers, stoves, or other products (including amplifiers) that produce heat.

**Lithium Battery-** Dispose of batteries only in accordance with the battery manufacturer's recommendations. Do not dispose in an open flame condition, since the battery may explode.

**Cleaning:** When cleaning the monitor glass, use water or glass cleaner and a soft cloth. Do not apply chemicals such as benzene, thinner, etc.

**Location:** This an indoor game machine, DO NOT install it outside. To ensure proper usage, avoid installing indoors in the places mentioned below:

- Places subject to rain/water leakage, or condensation due to humidity;
- In close proximity to a potential wet area;
- Locations receiving direct sunlight;
- Places close to heating units or hot air;
- In the vicinity of highly inflammable/volatile chemicals or hazardous matter;

- On sloped surfaces;
- In the vicinity of emergency response facilities such as fire exits and fire extinguishers;
- Places subject to any type of violent impact;
- Dusty places.

### ***Installation Precautions***

- Verify the amperage of the branch circuit outlet before plugging in the power plug. Do not overload the circuit.
- Avoid using an extension cord. If one is required, use an extension cord of type SJT, 16/3 AWG rated min. 120 VAC, 7A.
- Moving this unit requires a minimum clearance (of doors, etc.) of 32" (W) by 77" (H).
- For the operation of this machine, secure a minimum area of 32" (W) by 42"(D).

### ***Regulatory Approvals***

This game has been tested and found to comply with the Federal Communications Commission Rules.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This game has been tested and listed by Underwriters Laboratories, Inc., to ANSI/UL22.



[\[Previous page\]](#)[\[Next page\]](#)[\[Table of Contents\]](#)


---

## 1 . PRECAUTIONS TO BE HEDEED FOR OPERATION



**In order to avoid accidents, check the following before starting the operation:**

**Check if all of the adjusters are in contact with the surface. If they are not, the cabinet can move and cause an accident.**

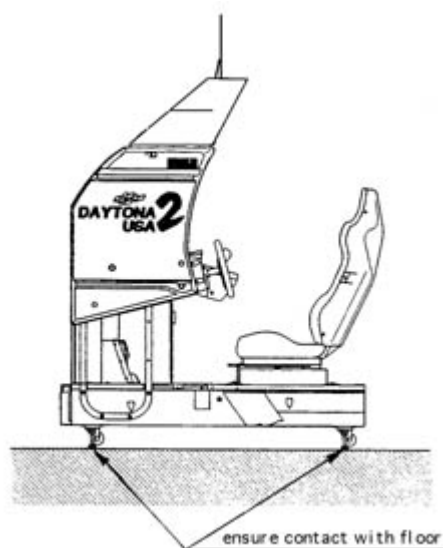

**Check to see if hazard preventive parts are damaged or omitted.**

**Operating the product with the hazard preventive parts as is left in an irregular status will cause accidents.**

**Do not put any heavy item on this product. Placing any heavy item on the product can cause a falling down accident or parts damage.**

**Do not climb on the product. Climbing on the product can cause falling down accidents.**

**To check the top portion of the product, use a step. To avoid electric shock, check to see if door & cover parts are closed.**

**To avoid electric shock, short circuit and or parts damage, do not put the following items on or in the periphery of the product:**

**Flower vases, flower pots, cups, water tanks, cosmetics, and receptacles/containers/vessels containing chemicals and water.**

**In order to prevent accidents, be sure to comply with the following points before and during operation.**

**To avoid injury, be sure to provide sufficient space by considering the potentially crowded situation at the installation location. Insufficient installation space can cause the player to come into contact with or hit the others and result in injury or trouble.**

---

### **PRECAUTIONS TO BE HEEDED DURING OPERATION**



**To avoid injury and trouble, be sure to constantly give careful attention to the behavior and manner of the visitors and players. To avoid injury and accidents, those who fall under the following categories are not allowed to play the game.**

- > Intoxicated persons.**
- > Those who need assistance such as the use of apparatus when walking.**
- > Those who have high blood pressure or a heart condition.**
- > Those who have experienced muscle convulsion or loss of consciousness when exposed to intensive light stimulus due to watching television, playing video games or water surface flickering.**
- > Persons susceptible to motion sickness.**
- > Persons whose actions runs counter to the product's warning displays.**



**To avoid injury from potential falling down accidents, be sure to that only one person is allowed to play at a time.**

**Do not allow players to put any heavy items or beverages on the product. Falling items can cause accidents and spilled beverages can cause electric shock.**

**To avoid electric shock and short circuit, do not allow customers to put hands and fingers or extraneous matter in the openings of the product or small openings in or around the doors.**

**To avoid falling down and injury resulting from falling down, immediately stop the customer's leaning against or climbing on the product, etc.**

**To avoid electric shock and short circuit, do not allow the customers to unplug the power plug without justifiable reason.**



**Instruct the player to hold firmly to the Safety Bar during game. Caution the customers who are most likely to cause injury by playing without holding the Safety Bar, for example.**

**To avoid injury, do not allow persons other than the player access to the mechanism base during game play.**


**Instruct the player not to put baggage, etc. on the mechanism base to avoid damaging such items.**

**Regarding this product, the weight of the player is limited to 330 lbs. To avoid machine damage and injury due to machine damage, playing by those who are as heavy as 330 lbs. or heavier is strictly prohibited.**

**Immediately stop violent acts such as hitting and kicking the product. Such violent acts can cause parts to be damaged or falling down.**

[\[Previous page\]](#)[\[Next page\]](#)[\[Table of Contents\]](#)

## 2. NAME OF PARTS

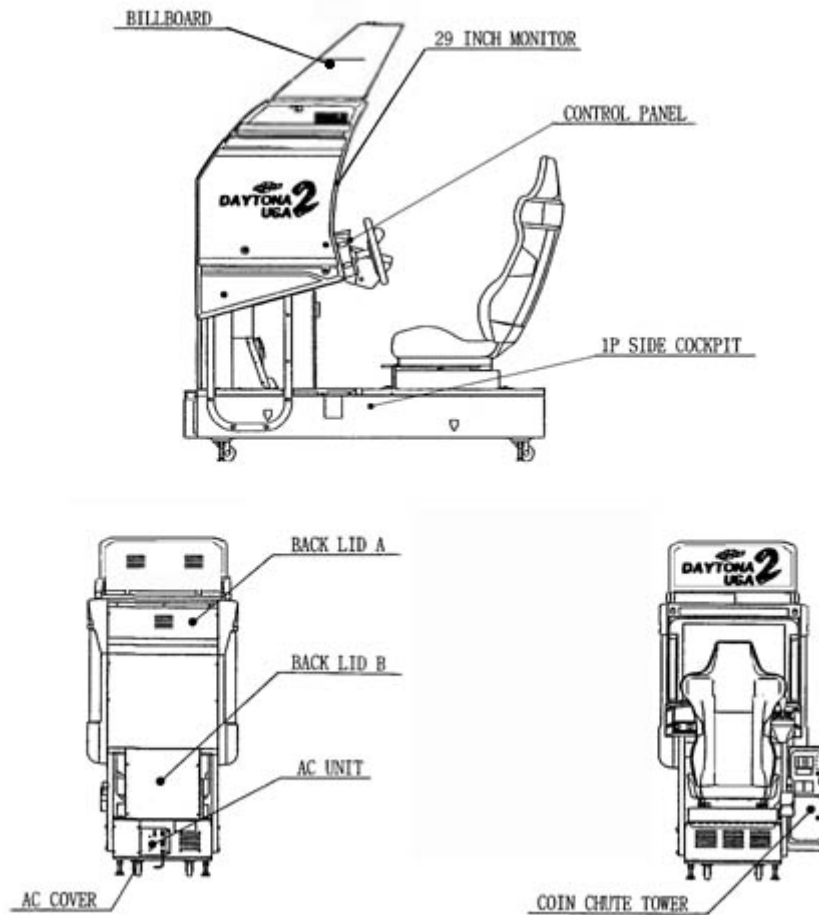


| GAME SPECIFICATIONS | WIDTH ~ LENGTH ~ HEIGHT        | WEIGHT   |
|---------------------|--------------------------------|----------|
|                     | All measurements are in inches |          |
| DURING SHIPPING     |                                | 620 LBS. |
| BILLBOARD           | 56" X 70" X 58"                | 40 LBS.  |
| COCKPIT             | 47" X 36" X 78"                | 540 LBS. |
| COIN CHUTE TOWER    | 15" X 24" X 26"                | 40 LBS   |
|                     |                                |          |
| BILLBOARD           | 42" X 23" X 22"                | 33 LBS.  |
|                     |                                |          |

|                     |                   |          |
|---------------------|-------------------|----------|
| COCKPIT             | 57" X 82" X 57"   | 513 LBS. |
| COIN CHUTE<br>TOWER | 12.5" X 21" X 24" | 33 LBS   |
| WHEN<br>ASSEMBLED   | 52" X 112" X 90"  | 579 LBS. |

[\[Previous page\]](#)[\[Next page\]](#)[\[Table of Contents\]](#)

**Please read entire page as it contains information regarding your warranty.**

 
### 3. ACCESSORIES

|                                                                                                                                                                                                                                                                                                                                |                                                                                                                                                         |                                                                                                                                                               |
|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <p>DESCRIPTION OWNERS MANUAL<br/>Part No. (Qty.) 999-0705<br/>Note<br/>Figures<br/>If Part No. has no description, the Number has not been registered or can not be registered. Such a part may not be obtainable even if the customer desires to purchase it. Therefore, ensure that the part is in safekeeping with you.</p> | <p>KEY MASTER<br/>220-5576 (2)<br/>For opening/closing the doors</p>  | <p>KEY<br/>(2)<br/>For the CASHBOX DOOR</p>                                |
| <p>FUSE 7A 120V<br/>local purchase (2)</p>                                                                                                                                                                                                    | <p>TAMPERPROOF WRENCH<br/>M8 540-0009-01 (1)<br/>TOOL</p>              | <p>ASSY FIBER CABLE<br/>600-6275-0500 (2)<br/>For communications play</p>  |

## !!!Shipment of model 3 Board!!!



**When asking for the replacement or repair of the product's Game Board (MODEL 3 BOARD), be sure to put the Game Board together with the Shield Case in the Carton Box.**

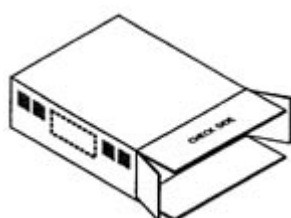

**Carton Box**


**601-8928 (1)**

**Used for transporting**

the Game board.

Refer to the following.

---

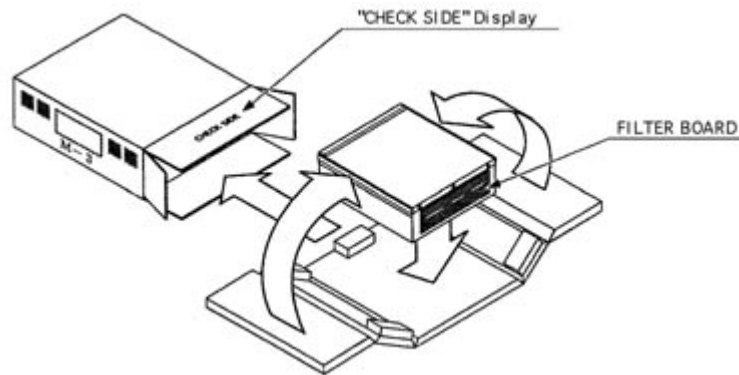

**Wrap the Shield Case with the packaging material and put it in the Carton Box as shown. Putting it upside down or packing otherwise in the manner not shown can damage the Game Board and parts.**

[\[Previous page\]](#)[\[Next page\]](#)[\[Table of Contents\]](#)

---

## 4 . ASSEMBLING AND INSTALLATION



Assembling should be performed as per this manual. Since this is a complex machine, erroneous assembling may cause damage to the machine, or malfunctioning to occur.

When assembling, be sure to perform work by plural persons.

Depending on the assembly work, there are some cases in which performing the work by a single person can cause personal injury or parts damage.



When installing the billboard, it is difficult to carry out work by one person. To perform work properly and safely, be sure work is performed by at least two people.

---

Note that the tools such as a phillips screwdriver and wrench for M16 hexagon bolt w/24 mm width across flats are required for the assembly work.

When carrying out the assembly work, follow the procedure in the following 6-item sequence:


[1. ASSY OF REAR CABINET \(COCKPIT\)](#)

[2. ASSY OF BILLBOARD](#)

[3. SECURING IN PLACE \(ADJUSTER ADJUSTMENT\)](#)

[4. POWER SUPPLY](#)

[5. TURNING POWER ON](#)

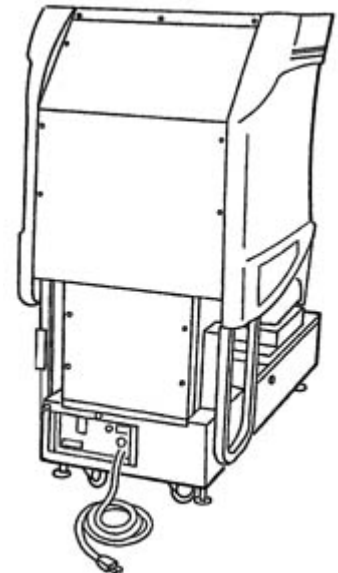

## **6. ASSEMBLING CHECK**

To perform work safely and securely, be sure to prepare a step which is in a secure and stable condition. Not using a step or using an unstable step can cause a violent falling down accident.

[\[Previous page\]](#)[\[Next page\]](#)[\[Table of Contents\]](#)

---

## 5. PRECAUTIONS TO BE HEEDED WHEN MOVING THE MACHINE

---

When moving the machine, be sure to pull out the plug from the power supply. Moving the machine with the plug as is inserted can damage the power cord and cause a fire or electric shock.




When moving the machine on the floor, retract the Adjusters and ensure that Casters make contact with the floor. During transportation, pay careful attention so that Casters do not tread power cords. Damaging the power cords can cause an electric shock and/or short circuit.

When lifting the cabinet, be sure to hold the catch portions or bottom part. Lifting the cabinet by holding other portions can damage parts and installation portions, due to the empty weight of the cabinet, and cause personal injury.

Use care when handling glass made parts. When the glass is damaged, fragments of glass can cause injury.

---

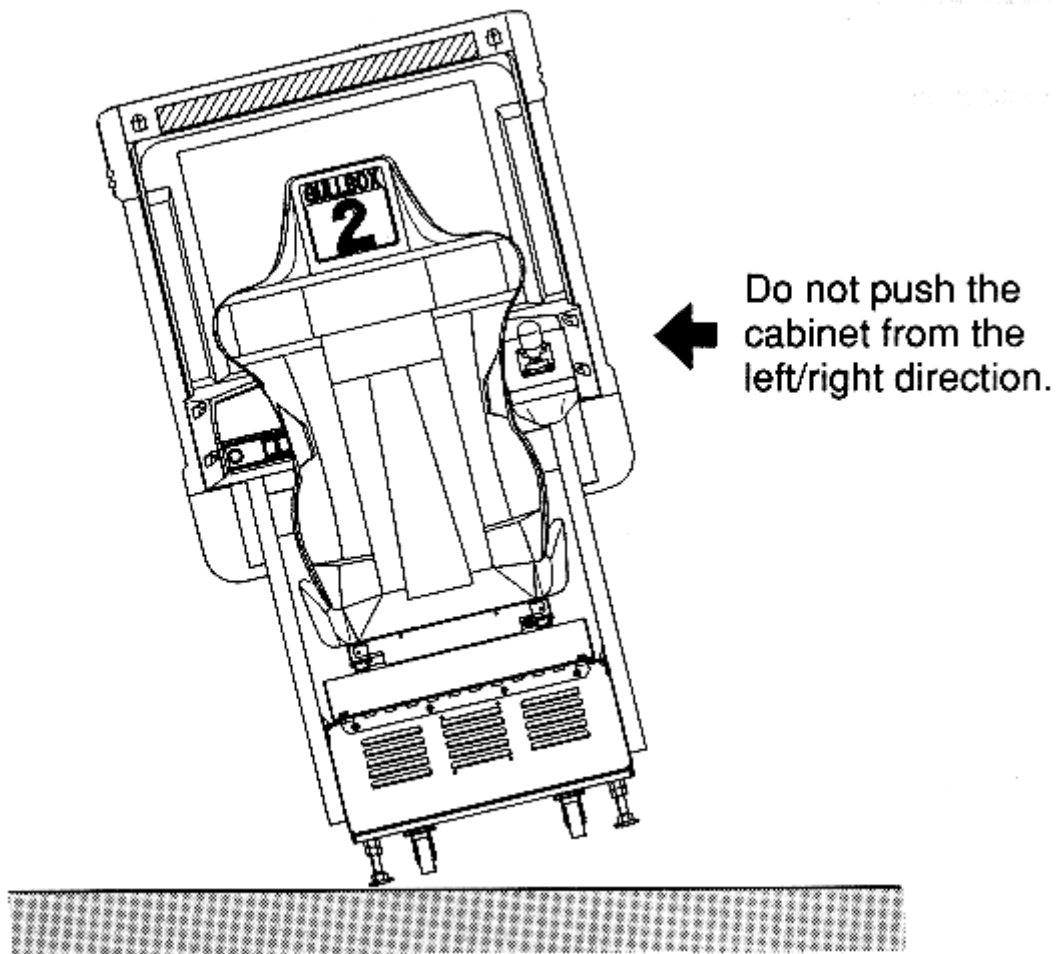


[\[Previous page\]](#)[\[Next page\]](#)[\[Table of Contents\]](#)

---

## 6. CONTENTS OF GAME/HOW TO PLAY

The following explanations apply to the case the product is functioning satisfactorily. Should there be any moves different from the following contents, some sort of faults may have occurred. Immediately look into the cause of the fault and eliminate the cause thereof to ensure satisfactory operation.

During the ADVERTISE MODE, the View Change Button Lamp lights up periodically. When the product is energized, the Billboard's Fluorescent lamp is always lit. The Leader Lamp (below the fluorescent lamp) flashes periodically. During the ADVERTISE MODE, sound is emitted from all of the speakers.

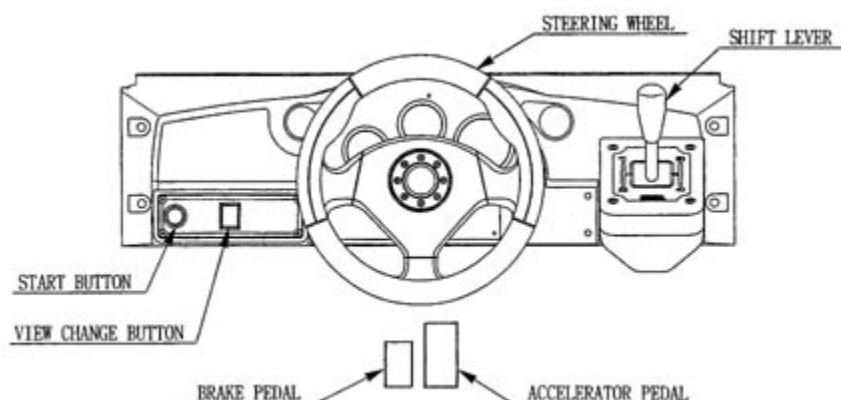

- 1.) Get in the Cockpit. The seat can be adjusted in forward and rearward positions. The lever is located on the lower right (facing the screen) of the seat. Pull this Lever to make adjustments.
- 2.) Insert a coin(s). Number of coins is displayed on the lower left of the screen. Inserting one play worth of coin(s) causes the SELECT screen to be displayed. Up to 9 credits can be counted at one time. Coins inserted after counting 9 credits will neither be counted nor returned. Credits will not be displayed in the SELECT mode and during the game play (credits are displayed only during the ADVETISE MODE).
- 3.) When a coin is inserted to one of the machines linked for communication, the other unit's screen will be in the entry accepting mode, and countdown starts. For Entry, the player is to insert a coin(s) during countdown.
- 4.) Select sequentially in order of COURSE, CAR, and TRANSMISSION. turn the Steering Wheel to choose an decide the selection by stepping on the Accelerator Pedal.



### COURSE SELECT / CAR SELECT / TRANSMISSION SELECT


Display the SELECT mode starts countdown. When the countdown becomes 0, the COURSE and CAR being chosen are determined automatically.

Stepping on the Accel. Pedal again after stepping on it once will have the present SELECT screen, in the middle of the counting down, proceed to the next select screen.

Course selection is decided by majority. In case of a tie, the left-hand side of course on the SELECT screen has priority.

5.) Choosing and deciding on either Automatic or Manual (4 shifts) will result in a race start. At this time, while pressing the Start Button, step on the Accel. Pedal to decide on the selection to play in the PLAYER ONLY mode.

After race start, the View Change button being selected lights up. While participating in the race, if the player becomes the leader, that particular seat's Leader Lamp flashes. The Steering Wheel is subject to the reaction and load depending on the status of the Course, Course Out and Crash.

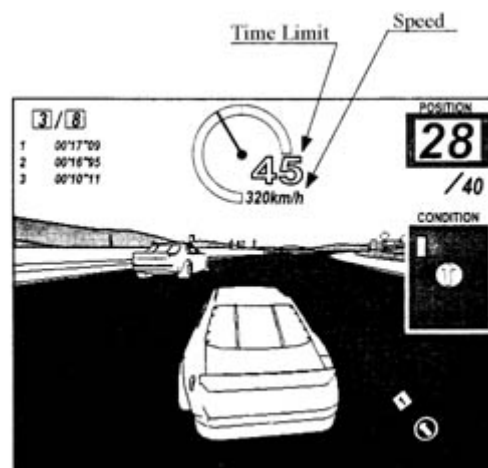

6.) The number of Laps displayed on the upper left of the screen, and lap Time is shown below the upper left. Tachometer and Time Limit (remaining time) as well as Speed are shown on the upper center portions. Position, Condition and Course Map are displayed sequentially in order from the upper right portion of the screen downward. If Manual Transmission is selected, Gear Position will be shown to the right side of Speed.

7.) Simultaneously with race start, the Time Limit decreases. Passing a Course's Check Point allows the game to be continued with the remaining time of the previous section added to the Time Limit up to the next Check Point. Failing to pass the Check Point within the Time Limit results in GAME OVER.

8.) When the race participant's leader finishes the specified number of laps of each course, the game is then over. The game is over also when all of the race participants fail to pass the checkpoint within the Time Limit.

9.) After one game is finished, if credits allowing for play still remain, the SELECT mode appears on the screen.

10.) Excellent players can enter his name. Select name characters by turning the Steering Wheel

clockwise or counterclockwise and decide by stepping on the Accel. Pedal.

[\[Previous page\]](#)[\[Next page\]](#)[\[Table of Contents\]](#)

## 7. EXPLANATION OF TEST AND DATA DISPLAY

By operating the switch unit, periodically perform tests and data check. When installing the machine initially or collecting cash, or when the machine does not function correctly, perform checking in accordance with the explanations given in this section. The following shows tests and modes that should be utilized as applicable.

### CAUTIONS TO BE HEEDED WHEN USING TEST MODE:

**In the case where multiple units are linked for communication play, exiting from the test mode causes the unit to perform the network check automatically. During this time, all of the linked units will not allow the game to be played in normal status. Therefore, be sure not to enter the test mode if any one of the units is in play. on the other hand, if even one unit is in the test mode, make sure that other machines are not in play. In this product, the power-on check is performed when the Test Mode is exited, as when turning power on. Do not touch the Steering Wheel until it stops automatically. touching before it stops may not allow for satisfactory reaction of Steering Wheel during game play.**

| ITEMS                   | DESCRIPTION                                                                                                                                                                                                                                                                                                                                    | SECTIONS                                                    |
|-------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-------------------------------------------------------------|
| INSTALLATION OF MACHINE | When the machine is installed, perform the following:<br><br>1.> Check to see that each setting is as per standard setting made at time of shipment.<br><br>2.> In the INPUT TEST mode, check each SW and VR.<br><br>3.> In the OUTPUT TEST mode, check each of the lamps.<br><br>4.> In the MEMORY TEST mode, check the IC's on the IC Board. | 7 - 9, 7 - 10<br><br>7 - 5<br><br>7 - 6<br><br>7 - 3, 7 - 4 |
| MEMORY                  | Choose MEMORY TEST in the MENU MODE to allow the MEMORY TEST to be performed. In this test, PROGRAM RAM's, ROM's, and IC's on the IC Board are checked.                                                                                                                                                                                        | 7 - 3, 7 - 4                                                |
|                         | Periodically perform the following:<br><br>1.> MEMORY TEST.                                                                                                                                                                                                                                                                                    | 7 - 3, 7 - 4<br><br>7 - 9, 7 - 10                           |

|                       |                                                                                                   |        |
|-----------------------|---------------------------------------------------------------------------------------------------|--------|
| PERIODIC<br>SERVICING | 2.> Ascertain each setting.                                                                       | 7 - 5  |
|                       | 3.> In the INPUT TEST mode, test the control device.                                              | 7 - 6  |
|                       | 4.> In the OUTPUT TEST mode, check each of the lamps.                                             |        |
| CONTROL<br>SYSTEM     | 1.> In the INPUT TEST mode, check each SW and VR.                                                 | 7 - 5  |
|                       | 2.> Adjust or replace VR and SW.                                                                  | 8      |
|                       | 3.> If the problem can not be solved yet, check the CONTROL's moves.                              | 8      |
| PROJECTOR             | In the PROJECTOR ADJUSTMENT mode, check to see if the PROJECTOR adjustment is appropriately made. | 7 - 8  |
| IC BOARD              | 1.> MEMORY TEST.                                                                                  |        |
|                       | 2.> In the SOUND TEST mode, check the sound related ROM's.                                        | 7 - 7  |
| DATA CHECK            | Check such data as game play time and histogram to adjust the difficulty level, etc.              | 7 - 12 |

[\[Previous page\]](#)[\[Next page\]](#)[\[Table of Contents\]](#)

## 7 - 1 SWITCH UNIT AND COIN METER



**Never touch places other than those specified. Touching places not specified can cause electric shock and short circuit.**

**Adjust to the optimum sound volume by considering the environmental requirements of the installation location.**

**If the COIN METER and the game board are electrically disconnected, game play is not possible.**

Open COIN CHUTE DOOR, and the switch unit shown appears. The function of each switch is as follows:

### SWITCH UNIT

#### (1) SOUND VOLUME


Controls the speaker volume  
of the right/left speakers.

#### (2) TEST BUTTON (TEST SW)

For the handling of the TEST  
BUTTON,  
refer to the section on test mode.

#### (3) SERVICE BUTTON (SERVICE SW)


Gives credits without registering on the coin  
meter.

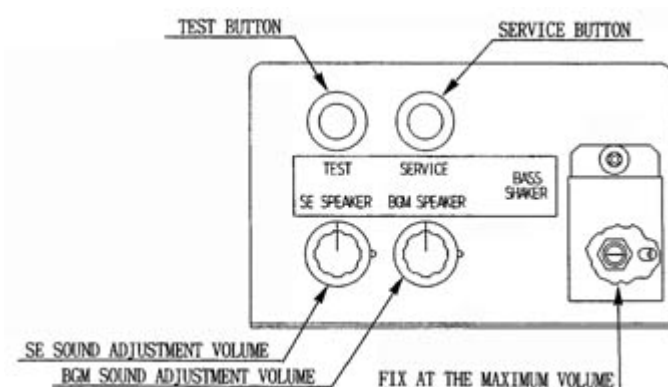

**COIN METER**

Open Cash Box Door and the Coin Meter will appear. The Coin Meter counts the number of coins inserted

[\[Previous page\]](#)[\[Next page\]](#)[\[Table of Contents\]](#)

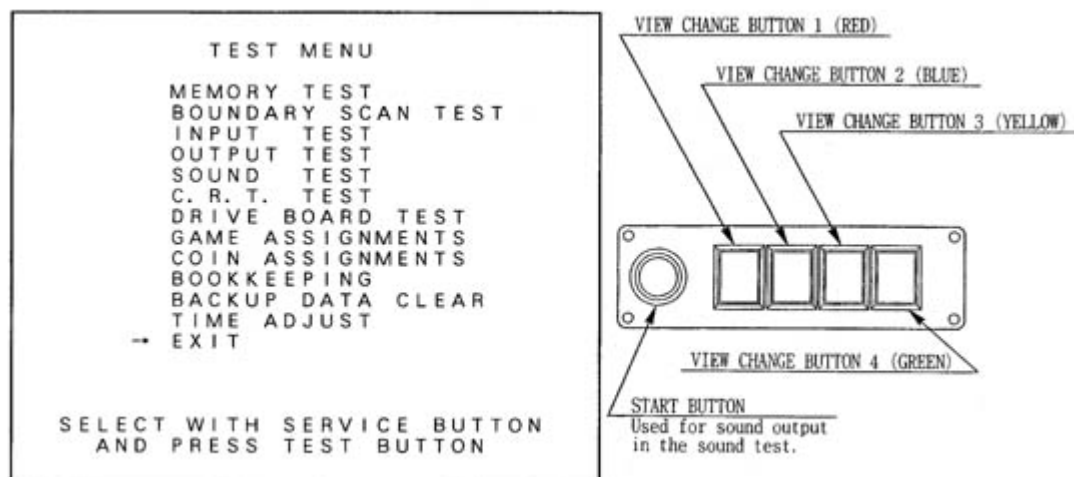


## 7 - 2 TEST MODE

This mainly checks if the operation of the game BD is accurate, and allows for COIN ASSIGNMENTS/GAME ASSIGNMENTS setting and Projector adjustments.

Push the TEST BUTTON to cause the following TEST MENU to appear:

By pushing the SERVICE BUTTON, bring the ">" mark to the desired item and press the TEST BUTTON. This will select the item to be tested.

After the test is complete, move the ">" mark to "EXIT" and press the TEST BUTTON to return to game mode.

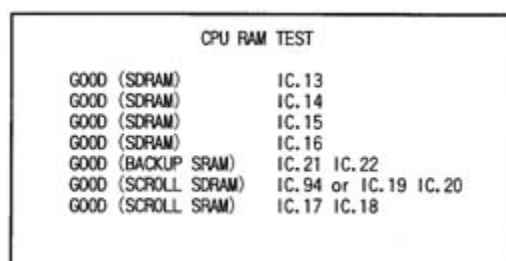

## 7 - 3 MEMORY TEST

The MEMORY TEST mode is for checking the on-BD memory IC functioning.

"GOOD" is displayed for normal ICs and "BAD" is displayed for abnormal ICs.

When the test is completed, if the display is as shown left, it is satisfactory.

After finishing the test, pressing the TEST BUTTON allows the MENU MODE to return on the screen.

IF THE TEST TIME FOR THE MEMORY TEST EXCEEDS 5 MINUTES THE IC BOARD MAY BE DEFECTIVE.

| VIDEO BOARD ROM TEST |          |        |
|----------------------|----------|--------|
| GOOD                 | (VR0M01) | IC. 26 |
| GOOD                 | (VR0M00) | IC. 27 |
| GOOD                 | (VR0M03) | IC. 28 |
| GOOD                 | (VR0M02) | IC. 29 |
| GOOD                 | (VR0M05) | IC. 30 |
| GOOD                 | (VR0M04) | IC. 31 |
| GOOD                 | (VR0M07) | IC. 32 |
| GOOD                 | (VR0M06) | IC. 33 |
| GOOD                 | (VR0M11) | IC. 34 |
| GOOD                 | (VR0M10) | IC. 35 |
| GOOD                 | (VR0M13) | IC. 36 |
| GOOD                 | (VR0M12) | IC. 37 |

## 7 - 5 INPUT TEST

Press the TEST BUTTON to have the menu mode return on the screen.

Using the Decision (SET) button instead of TEST BUTTON will not allow for exiting from the Input Test Mode. Press the SET BUTTON and SELECT BUTTON (UP).

By opening the Coin Chute Door, insert a coin from the Coin Inlet to check the Coin Chute Tower.

When INPUT TEST is selected, the MONITOR will show the following, allowing you to watch the status of each switch and the value of each V.R. of the cabinet to be viewed

On the screen, periodically check the status of each switch & V.R.

By pressing each switch, if the display on the right-hand side of the name of each switch changes to ON from OFF, the SW and the wiring connections are satisfactory.

PITCH refers to the Switch for the left/right Foot Pedal's UP/DOWN. Normally, this is ON and stepping on the Pedal's front side causes the Switch to become off.

## **7 - 6 OUTPUT TEST**

Choose OUTPUT TEST to cause the following lower screen to appear. In this test,

check the status of each lamp. Pressing the TEST BUTTON causes "ON" to be displayed and the corresponding lamp lights up. Pressing the TEST BUTTON again causes "OFF" to be displayed and the lamp goes off. The Foot Controller is locked with the Slide Lock in the ON status, and Unlocked to become free with the Slide Lock in the OFF status.

Press the test Button to return to the MENU MODE.

## **7 - 7 SOUND TEST**

This enables sound used in the game to be checked. Sound related memory and each speaker are checked.

Press the SERVICE BUTTON to bring the arrow to the desired sound item to be tested. SE refers to sound effects and BGM refers to background music.


Each time the SERVICE BUTTON is pressed, the numeral displayed on the screen counts up and sound is admitted.

Bring the ">" to EXIT and press the TEST BUTTON to return to the MENU MODE.




## 7 - 8 C.R.T. TEST

Select C.R.T. TEST to cause the MONITOR to display the screen shown left, allowing MONITOR adjustment status to be checked.

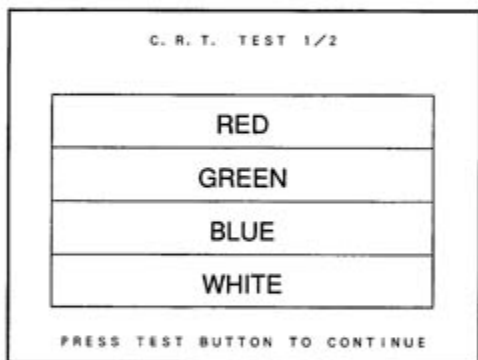

Periodically check the MONITOR adjustment status on this screen.

The screen (1/2) enables color adjustment check to be performed. The color bar of each of the 4 colors, i.e., red, green, blue, and white, is the darkest at the extreme left and becomes brighter towards the extreme right.

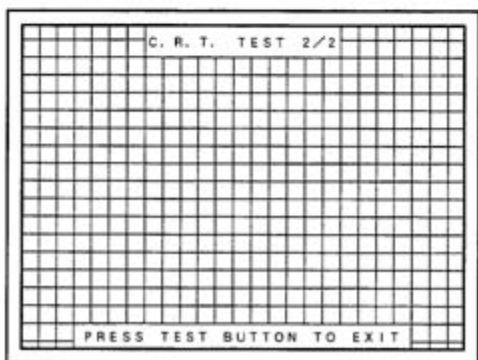

Press the TEST BUTTON to shift to the next screen (2/2).

The screen (2/2) allows screen size and distortion to be tested.

Check if the CROSSHATCH FRAME LINE goes out of the screen and if the crosshatch lines are distorted.

Press the TEST BUTTON to return to the MENU mode. (FIG. 6.2)



## 7 - 9 DRIVE BD TEST

Select DRIVE BOARD TEST to have the following screen displayed. This test allows the movement of motor, etc., to be checked and the Steering Wheel Volume setting to be performed.

Press the Service Button to select each item and press the Test Button to cause the selected item's movements to be performed.

**STOP MOTOR:** Stops the load subjected to the Steering wheel and the movements of the Motor for reaction. As such, initially selecting this item and pressing the Test Button make no difference

superficially. Select ROLL RIGHT or ROLL LEFT below this item, and in the status that the motor is functioning in a certain direction, select the item and press the Test Button to stop movements in that particular direction.

**ROLL RIGHT:** The motor moves so as to turn the Steering Wheel clockwise.

**ROLL LEFT:** The motor moves so as to turn the Steering Wheel counterclockwise.

## SETTING THE VOLUME

Performs the setting of VOLUME which detects the movements of Steering Wheel as per the figure shown below. When the Steering Wheel Volume is adjusted or replaced, perform Volume Setting in the following procedure.

## SETTING THE STEERING WHEEL VOLUME

1.) Press the Service button to bring the arrow to SET CENTER OF STEER.



- 2.) Secure the Steering Wheel to the Centering position.
- 3.) Press the Test Button. Store the Volume Value obtained at this time as Steering Wheel's centering value.

[\[Previous page\]](#)[\[Next page\]](#)[\[Table of Contents\]](#)


## 7 - 9 GAME ASSIGNMENTS

Selecting the GAME ASSIGNMENTS in the MENU mode causes the present game settings to be displayed and also the game settings changes (game difficulty, etc.) can be made. Each item displays the following content.



IMPORTANT!

on EXIT.

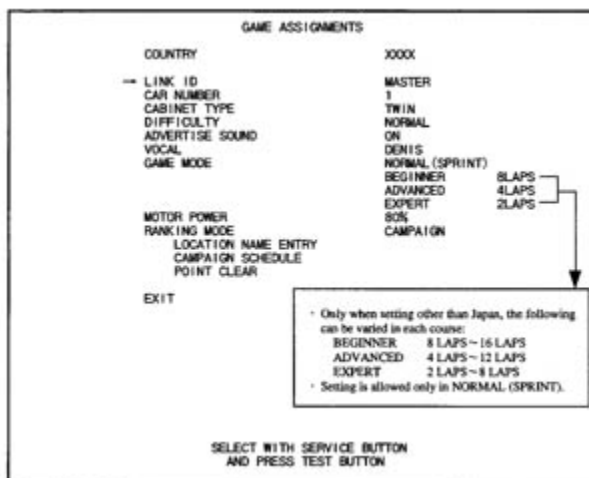

### SETTING CHANGE PROCEDURE

- (1) Press the SERVICE BUTTON to move the ">" to the desired item.
- (2) Choose the desired setting change item by using the TEST BUTTON.
- (3) To return to the MENU mode, move the arrow to EXIT and press the TEST

BUTTON.

The Following FIGURES/TABLES show the factory recommended settings.

**COUNTRY:**

The country setting is predetermined and can not be selected.

**LINK ID:**

For communication play, set one seat to 'MASTER' and the rest to 'SLAVE'. The game setting and coin setting, etc., of the 'MASTER' seat apply to the 'SLAVE' seats also. For non-interactive (communication) play, set to 'SINGLE'.

**CAR NUMBER:**

For interactive play between 2 or more machines (cabinets), the cabinets (starting from the left, facing the monitor screen) are numbered in sequential order of No.1, No.2, No. 3, No. 4.....If the same number is used for 2 or more cabinets, or cabinets are numbered in an incorrect sequential order, on-screen error display will appear and in this case, no activation takes place.

**CABINET TYPE:**

Setting of Cabinet. Set to TWIN, or DLX.

**DIFFICULTY:**

Sets the difficulty level in 4 categories, i.e., EASY, NORMAL, HARD, HARDEST.

**ADVERTISE SOUND:**

Setting of sound during advertise. ON (sound to be emitted), OFF (sound not to be emitted).

**VOCAL:**

Sets the singer of the music being played during game.

**GAME MODE:**

Sets the number of laps. The lap frequency increases in the sequential order of NORMAL (SPRINT), GRAND PRIX, 100 MILE, 200 MILE, 300 MILE, 400 MILE, and 500 MILE. XXX mile is used for a special event and in this case, there is no time limit all the way up to the Goal.

**MOTOR POWER:**

Sets the Steering Wheel (reaction motor) strength. When the strength is set to weak, the cockpit swaying movement will be less.

**RANKING MODE:**

Sets the ranking mode which has two types, i.e., NORMAL and CAMPAIGN. Setting to CAMPAIGN allows points to be awarded according to the player's results and activities per race, with the name registered at the time of name entry as well as his Birthday registered in the Birthday Input Mode as the password to recognize the player's identity. From the next play onward, extra points will be awarded when the name and birthday are inputted after game over.

**LOCATION NAME ENTRY:**

Setting the ranking mode to CAMPAIGN allows the Location Name set in this item to be displayed during advertise. The name can be inputted in 2 lines by using a maximum of 32 characters. Move the arrow with the Service Button and select the setting with the Test Button.

**CAMPAIGN SCHEDULE:**

Sets the start and end dates of campaign. The period set in this item and the Location Name inputted in the LOCATION NAME ENTRY are displayed in the Advertise mode. Before setting in this mode, ensure that the date and time are correct by TIME ADJUST in the Test Mode. Move arrow with the service button and select the setting with the Test Button.

**POINT CLEAR:**

Clears (resets) all of the player names and points shown in the RANKING MODE CAMPAIGN.

[\[Previous page\]](#)[\[Next page\]](#)[\[Table of Contents\]](#)

The "COIN ASSIGNMENTS" mode permits you to set the start number of credits, as well as the basic numbers of coins and credits. This mode expresses "how many coins correspond to how many credits."




IMPORTANT!

Setting changes cannot be stored unless the TEST BUTTON is pressed while the arrow is on EXIT.

## 7 - 10 COIN ASSIGNMENTS


### SETTING CHANGE PROCEDURE:

- (1) Press the SERVICE BUTTON to move the arrow to the desired item.
- (2) Choose the desired setting change item by using the TEST BUTTON.
- (3) To return to the MENU mode, move the arrow to EXIT and press the TEST BUTTON.

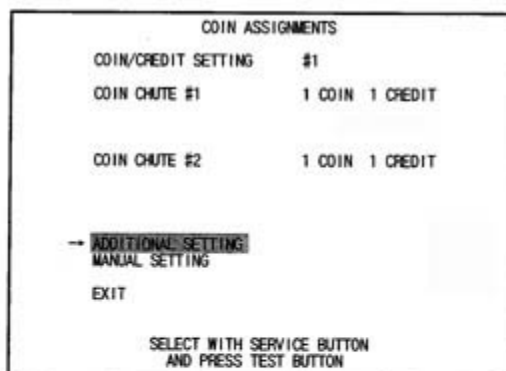

### COIN CHUTE TYPE:

Sets the combination of the number of COIN CHUTES and the number of players as applicable. In the case that the COIN CHUTE is changed, be sure the setting is made in a manner meeting the replaced coin chute.

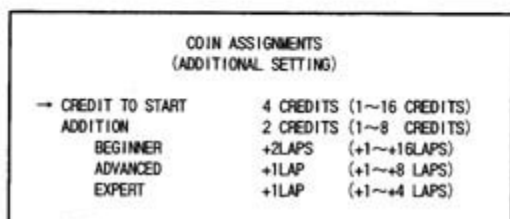

### COMMON:

Coins are accepted in common for both players.

**INDIVIDUAL:**

Each player uses a coin chute which accepts coins independently.

**CREDIT TO START:**

Number of credits required for starting game (1~5 credits are selected.)

**CREDIT TO CONTINUE:**

Number of credits required for continuing game (1~5 credits are selected.)

**COIN/CREDIT SETTING:**

Sets the CREDITS increase increment per coin insertion. There are 27 settings from #1 to #27, expressed in XX CREDIT as against XX COINS inserted. (TABLE 7.10a, 7.10b) #27 refers to FREE PLAY.

When the COIN CHUTE TYPE is set to INDIVIDUAL, there are some setting numbers not displayed as indicated in TABLE 7.10b.

**MANUAL SETTING:**

This allows credit increase setting as against coin insertion to be further set in the manner finer than COIN/CREDIT SETTING (refer to TABLE 7.10c).

[\[Previous page\]](#)[\[Next page\]](#)[\[Table of Contents\]](#)

## 7 - 12 BOOKKEEPING

Choosing BOOKKEEPING in the MENU mode displays the data of operating status up to the present are shown on 2 pages. Press the TEST BUTTON to proceed to PAGE 2/2.

| BOOKKEEPING PAGE 1/2          |             |
|-------------------------------|-------------|
| COIN CHUTE #1                 | 0           |
| COIN CHUTE #2                 | 0           |
| TOTAL COINS                   | 0           |
| COIN CREDITS                  | 0           |
| SERVICE CREDITS               | 0           |
| TOTAL CREDITS                 | 0           |
| NUMBER OF GAMES               | 0           |
| TOTAL TIME                    | 00 00 00 00 |
| PLAY TIME                     | 00 00 00 00 |
| AVERAGE TIME                  | 00000000    |
| LONGEST TIME                  | 00000000    |
| SHORTEST TIME                 | 00000000    |
| PRESS TEST BUTTON TO CONTINUE |             |

COIN CHUTE#\*:

Number of coins put in each Coin Chute.

TOTAL COINS:

Total number of activations of Coin Chutes.

| BOOKKEEPING 2/2           |          |          |        |
|---------------------------|----------|----------|--------|
| — TIME HISTOGRAM —        |          |          |        |
| COURSE                    | BEGINNER | ADVANCED | EXPERT |
| ~2M29S                    | 0        | 0        | 0      |
| 2M30S ~2M44S              | 0        | 0        | 0      |
| 2M45S ~2M59S              | 0        | 0        | 0      |
| 3M00S ~3M14S              | 0        | 0        | 0      |
| 3M15S ~3M29S              | 0        | 0        | 0      |
| 3M30S ~3M44S              | 0        | 0        | 0      |
| 3M45S ~3M59S              | 0        | 0        | 0      |
| 4M00S ~4M14S              | 0        | 0        | 0      |
| 4M15S ~4M29S              | 0        | 0        | 0      |
| 4M30S ~                   | 0        | 0        | 0      |
| PRESS TEST BUTTON TO EXIT |          |          |        |

COIN CREDITS:

Number of credits registered by inserting coins.

SERVICE CREDITS:

Credits registered by the SERVICE BUTTON.

TOTAL CREDITS:

Total number of credits (COIN CREDITS+SERVICE CREDITS).

TOTAL TIME:

The total energized time.

On page (2/2), each play frequency is displayed. When setting difficulty levels, the frequency can be referred to as a standard.

When in the PAGE 2/2 mode, press the TEST BUTTON to return to the MENU mode.

## 7 - 13 BACKUP DATA CLEAR




Clears the contents of BOOKKEEPING and high score player ranking entry.

When clearing, bring the arrow to "YES" and when not clearing bring the arrow to "NO", by using the SERVICE BUTTON, and press the TEST BUTTON.

When data has been cleared, "COMPLETED" will be displayed. Bring the arrow to "NO" and press the TEST BUTTON to cause the MENU MODE to return to the screen.

Note that that contents of the GAME SETTING, COIN SETTING, and VOLUME SETTING are not affected by BACKUP DATA CLEAR operation.

## 7 - 14 TIME ADJUST

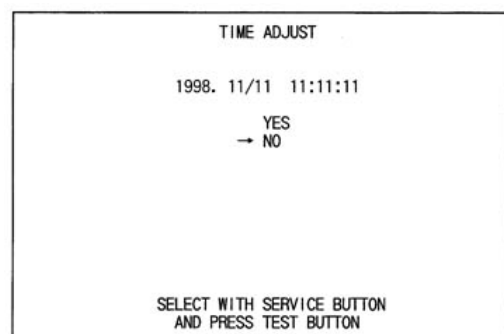

This test mode allows the date (year/month/day) to be set. when turning the power on, if the clock has incorrect data, or if the voltage from the lithium battery is insufficient, movements will stop in the pre-advertise on-screen start up status, and in this case, appropriate clock input or battery replacement is required. Although pressing the Start Button allows you to proceed, if the unit being tested is set to MASTER or SINGLE, the RANKING MODE CAMPAIGN will compulsorily be changed to RANKING MODE NORMAL. Perform TIME ADJSUT in the following procedure: Note that SEGA will take

care of battery replacement. Please contact where you purchased your game from.

### SETTING CHANGE PROCEDURE

- 1.) Bring the arrow to the date with the service button.
- 2.) Select the item to be adjsutd by using the Service Button (the item selected blinks).
- 3.) Press the Test Button to increase the number and select.

[\[Previous page\]](#)[\[Next page\]](#)[\[Table of Contents\]](#)

---

## 8 . HANDLE MECHA



**In order to prevent an electric shock and short circuit, be sure to turn power off before performing work by touching the interior parts of the product.**

**Be careful so as not to damage wirings. Damaged wiring can cause an electric shock or short circuit accident.**

**This work should be performed by the Location's Serviceman. Performing work by non-technical personnel can cause shock hazard.**

**Don not touch places other than those specified. Touching places not specified can cause an electric shock accident.**


---

In the test mode, if the handle V.R. value movements are irregular, adjust or replace the V.R. in the following procedure.

### 8 - 1 REMOVING THE CONTROL PANEL

(1) Turn the power switch off.

(2) Remove a total of Tamperproof Screws from both sides of the Control Panel's front part.

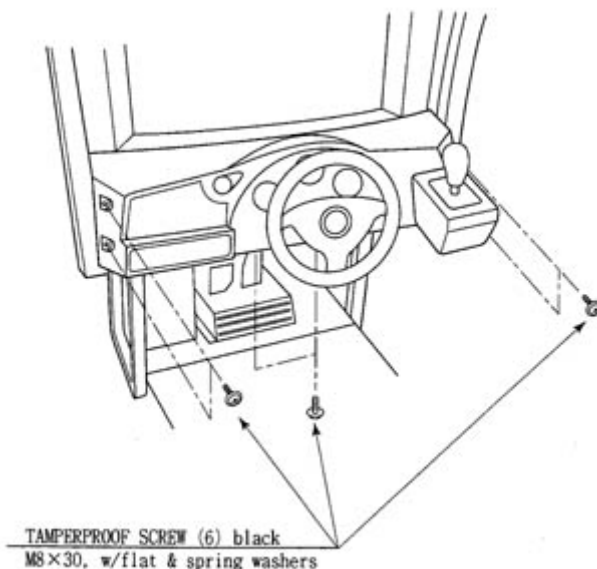

(3) Remove the 2 Tamperproof Screws from the underside of the Control Panel.

(4) Wiring Connectors are connected inside the Control Panel. Carefully draw the Control Panel in a manner so as not to damage the wiring.

(5) Disconnect the wiring connector.

---

## 8 - 2 REPLACING AND ADJUSTING THE HANDLE'S V.R.

### REPLACING THE VOLUME

(1) Turn Power off.

(2) Disconnect the Connector.

(3) Take out the 2 screws which secure the Volume Bracket and remove the Volume bracket.

(4) Take out the 2 screws to remove the Volume Gear and replace Volume.


(5) After replacing the Volume, perform Volume setting in the Volume Setting mode.

### ADJUSTING THE VOLMUE

(1) In the test Mode, have the Volume value indicating screen displayed.

(2) Loosen the 2 screws which secure the Volume bracket to disengage the gear mesh.

(3) With the Steering wheel in the centering position, cause gears to be engaged in a manner so that the Volume Shaft is in the status shown in the figure below.

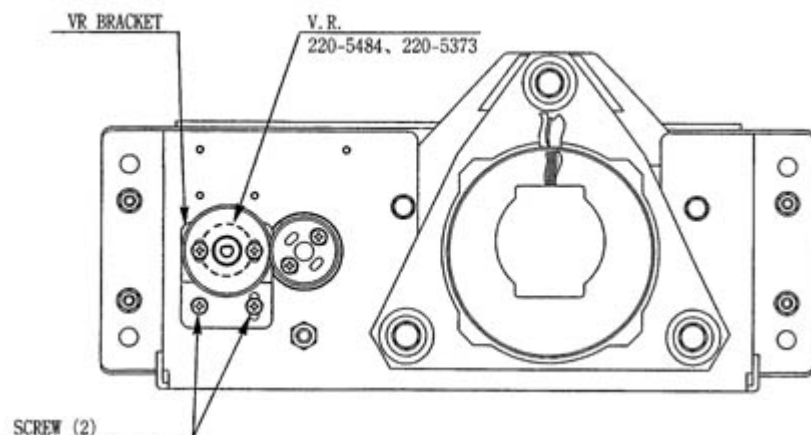

- (4) Fasten the screws which secure the Volume Bracket.
  - (5) Perform Volume setting as per the Volume Setting Mode.
- 

## 8 - 3 GREASING




**In order to prevent electric shock and short circuit, be sure to turn off power before performing work by touching the interior parts of the product.**

**Be sure to use designated grease. Using undesigned grease can cause parts damage. Do not apply greasing to places other than those specified. Greasing to undesigned places can cause malfunctioning and the qualitative deterioration of parts.**

---

Once in 3 months, apply greasing to Volume Gear Mesh Portion. For spray greasing, use

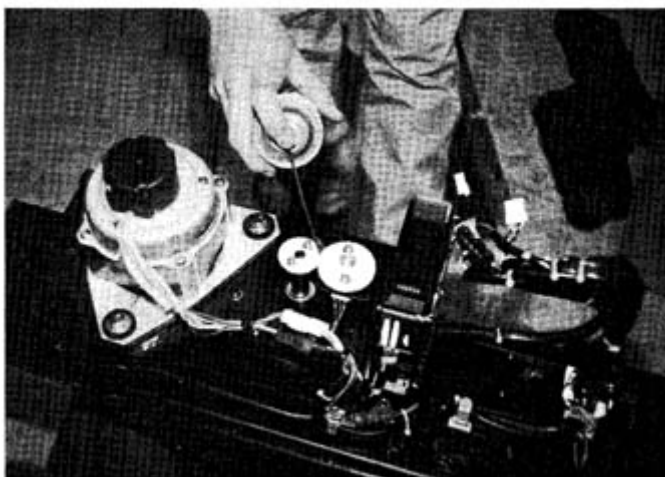

GREASE MATE (P.No. 090-0066).

---

## 9. SHIFT LEVER


**CAUTION!**

**In order to prevent an electric shock and short circuit accident, be sure to turn power off before performing work by touching the interior parts.**

**Be careful so as not to damage wirings. Damaged wirings can cause an electric shock or short circuit accident. Do not touch places other than those specified. Touching places not specified can cause an electric shock or short circuit accident.**

If the Shift Lever operation is not satisfactory, remove the Shift Lever in the following procedure and replace the micro switch.

### **9 - 1 REMOVING THE SHIFT LEVER**

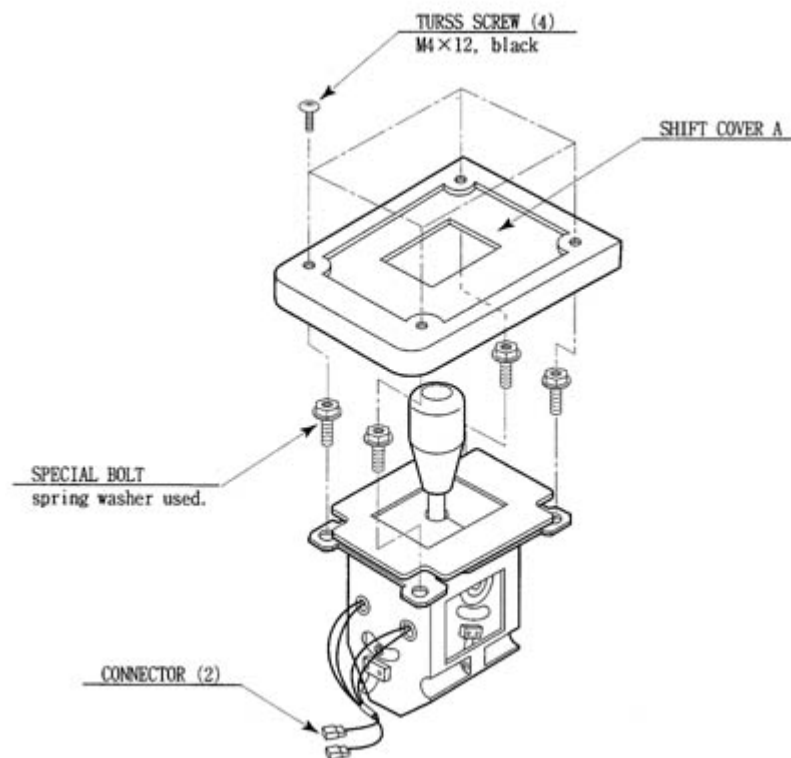

(1) Turn Power off.

(2) Take off the 4 screws and remove SHIFT COVER A.


(3) Take out the 4 SPECIAL BOLTS and pull the SHIFT LEVER UNIT upward by paying careful attention so as not to cause damage to the wiring.

(4) Disconnect the connector to allow the unit to be removed

## 9 - 2 SWITCH REPLACEMENT

Each Micro switch is secured with 2 screws. Remove the 2 screws and replace the Micro switch.

After replacing the Switch, check to see if the switch is inputted as per Shift Lever operation in the Test Mode.

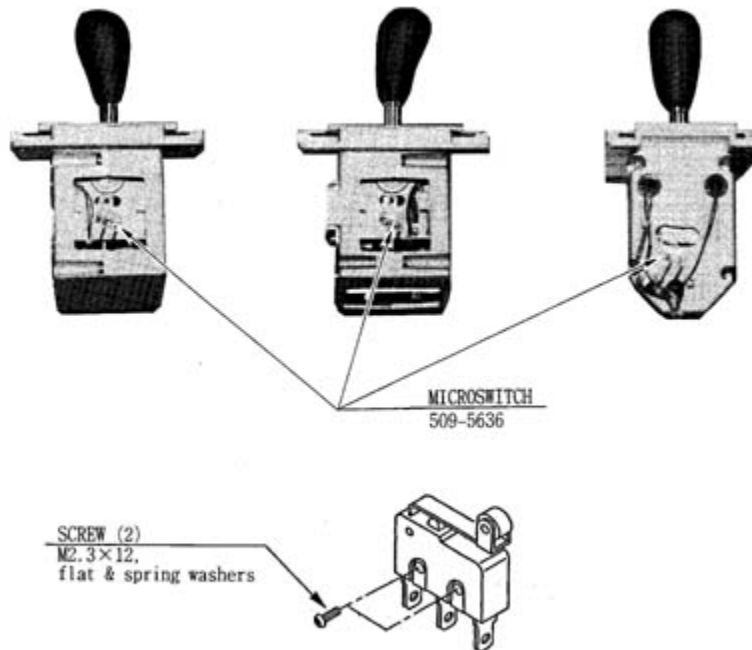

After replacing the Switch, check to see if the switch is inputted as per Shift Lever operation in the Test Mode.

[\[Previous page\]](#)[\[Next page\]](#)[\[Table of Contents\]](#)

---

## 10. MAINTENANCE OF MECHANISM UNIT

### 10 - 1 ADJUSTMENT AND REPLACEMENT OF VOLUME



**Be careful so as not to damage wirings. Damaged wiring can cause an electric shock or short circuit accident.**

**Do not touch places other than those specified. touching places other than thos specified can cause electric shock or short circuit accident.**

**When performing work, be sure to use plural workers. Working by a single worker alone can cause accidents and parts damage.**

**This work should be performed by the Location's Maintenance man or Serviceman. Performing work by non-technical personnel can cause shock hazard.**

---

 
Enter test mode to check the Volume value. Work is performed inside an energized cabinet. Use care so as not to touch undesignted places. Failure to observe this can cause electric shock and short circuit hazards.



(1) In the Test Mode, have the volume value displayed on the screen.

(2) Move the seat to the foremost position and remove the 4 bolts which secure the seat.

(3) Another person is to incline and hold the seat so that the Volume can be checked.



#### ADJUSTING THE VOLUME

(1) Loosen the 2 screws which secure the Volume Bracket, and move the Bracket.

(2) Move the Volume Bracket to disengage gear mesh.

(3) With the front part of Cockpit inclined up to the top position, adjust gear mesh to ensure the volume value display is within the range of 80+/-10H.

(4) Fasten the 2 screws which secure the Bracket.

(5) In the Cockpit Reaction Test Mode, check the volume value.

(8.) Remove the gear from the Volume Shaft and replace the Volume.

## REPLACING THE VOLUME

- (1) Turn power off.
  - (2) Disconnect the connector.
  - (3) Take out the 2 screws which secure the Volume Bracket, and remove the Volume Bracket.
  - (4) Remove the Volume Gear and Volume Bracket to replace the Volume.
  - (5) After replacing the Volume, adjust the volume value by using the above procedure.
- 

## 10 - 2 GREASING

 


**In order to prevent an electrical shock and short circuit, be sure to turn power off before performing work by touching the interior portions of the product. When performing work, be sure to use plural workers. Working by a single worker alone can cause accidents and parts damage.**

**Be sure to use the designated grease. Using undesignated grease can cause parts damage. Do not apply greasing to places other than those specified. greasing to undesignated portions can cause malfunctioning and the qualitative deterioration of parts.**

---

Once every 3 months, apply greasing to the following places. For spray greasing, use GREASE MATE (PART No. 090-0066).



Take out the 8 screws, remove the Mecha Cover, and apply greasing.

---

#### GREASING TO THE SPRING PORTION UNDERNEATH THE SEAT

Once every 3 months, apply greasing to the 2 Spring and Spring installation portions underneath the seat. Remove the 4 bolts which secure the seat, and for safety, one person is to incline the seat and another person is to apply greasing.



---

#### 10 - 3 REPLACING THE SAFETY RUBBER



**The Safety Rubber is an important, hazard-prevention part. Before commencing daily operation, be sure to check for damage and omission. Operating with the Safety Rubber as is damaged or omitted can cause the**

**customer's fingers to be caught.**

---

#### INSTALLATION OF RUBBER MIDDLE SIDE

To install RUBER MIDDLE SIDE to the side oppisite the Cockpit, turn over the RUBBER and use HOLDER LEFT S.




[\[Previous page\]](#)[\[Next page\]](#)[\[Table of Contents\]](#)

---

## 11 . COIN SELECTOR

### HANDLING THE COIN JAM

If the coin is not rejected when the REJECT BUTTON is pressed, open the coin chute door and open the selector gate. After removing the jammed coin, put a normal coin in and check to see that the selector correctly functions.

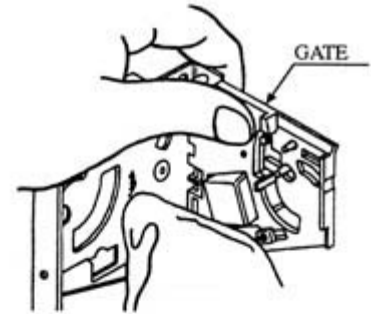


The coin selector should be cleaned once every 3 months. When cleaning, follow the procedure below:

Turn the power for the machine OFF.

Open the coin chute door.

Open the gate and dust off by using a soft brush (made of wool, etc.).

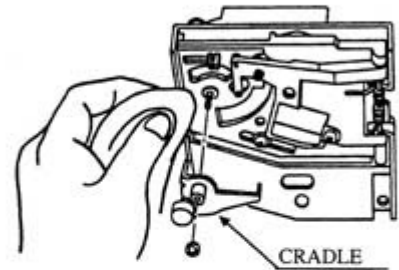


Remove and clean smears by using a soft cloth dipped in water or diluted chemical detergent and then squeezed dry.

Remove the CRADLE.

When removing the retaining ring(E-ring), be very careful so as not to bend the shaft.

Remove stain from the shaft and pillow portions by wiping off with a soft cloth, etc.

After wiping as per #5 above, further apply a dry cloth, etc. to cause the coin selector to dry completely.

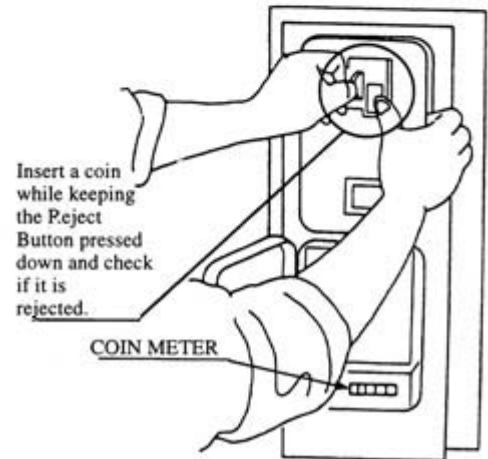

---

Once a month, when performing the COIN SW TEST, simultaneously check the following:

Does the Coin Meter count satisfactorily?

Does the coin drop into the Cash box correctly?

Is the coin rejected when inserted while keeping the REJECT BUTTON is pressed down?

### **CLEANING THE COIN SELECTOR**

Never apply machine oil, etc. to the coin selector

After cleaning the Coin Selecting, Insert a regular coin in the normal working status and ensure that the Selector correctly functions.

[\[Previous page\]](#)[\[Next page\]](#)[\[Table of Contents\]](#)

## 12 . MONITOR




When performing such work as installing and removing the monitor, inserting and disconnecting the external connectors to and from monitor interior and the monitor, be sure to disconnect the power connector (plug) before starting work. Proceeding the work without following this instruction can cause electric shock or malfunctioning.

Using the monitor by converting it without obtaining a prior permission is not allowed. SEGA shall not be liable for any malfunctioning and accident caused by said conversion.

### **PRIMARY SIDE AND SECONDARY SIDE**

The monitor's circuit which is divided into the Primary Side and Secondary Side, is electrically isolated. Do not touch the Primary

Side, or do not touch both the Primary Side and the Secondary Side simultaneously. Failing to observe the instruction can cause electric shock and this is very dangerous. When making monitor adjustments, use a non conductive driver and make adjustment without touching any part other than the Adjustment V.R. and knob. Also, be sure not to cause a shortcircuit to the Primary Side and Secondary Side. If short circuited, it can cause electric shock or malfunctioning, which is very dangerous.

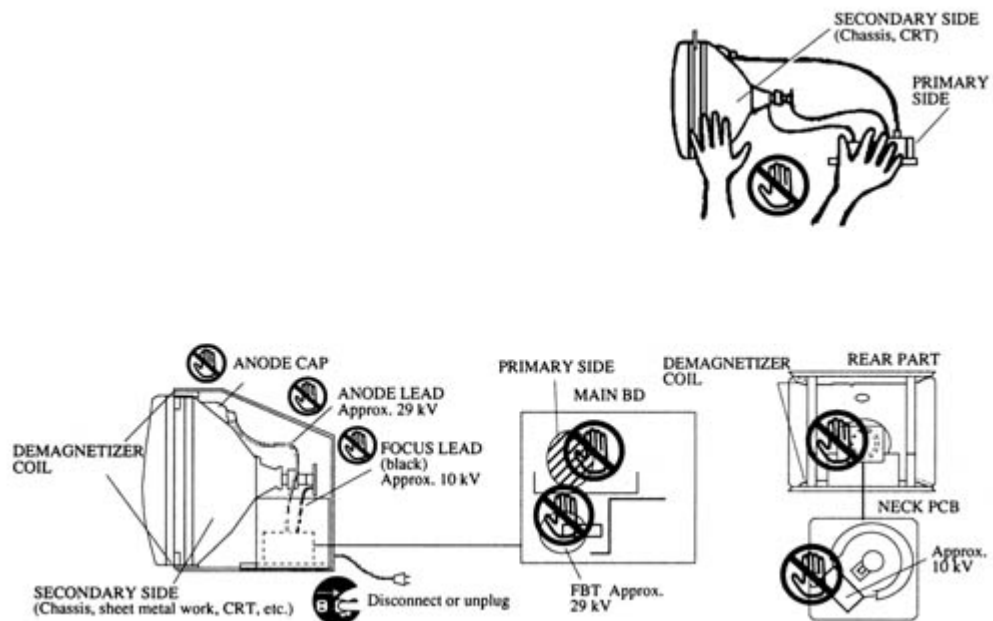

### **HIGH TENSION VOLTAGE**

Some parts inside the monitor are subject to high tension voltage in excess of 20,000 volts and very dangerous. Therefore, do not touch the monitor interior. Should soldering & paper wastes, etc., be mixed in the monitor interior, turn power off so as not to cause malfunctioning or fire hazard.

### **CONNECTING THE CRT AND PCB**

For combining the CRT and PCB, use specified part no. to maintain the status of adjustments made at the factory. The anode of the CRT itself will be accumulatively charged as time elapses, generating high-tension voltage which is very dangerous. The monitor should be used with the Chassis, CRT and PCB assembled. When repair, etc. is required at the time of malfunctioning. Be sure to send it in an "as assembled" condition. If these are disassembled, what's charged to said high tension voltage can be discharged, causing a very hazardous situation. Therefore, under no circumstances should it be disassembled.

### **STATIC ELECTRICITY**

Touching the CRT surface sometimes causes you to slightly feel electricity. This is because the CRT surfaces are subject to static and will not adversely affect the human body.

### **INSTALLATION AND REMOVAL**

Ensure that the Magnetizer Coil, FBT (Fly-Back Transformer), Anode Lead and Focus Lead are not positioned close to the sheet metal work's sharp edges, etc. and avoid damaging the insulated portions so as not to cause electric shock and malfunctioning.




For the purpose of static prevention, special coating is applied to the CRT face of this product. To protect the Coating, Pay attention to the following points. Damaging the coating film can cause electric shock to the customers. For the caution to be heeded when cleaning, refer to the Section of periodic inspection table.

Do not apply or rub with a hard item (a rod with pointed edge, pen, etc.) to or on the CRT surfaces.

Avoid applying stickers seals, etc. on the CRT face.

Do not remove aluminum foils from the CRT corners. Removing the aluminum foils can cause static prevention effects to be lowered.

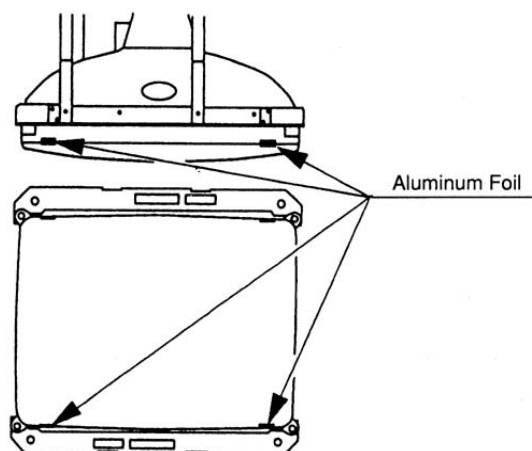

### **CAUTIONS TO BE HEADED WHEN CLEANING THE CRT SURFACES**

Static preventive coating is applied to the CRT surfaces. When cleaning, pay attention to the following points;

Peeling off static preventive coating can cause electric shock.

Remove smears by using a dry, soft cloth (flannels, etc.). Do not use a coarse gauze, etc.

For smear removing solvent, alcohol (ethanol) is recommended. When using chemical detergent

**be sure to follow instructions to follow;**

**Dilute chemical detergent with water and dip a soft cloth in and the thoroughly wring it to wipe smears off.**

**Do not use chemical detergent containing abradent, powder or bleaching agent.**

**Do not use alkaline chemical detergents such as "glass cleaner" available on the market or solvents such as thinner, etc.**


**Do not rub or scratch the CRT face with hard items such as brushes, scrub brush, etc.**

---


### ***ADJUSTMENT METHOD***

***Monitor adjustments have been made at the time of shipment. Therefore, do not make further adjustment without a justifiable reason. Adjusting the monitor which contains high tension parts is dangerous work. Also, an erroneous adjustment can cause deviated synchronization and image fault, resulting in malfunctioning. When making adjustment, utilize a resinous Alignment rod. Servicing with bare hand or using conductive tools can cause electric shock.***

NANAO monitor: 2 0 0 — 5 2 4 2 — 2 4 — 0 4 (24K mode)

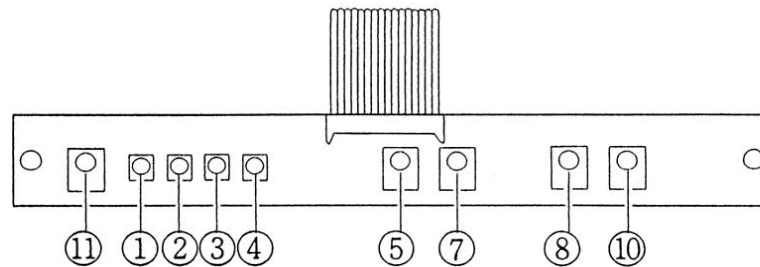

 SANWA monitor: 2 0 0 — 5 2 4 3 — 2 4 (24K mode)






|        |        |        |        |        |        |        |        |        |        |
|--------|--------|--------|--------|--------|--------|--------|--------|--------|--------|
| ①      | ②      | ③      | ④      | ⑤      | ⑥      | ⑦      | ⑧      | ⑨      | ⑩      |
| R GAIN | G GAIN | B GAIN | BRIGHT | H SIZE | H HOLD | H POSI | V SIZE | V HOLD | V POSI |

- ① R-GAIN
- ② G-GAIN ..... Controls colors.
- ③ B-GAIN
- ④ BRIGHT ..... Controls screen brightness.
- ⑤ H. SIZE ..... Controls horizontal screen size.
- ⑥ H. HOLD ..... Provides horizontal synchronization, i.e., controls right/left hold.
- ⑦ H. POSI ..... Controls horizontal display position on screen.
- ⑧ V. SIZE ..... Controls vertical screen size.
- ⑨ V. HOLD ..... Provides vertical synchronization, i.e., controls up-down hold.
- ⑩ V. POSI ..... Controls vertical display position on screen.
- ⑪ CONTRAST .... Adjusts image contrast.

[\[Previous page\]](#)[\[Next page\]](#)[\[Table of Contents\]](#)

## 12 - 2 MITSUBISHI MONITOR

### □ MITSUBISHI PROJECTOR CONTROL PANEL

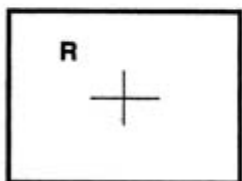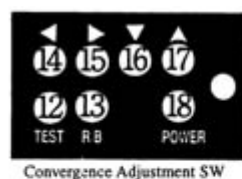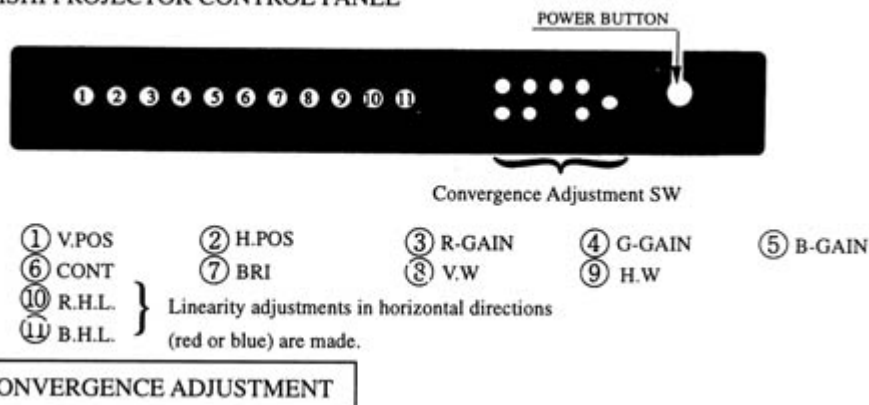

- ⑫ TEST
- ⑬ R/B
- ⑭ ◀
- ⑮ ▶
- ⑯ ▼
- ⑰ ▲
- ⑱ POWER

- Test mode on/off key
- R/B key
- Left shift key
- Right shift key
- Lower shift key
- Upper shift key
- Power button

For the Convergence adjustment mode, press the test mode on/off key. 12

Ensure that "R" is displayed on the screen.

Make adjustments so as to cause the red cross pattern to match with the green cross pattern by using Left shift key 14 , Right shift key 15 , Lower shift key 16 , and Upper shift key 17 .

By using R/B shift key 13 , cause the red adjustment "R" to shift to blue adjustment "B" and make sure that "B" is displayed on the screen.

In the same manner as in 3 above, cause the blue cross pattern to match with the green cross pattern.

After making adjustment, press the test mode on/off key 12 to cancel the convergence adjustment mode.

## STATIC CONVERGENCE ADJUSTMENT METHOD WITH REMOTE CONTROL



**Although Remote Control Buttons other than those specified below do not function even if pressed during Convergence Adjustment, do not press them during adjustment work so as to avoid causing malfunctioning.**

**Operate the Remote Control towards the PTV screen. If directed other than to the PTV screen, the Remote Control does not function.**

# BEFORE USING REMOTE CONTROL:

First make sure that the main SW on the Projector's control panel is ON (the LED adjacent to the main SW is lit).

The Remote Control has 2 different types. Depending on the type, the Adjustment procedure is different.

In case of REMOTE CONTROL (Part No. 200-5298):


For the Convergence Adjustment mode, press the test button. Ensure that "R" is displayed on the screen.

Make adjustment so as to cause the red cross pattern to match with the green cross pattern.

When the red cross matches the green cross, the green cross turns yellow or white.



Convergence Adjustment SW

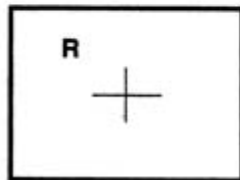

- ⑫ TEST
- ⑬ R/B
- ⑭ ◀
- ⑮ ▶
- ⑯ ▼
- ⑰ ▲
- ⑱ POWER

- Test mode on/off key
- R/B key
- Left shift key
- Right shift key
- Lower shift key
- Upper shift key
- Power button


Use remote control buttons shown below to move the red cross as follows:

Button to the left.....5

to the right.....7

Upward.....2

Downward.....10

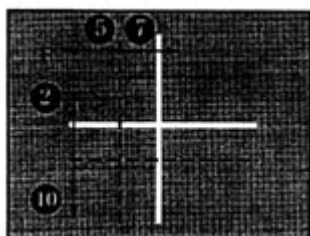

Use Remote Control button 6 to shift "R" to "B". Make sure that "B" is displayed on the screen. Each time Button 6 is pressed, red and blue adjustments are shifted.

In the same manner as in 2 above, cause the blue cross to match the green cross. When the blue cross matches the green cross, the green cross turns


white.

After adjustment is made, press the test button to cancel the Convergence Adjustment mode.

\*When 2 minutes or more elapses in the Convergence mode screen without taking any action, the on-screen adjustment mode will disappear.

In case of REMOTE CONTROL (Part No. 200-5532):

Press the TEST KEY to have the red line adjustment screen appear.

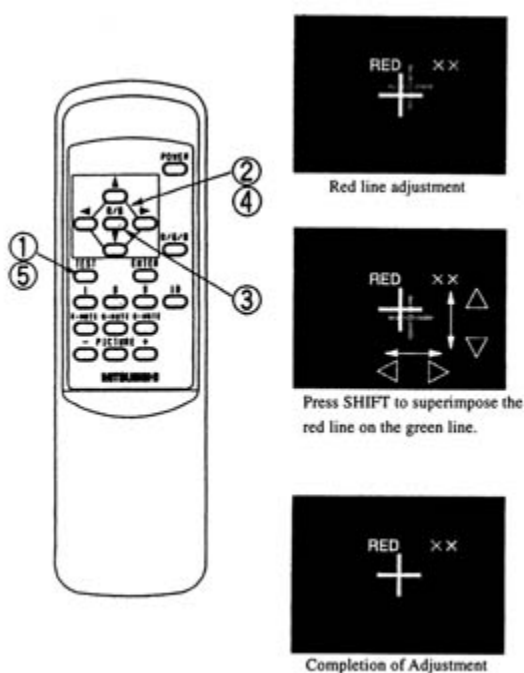

Superimpose the red cross on the green cross at the center of the screen.

Move the red cross to the left, right, up, and down respectively with the corresponding buttons of the remote control.

When the red cross is superimposed on the green cross, the green cross turns into yellow or white.

Press the R/B Key to have the blue line adjustment screen appear. Each time R/B Key is pressed, the red line and blue line will be alternated.

In the manner similar to 2 above, press each key to superimpose the blue cross on the green cross. When it is superimposed, the cross in the center will become white.

Press the TEST KEY to exit from the adjustment mode.

During STATIC CONVERGENCE Adjustment Mode, if no action is taken within 5 minutes, the adjustment mode will be exited automatically.

[\[Previous page\]](#)[\[Next page\]](#)[\[Table of Contents\]](#)

---

## 13 . REPLACEMENT OF FLUORESCENT LAMP AND LAMPS



**When performing the work, be sure to turn power off. Working with power on can cause an electric shock or short circuit accident.**

**The Fluorescent Lamp, when it gets hot, can cause burns. Be very careful when replacing the Fluorescent Lamp. To perform work safely and securely, be sure to prepare a step which is in a secure and stable condition. Not using a step or using an unstable step can cause a violent falling down accidents.**

---

### 13 - 1 REPLACEMENT OF FLUORESCENT LAMP

Take off the 3 screws which secure the Holder on the upper part of Billboard.

Remove the Upper Mask which secures the billboard plate.

Remove the billboard plate. This will expose the Fluorescent light assembly.

Take out the burnt lamp from the cabinet and replace the fluorescent lamp (20W)

[\[Previous page\]](#)[\[Next page\]](#)[\[Table of Contents\]](#)

## 14 . PERIODIC INSPECTION TABLE

The items listed below require periodic check and maintenance to retain the performance of this machine and ensure safe operation.



**Be sure to check once a year to see if Power Cords are damaged, the plug is securely inserted, dust is accumulated between the Socket Outlet and the Power Plug, etc. Using the product with dust as is accumulated can cause a fire or electrical shock.**

Periodically once a year, request the place of contact herein stated or the Distributor, etc. where the product was purchased from, as regards the interior cleaning. Using the product with dust as is accumulated in the interior without cleaning can cause a fire or accident. Note that cleaning the interior parts can be performed on a pay-basis.

| ITEMS         | DESCRIPTION             | PERIOD       | REFERENCE  |
|---------------|-------------------------|--------------|------------|
| CONTROLLER    | Cleaning                | as required  |            |
|               | Sight check             | Weekly       | 6          |
|               | Check Sw                | Monthly      | 6          |
| COIN SELECTOR | Check COIN SW           | Monthly      | 6          |
|               | COIN SELECTOR cleaning  | Trimonthly   | 8          |
| PROJECTOR     | C.R.T. cleaning         | Weekly       | 9          |
|               | Check adjustments       | Monthly      | 3,6,9      |
| GAME BD       | Setting check           | Monthly      | 6          |
| INTERIOR      | Cleaning                | Annually     | see above. |
| POWER PLUG    | Inspection and cleaning | Annually     | see above. |
| CABINET       | Cleaning                | As necessary | see below  |

| SURFACE |                                                     |              |   |
|---------|-----------------------------------------------------|--------------|---|
| CABINET | Ensure that adjusters are in contact with the floor | As necessary | 3 |

---

## CLEANING CABINET SURFACES



**When the cabinet surfaces are badly soiled, remove stains with a soft cloth dipped in water or diluted (with water) chemical detergent and squeezed dry. To avoid damaging surface finish, do not use such solvents as thinner, benzene, etc. other than ethyl alcohol, or abrasives, bleaching agent and chemical dust cloth.**

[\[Previous page\]](#)[\[Next page\]](#)[\[Table of Contents\]](#)

## 15. TROUBLE SHOOTING

Should trouble occur, first check connector connections.

| PROBLEMS                                                 | CAUSE                                                                                                                                                                 | COUNTERMEASURES                                                                                                                                                                                 |
|----------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| With Main SW ON,<br>no activation                        | Power is not<br>supplied.<br><br>Power<br>Supply/Voltage is<br>not correct.<br><br>AC Main fuse<br>causes the power to<br>be cut off due to<br>momentary<br>overload. | Plug in correctly.<br><br>Make sure that power<br>supply/voltage is correct.<br><br>Check fuse. Remove the<br>cause of overload and<br>replace fuse.                                            |
| PTV screen is<br>blackened and no<br>sound is emitted.   | POWER SW is<br>OFF.<br><br>Connections within<br>the base are<br>defective.                                                                                           | 1.> Check to see if the<br>POWER SW is ON.<br><br>2.> Check the BNC<br>connector connections of<br>the PTV TERMINAL BD<br>and VPM BUFFER BD in<br>CONTROL CABI.<br><br>3.> Check the Main Fuse. |
| PTV screen is all<br>blue.                               | Irregular<br>communications<br>between each<br>board.                                                                                                                 | 1.> Check the<br>communication cable<br>connection between the<br>Game BD and I/O BD.<br><br>2.> Turn the POWER SW<br>back on again.                                                            |
| The color of the<br>image on PTV<br>screen is incorrect. | Connector<br>connections are<br>defective.                                                                                                                            | Check the connection for<br>the RGB and SYNC<br>connectors of the PTV<br>TERMINAL BD and<br>VPM BUFFER BD.                                                                                      |
| The image on PTV<br>screen has color<br>deviation.       | Affected by<br>magnetic field of<br>installation<br>location.                                                                                                         | Make CONVERGENCE<br>adjustment. (see section 9)                                                                                                                                                 |
|                                                          | Sound volume                                                                                                                                                          |                                                                                                                                                                                                 |

|                                           |                                                                                                                                        |                                                                                                                                                              |
|-------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------|
| No sound is emitted.                      | adjustment is not appropriate.<br><br>Sound BD and speaker are malfunctioning.                                                         | Adjust sound volume. (see section 6)<br><br>Perform sound test to find and replace defective parts. (see section 6)                                          |
| Controller operation is not satisfactory. | Due to environmental changes, etc., sighting became inappropriate.<br><br>Micro switch malfunctioning.<br><br>Sensor BD malfunctioning | Perform sighting adjustment in the TEST MODE. (see section 6)<br><br>Replace the micro switch. (see section 7)<br><br>Replace the Sensor BD. (see section 7) |
| The Fluorescent lamp does not light up.   | The Fluorescent tube is burnt out.                                                                                                     | Replace the Fluorescent tube. (see section 10)                                                                                                               |

## 15 - 1 REPLACEMENT OF FUSE




**In order to prevent an electric shock, be sure to turn power off before performing work by touching the interior parts of the product. Be careful so as not to damage wirings. Damaged wiring can cause an electric shock or short circuit accident.**



**After eliminating the cause of the blowing of fuse, replace the fuse.**

**Depending on the cause of the fuse blowing, using the fuse as is blown can cause generation of heat resulting in fire.**

(1.) Turn off the AC Unit's Main SW.

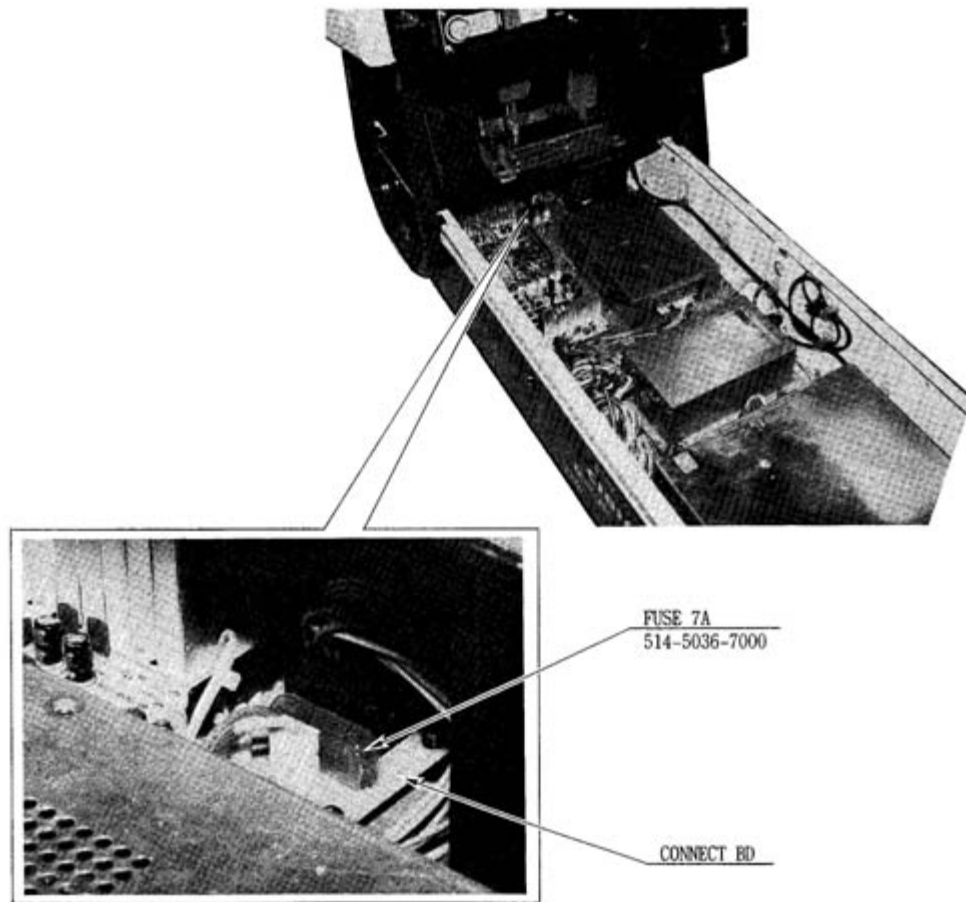

(2.) Unplug from the Plug Socket.

(3.) Remove the 2 truss screws, unlock with the Master Key, and remove the Back Door from the rear part of the Front Cabi.

(4.) Two types of fuse are on the Power Supply Unit.

[\[Previous page\]](#)[\[Next page\]](#)[\[Table of Contents\]](#)

---

## 16. GAME BOARD



**In order to prevent an electrical shock, be sure to turn power off before performing work by touching the interior parts of the product.**

**IMPORTANT!**

**Be careful so as not to damage wirings. Damaged wiring can cause an electric shock or short circuit accident.**

**Do not expose the Game BD, etc. without a good reason. In this product, setting changes are made during the test mode. The Game BD need not be operated. Use the Game BD, etc. as is with the same setting made at the time of shipment.**

---

### 16 - 1 REMOVING THE IC BOARD

The IC board such as Game BD, etc., is on the Rear side of the Front Cabi.

Take out the 2 Truss screws, unlock with the Master Key, and remove the Back Door from the rear part of the Front Cabinet.


Take out the 3 screws, unlock with the Master Key, and remove the Back Door from the rear part of the Front Cabinet.

---

### 16 - 2 COMPOSITION OF GAME BOARD

**(1) GAME BD SRT DX**


(833-13371)

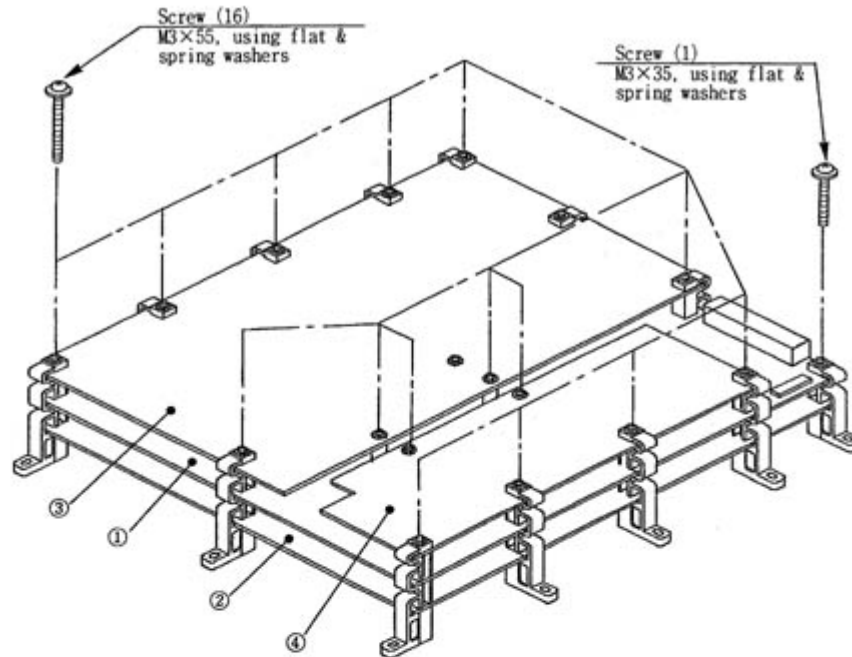

| No. | PART No.      | DESCRIPTION              |
|-----|---------------|--------------------------|
| ①   | 837-12715-91  | MODEL3 STEP2 CPU BOARD   |
| ②   | 837-12716-91  | MODEL3 STEP2 VIDEO BOARD |
|     | 837-13368     | MODEL3 STEP2.1 VIDEO BD  |
| ③   | 834-13428     | ROM BD DAYTONA USA2      |
| ④   | 837-11861-91  | MODEL3 COMM BD COM       |
| ⑤   | 837-13507-COM | PFSB SEC BD DUT COM      |

[\[Previous page\]](#)[\[Next page\]](#)[\[Table of Contents\]](#)

## 17. DESIGN RELATED PARTS

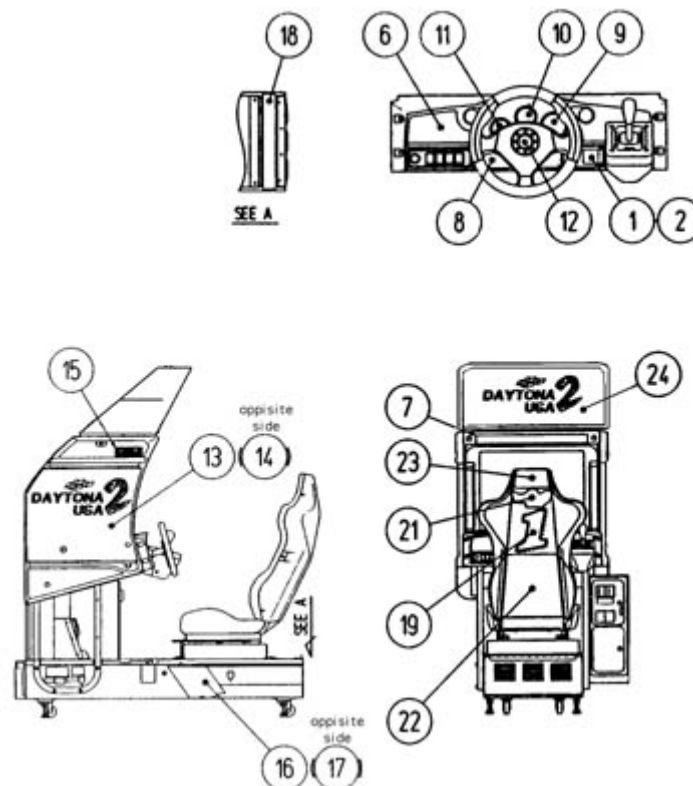


| ITEM NO. | PART NO.    | DESCRIPTION                |
|----------|-------------|----------------------------|
| 1        | DYN-0011    | DENOMI PLATE W/O ORIGINAL  |
| 2        | 421-7308~   | DENOMINATION SHEET 1 GAME  |
| 6        | 422-0660-01 | PLAY INSTR SH DUT TWIN ENG |
| 7        | 422-0661-01 | SUB INSTR SH DUT TWIN ENG  |
| 8        | SPG-1201-   | METER PANEL                |

|    |             |                               |
|----|-------------|-------------------------------|
|    | E           |                               |
| 9  | DYN-1214-C  | DESIGN PL TACO MTR TWIN       |
| 10 | DYN-1214-D  | DESIGN PL OIL METER TWIN      |
| 11 | DYN-1214-E  | DESIGN PL WATER MTR TWIN      |
| 12 | SPG-2002    | STEERING EMBLEM               |
| 13 | DUT1-1031-B | STICKER SIDE L                |
| 14 | DUT1-1046-B | STICKER SIDE R                |
| 15 | 421-9749-03 | STICKER LOGO SEGA LUMI YELLOW |
| 16 | DUT1-1501-A | STICKER BASE L                |
| 17 | DUT1-1501-B | STICKER BASE R                |
| 18 | *NOT USED*  | *NOT AVAILABLE*               |
| 19 | DUT0-1601-A | STICKER CAR NO.1              |
| 21 | DUT0-2201-C | STICKER DAYTONA USA 2         |
| 22 | DUT0-2201-D | STICKER LOWER                 |
| 23 | DUT0-2201-E | STICKER UPPER                 |
| 24 | 999-0704    | BILLBOARD PLATE               |

[\[Previous page\]](#)[\[Next page\]](#)[\[Table of Contents\]](#)

## 18. PARTS LIST

### TOP ASSY DAYTONA USA STD

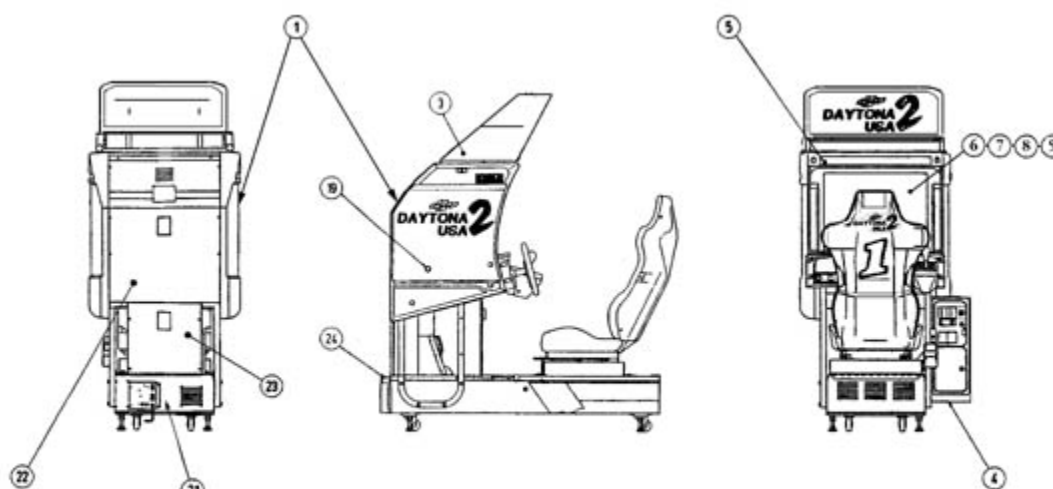


TORQUE: M8 195kgf·cm  
Under M4(M SCR) 10kgf·cm

| ITEM NO. | PART NO.    | DESCRIPTION               |
|----------|-------------|---------------------------|
| 1        | DUT1-100001 | ASSY COCKPIT 1P           |
| 3        | 999-0706    | ASSY BILLBOARD            |
| 4        | SPG-0300    | ASSY COIN CHUTE TOWER     |
| 5        | 422-0661-01 | SUB INSTR SH DUT TWIN ENG |
| 19       | DUT-0001    | BLIND CAP                 |
| 21       | SPG-0006    | AC COVER                  |
| 22       | INY-0004    | BACK LID INY              |
| 23       | DYN-0008    | BACK LID B                |
| 24       | DYN-0009    | HOLE LID                  |

[\[Previous page\]](#)[\[Next page\]](#)[\[Table of Contents\]](#)


---

### ASSY BILLBOARD (999-0706)

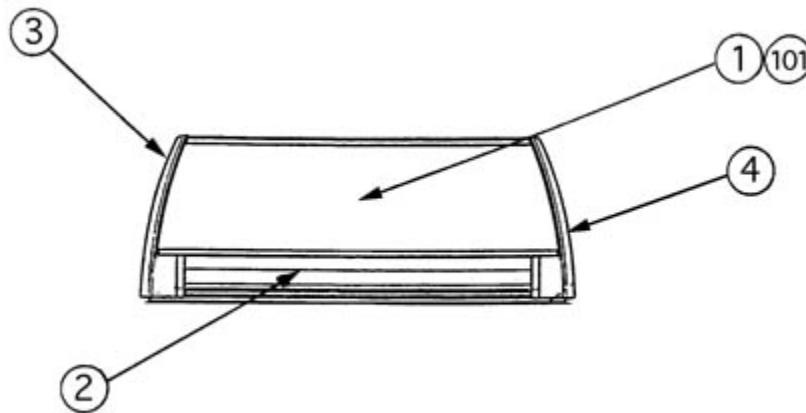

| ITEM NO. | PART NO.       | DESCRIPTION                  |
|----------|----------------|------------------------------|
| 1        | 999-0704       | BILLBOARD PLATE              |
| 2        | 999-0715       | LOWER PLEX DUT2 STD          |
| 3        | 999-0710       | MARQUEE CAP LEFT             |
| 4        | 999-0712       | MARQUEE CAP RIGHT            |
| 101      | LOCAL PURCHASE | ASSY FL 20W EX W/CONN HIGH S |


## ASSY COIN CHUTE TOWER (DUT-0300)

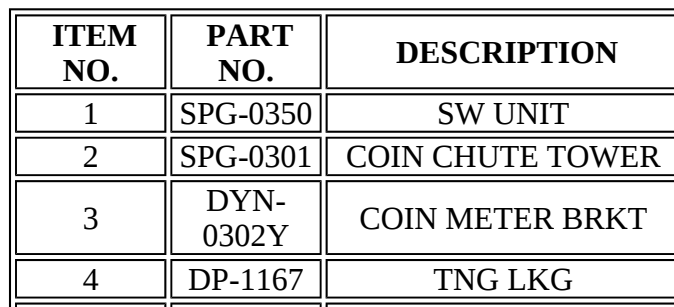

|     |                 |                            |
|-----|-----------------|----------------------------|
| 5   | BOX-<br>CASH    | CASH BOX                   |
| 10  | DYN-0305        | TOWER BRKT                 |
| 11  | 105-5202        | HOLE COVER                 |
| 12  | SPG-0302        | WIRE BOX                   |
| 13  | SPG-0303        | WIRE BOX LID               |
| 101 | 220-5237-<br>92 | ASSY C.C.DOOR 2DR          |
| 102 | 220-5412        | MAG CNTR W/CONN            |
| 103 | 220-5412-<br>01 | MAG CNTR W/CONN<br>BLACK   |
| 104 | 220-5574        | CAM LOCK W/KEYS            |
| 105 | 220-5575        | CAM LOCK MASTER<br>W/O KEY |

[\[Previous page\]](#)[\[Next page\]](#)[\[Table of Contents\]](#)

## SW UNIT (SPG-0350)

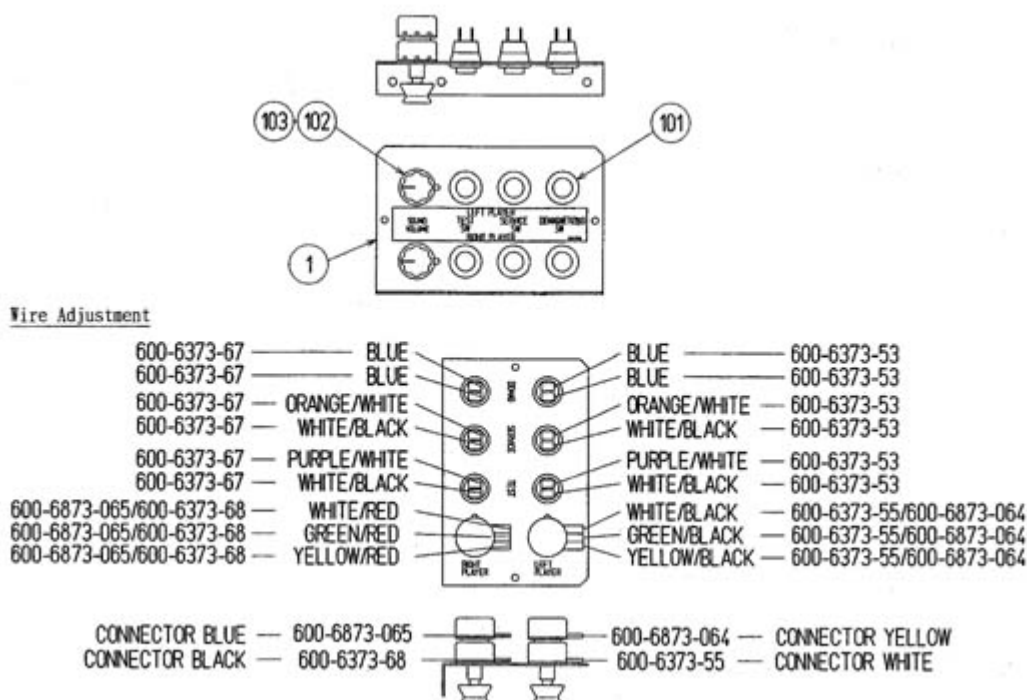


| ITEM NO. | PART NO. | DESCRIPTION       |
|----------|----------|-------------------|
| 1        | SPG-0351 | SWITCH BRKT       |
| 101      | 509-5028 | SW PB 1M          |
| 102      | 220-5179 | VOL CONT B-5K OHM |
| 103      | 601-0042 | KNOB 22MM         |

[\[Previous page\]](#)[\[Next page\]](#)[\[Table of Contents\]](#)

---

## AC UNIT (DUT-0400)

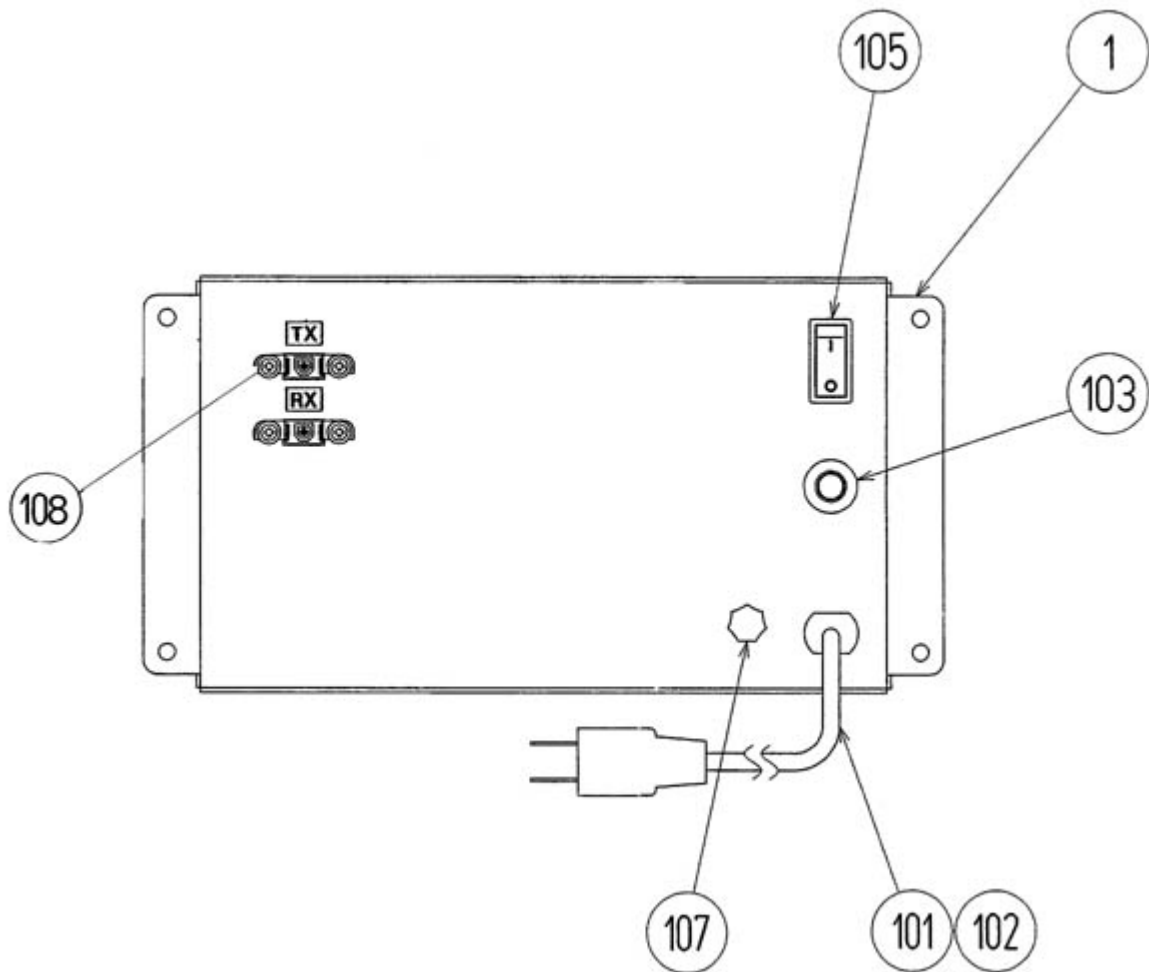


| ITEM NO. | PART NO.      | DESCRIPTION                 |
|----------|---------------|-----------------------------|
| 1        | DUT-0401      | AC BRKT                     |
| 101      | 600-5843-25   | CA&PLUG ASSY 15A W/F-L=2.5M |
| 102      | 280-5134-6N34 | BUSHING STRAIN RELIEF       |

|     |                   |                               |
|-----|-------------------|-------------------------------|
| 103 | LOCAL<br>PURCHASE | 10 A SLO (FUSE)               |
| 105 | 509-5453-91-V-B   | SW ROCKER J8 V-B              |
| 107 | 280-0417          | TERMINAL BINDING<br>POST BLCK |
| 108 | 211-5479-01       | CONN OPT JOINT                |

[\[Previous page\]](#)[\[Next page\]](#)[\[Table of Contents\]](#)

ASSY MONITOR COVER L 1P (DUT0-1030)

ASSY MONITOR COVER R 1P (DUT0-1045)

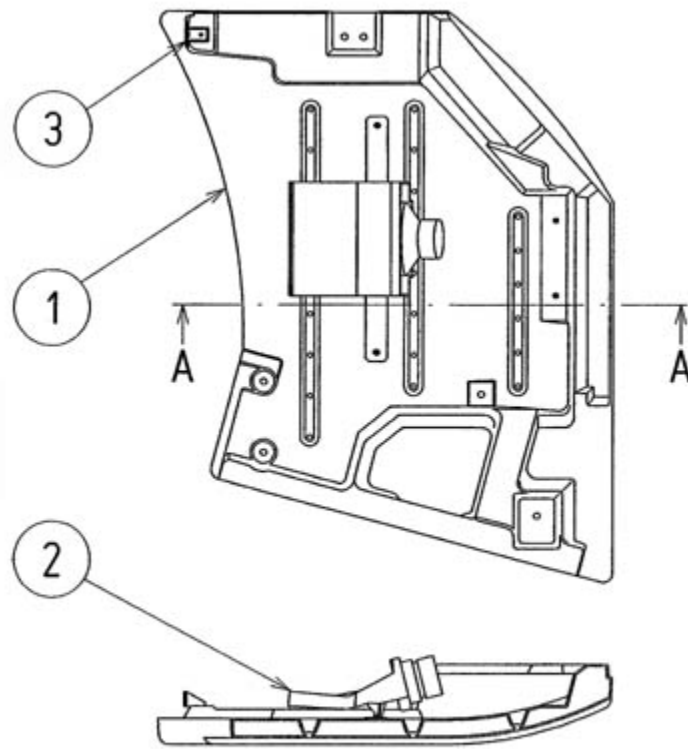

SECTION A-A


| ITEM NO. | PART NO.     | DESCRIPTION          |
|----------|--------------|----------------------|
| 1        | DUT1-1031    | COVER PANEL L 1P     |
|          | DUT1-1046-01 | COVER PANEL R 1P EXP |

|   |          |              |
|---|----------|--------------|
| 2 | SPG-1100 | ASSY SPEAKER |
| 3 | DYN-1032 | MASK BRKT    |

[\[Previous page\]](#)[\[Next page\]](#)[\[Table of Contents\]](#)

---

## ASSY SPEAKER (SPG-1100)

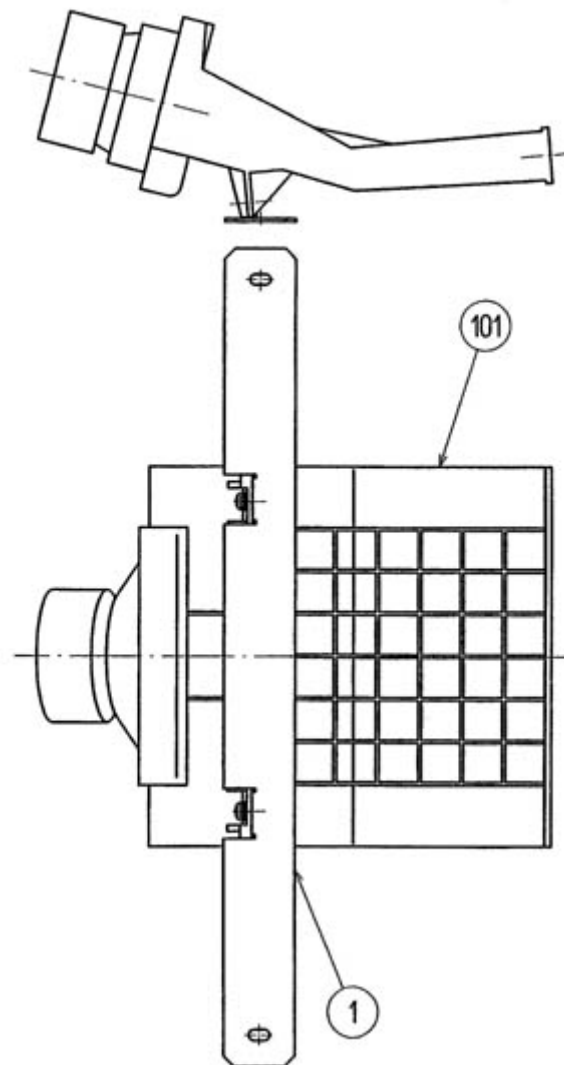


| ITEM NO. | PART NO. | DESCRIPTION        |
|----------|----------|--------------------|
| 1        | INY-1701 | SPEAKER BRKT       |
|          |          | SPKR BOX MINI DOME |

|     |          |     |
|-----|----------|-----|
| 101 | 130-5152 | 12W |
|-----|----------|-----|

[\[Previous page\]](#)[\[Next page\]](#)[\[Table of Contents\]](#)


### ASSY VIRTUAL BUTTON TWIN (DYN-1290)

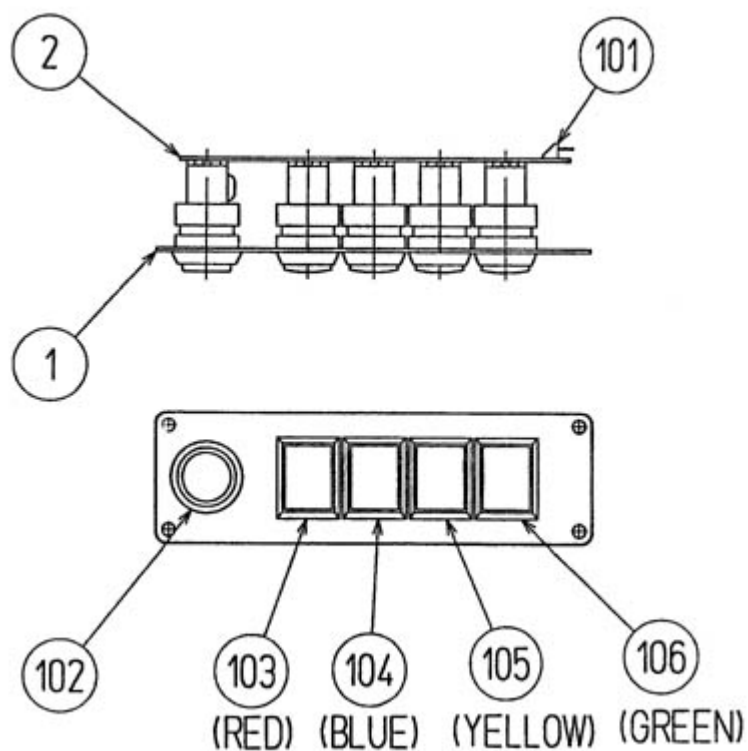

| ITEM NO. | PART NO.    | DESCRIPTION         |
|----------|-------------|---------------------|
| 1        | DYN-1291    | VR BUTTON BRKT      |
| 2        | 171-6478B   | PC BD LIGHTING SWx5 |
| 101      | 212-5205-12 | CONN JST M 12P RTA  |
| 102      | 509-5560-Y  | PB SW W/L 6V 1L Y   |
| 103      | 509-5561-R  | PB SW W/L 6V 5L R   |
| 104      | 509-5561-S  | PB SW W/L 6V 5L S   |
| 105      | 509-5561-Y  | PB SW W/L 6V 5L Y   |
| 106      | 509-5561-G  | PB-SW W/L 6V 5L G   |

[\[Previous page\]](#)[\[Next page\]](#)[\[Table of Contents\]](#)

## ASSY BASE BOX (DUT-1500)

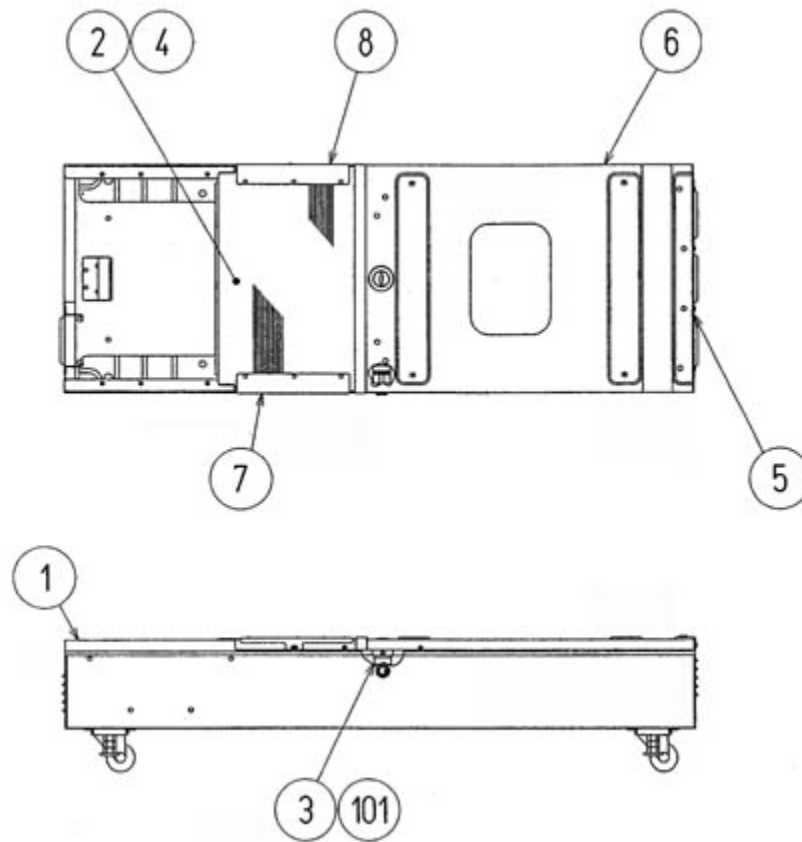


| ITEM NO. | PART NO.  | DESCRIPTION     |
|----------|-----------|-----------------|
| 1        | DUT-1501  | MAIN BASE       |
| 2        | DYN-2003  | BASE LID F      |
| 3        | DYN-2004  | LOCK TNG        |
| 4        | DYN-2005X | FLOOR MAT       |
| 5        | DYN-2006  | HINGE 480       |
| 6        | DUT-1510  | ASSY BASE LID R |

|     |           |                               |
|-----|-----------|-------------------------------|
| 7   | DYN-2007X | LID EDGE L                    |
| 8   | DYN-2009X | LID EDGE R                    |
| 101 | 220-5575  | CAM LOCK<br>MASTER W/O<br>KEY |

[\[Previous page\]](#)[\[Next page\]](#)[\[Table of Contents\]](#)

---


## MAIN BASE (DUT1-1501)

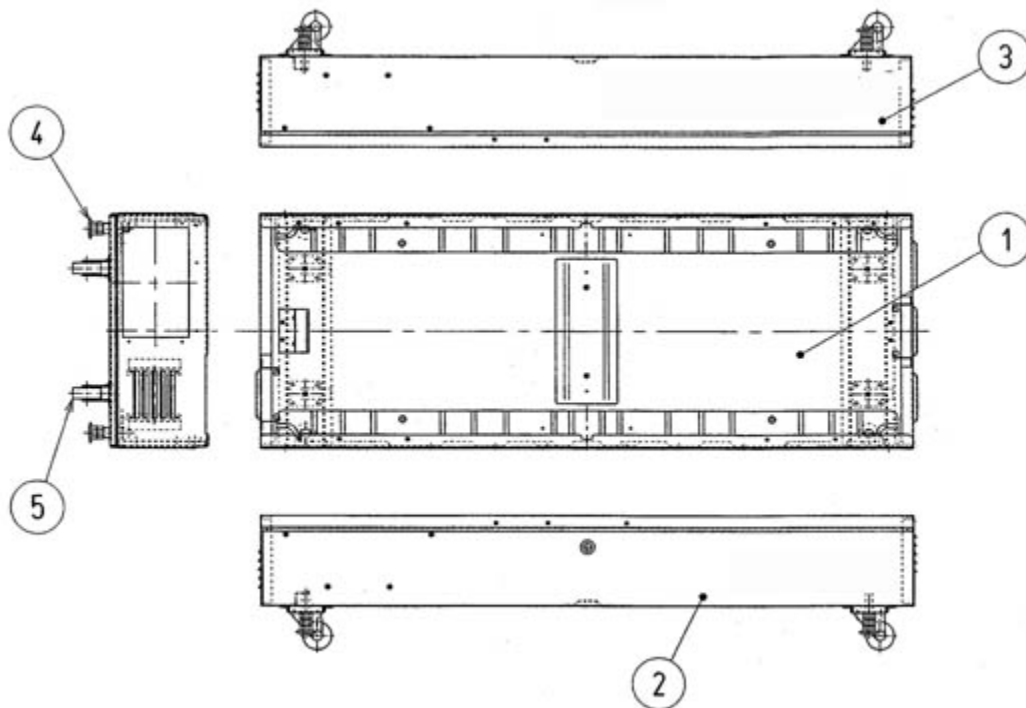

| ITEM NO. | PART NO.   | DESCRIPTION          |
|----------|------------|----------------------|
| 1        | DYN-2002X  | MAIN BASE BLANK      |
| 2        | DUT-1501-A | STICKER BASE L       |
| 3        | DUT-1501-B | STICKER BASE R       |
| 4        | 999-0167   | LEG LEVELER 1/2x13x3 |
| 5        | 999-0169   | CASTER 2 1/2"        |

[\[Previous page\]](#)[\[Next page\]](#)[\[Table of Contents\]](#)

## ASSY SEAT TWIN 1P (DUT-1600)

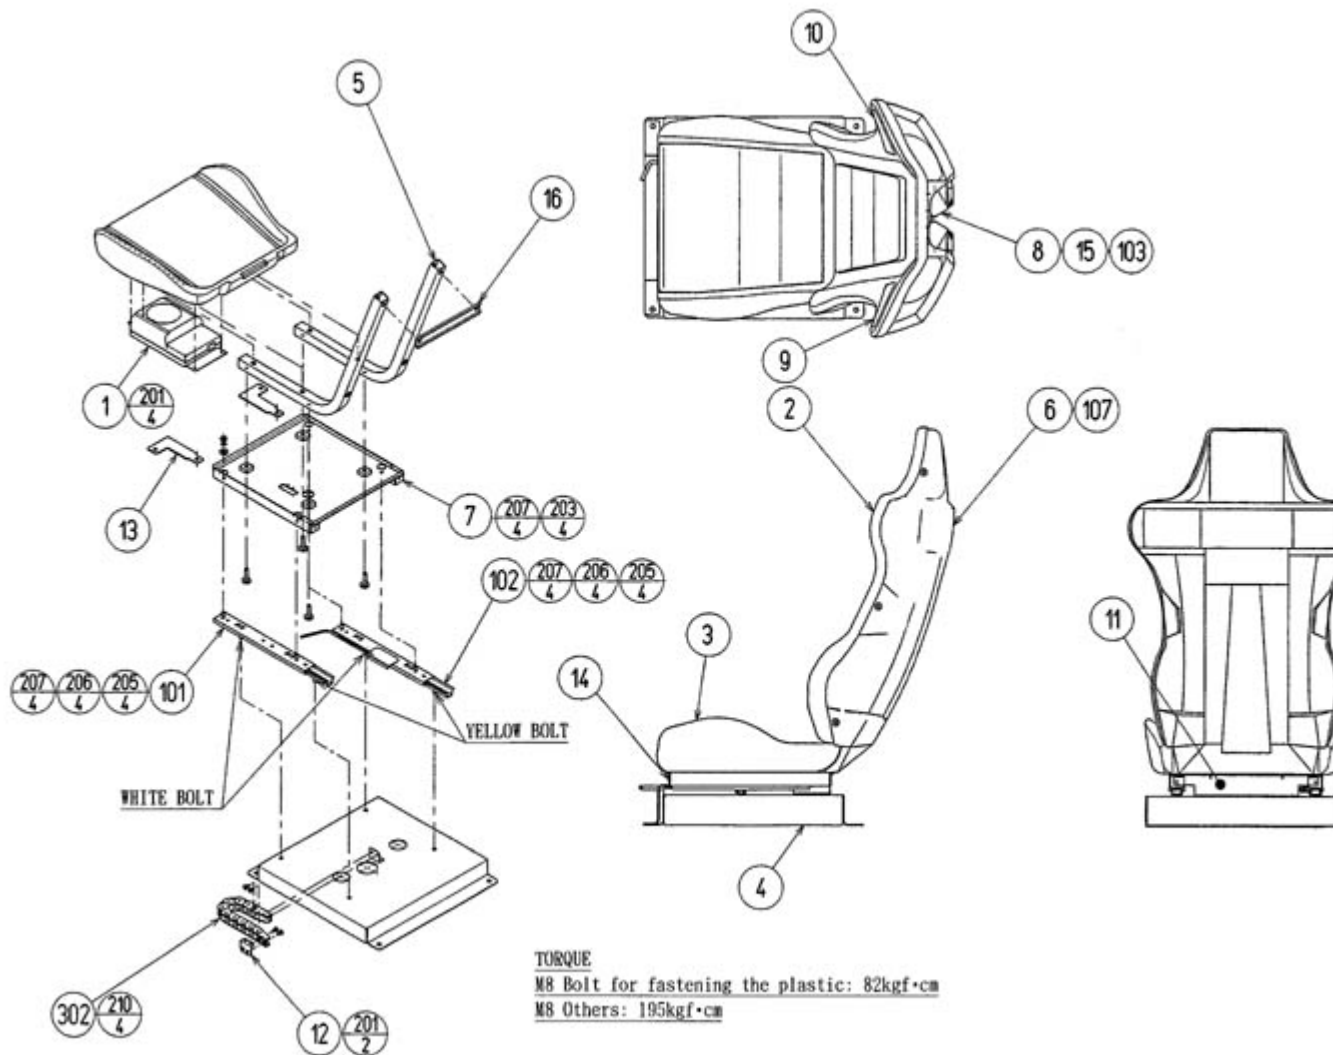


| ITEM NO. | PART NO. | DESCRIPTION |
|----------|----------|-------------|
| 1        | STC-1650 | ASSY WOOFER |
| 2        | DUT-2202 | UPPER SEAT  |
| 3        | DUT-2203 | LOWER SEAT  |
| 4        | STC-2201 | SEAT BASE   |
| 5        | STC-1604 | SEAT FRAME  |
|          |          |             |

|     |               |                              |
|-----|---------------|------------------------------|
| 6   | DUT-1601      | SEAT REAR COVER 1P           |
| 7   | STC-1606      | SEAT MOUNT TRAY              |
| 8   | STC-1607      | SP MOUNT BRKT                |
| 9   | STC-1608      | SPEAKER NET L                |
| 10  | STC-1609      | SPEAKER NET R                |
| 11  | STC-1610      | SAFETY GUARD                 |
| 12  | STC-1611      | CABLE BEAR BRKT              |
| 13  | STC-1612      | PROTECT RUBBER               |
| 14  | STC-1613      | SAFETY GUARD F               |
| 15  | INY-1302-B    | MASK CUSHION SIDE            |
| 17  | SRT-2200      | ASSY HANDLE BRAKE            |
| 101 | 601-9059      | SEAT RAIL L                  |
| 102 | 601-9060      | SEAT RAIL R                  |
| 103 | 130-5159      | GULL BOX SPEAKER 8<br>OHM 5W |
| 107 | 280-5297      | SCRIVET 8 1K31               |
| 201 | 000-P00410-W  | M SCR PH W/FS M4X10          |
| 203 | 030-000816-S  | HEX BLT W/S M8X16            |
| 205 | 050-H00800    | HEX NUT M8                   |
| 206 | 060-S00800    | SPR WSHR M8                  |
| 207 | 068-852216    | FLT WSHR 8.5-22x1.6          |
| 210 | 000-T00516-0B | M SCR TH BLK M6x16           |

[\[Previous page\]](#)[\[Next page\]](#)[\[Table of Contents\]](#)

---


### ASSY WOOFER (STC-1650)

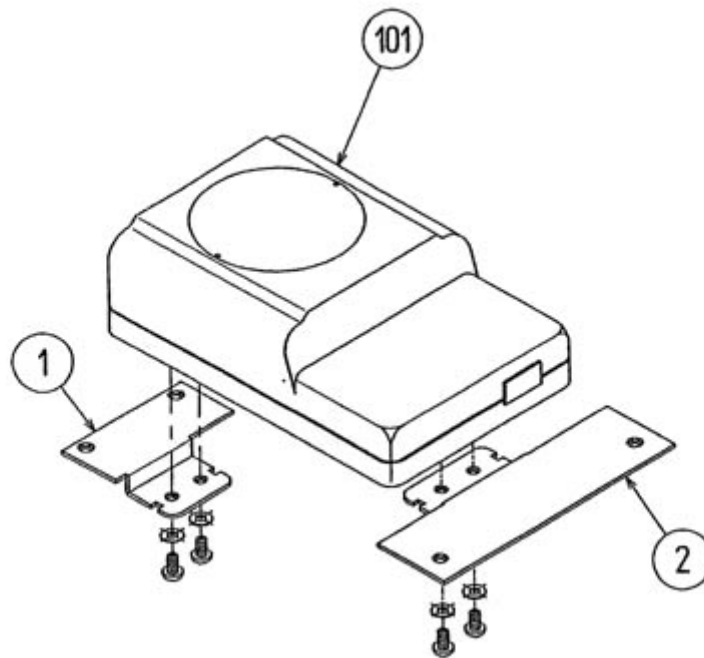

| ITEM NO. | PART NO. | DESCRIPTION             |
|----------|----------|-------------------------|
| 1        | STC-1651 | WOOFER BRKT F           |
| 2        | STC-1652 | WOOFER BRKT R           |
| 101      | 130-5160 | SUB WOOFER 4 OHM<br>30W |

[\[Previous page\]](#)[\[Next page\]](#)[\[Table of Contents\]](#)

## ASSY 4 SPEED SHIFTER (SPG-2150)

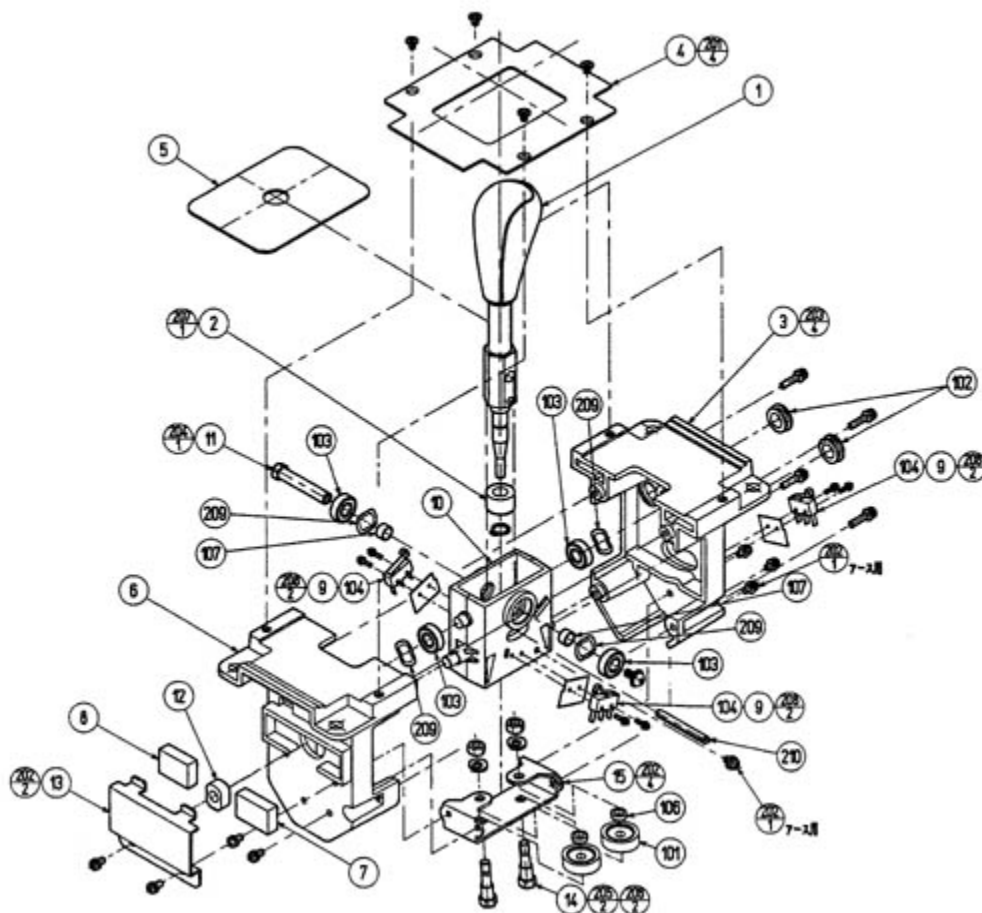


| ITEM NO. | PART NO. | DESCRIPTION    |
|----------|----------|----------------|
| 1        | SPG-2151 | SHIFT KNOB     |
| 2        | SPG-2152 | STOPPER RUBBER |
| 3        | SPG-2153 | FRONT BASE     |
| 4        | SPG-2154 | SLIDE COVER    |
| 5        | SPG-2155 | SLIDE PLATE    |

|     |              |                           |
|-----|--------------|---------------------------|
| 6   | SPG-2156     | REAR BASE                 |
| 7   | SPG-2157     | RUBBER BLOCK 45           |
| 8   | SPG-2158     | RUBBER BLOCK 65           |
| 9   | SPG-2159     | INSULATOR SHEET           |
| 10  | SPG-2160     | SHAFT CASE                |
| 11  | SPG-2161     | SHAFT BLOCK               |
| 12  | SPG-2162     | CENTERING BLOCK           |
| 13  | SPG-2163     | RUBBER CASE               |
| 14  | SPG-2164     | ROLLER BOLT               |
| 15  | SPG-2165     | ROLLER SUPPORT            |
| 101 | 100-5252     | BEARING ROLLER 25         |
| 102 | 100-5193     | GROMMET 11                |
| 103 | 100-5170     | BEARING 8                 |
| 104 | 509-5636     | SW MICRO TYPE SS-5GL2T    |
| 105 | 601-0460     | PLASTIC TIE BELT<br>100mm |
| 106 | 280-5306     | SPACER FAI 6x30           |
| 107 | 280-5307     | SPACER FAI 8x55           |
| 201 | 000-F00406   | M SCR FH M4x6             |
| 202 | 000-P00410-W | M SCR PH W/FS M4x10       |
| 203 | 000-P00420-W | M SCR PH W/FS M4x20       |
| 204 | 000-P00508-W | M SCR PH W/FS M5x8        |
| 205 | 050-H00600   | HEX NUT M6                |
| 206 | 060-S00600   | SPR WSHR M6               |
| 207 | 065-S010S0-Z | STP RING BLK OZ S10       |
| 208 | FAS-000033   | M SCR PH W/FS M2.3x12     |
| 209 | FAS-650008   | WAVE WSHR 12.7-18.1x2.5   |
| 210 | FAS-450006   | SPR PIN WAVE STN 5x45     |

[\[Previous page\]](#)[\[Next page\]](#)[\[Table of Contents\]](#)

## ASSY ACCEL & BRAKE (SPG-2200)

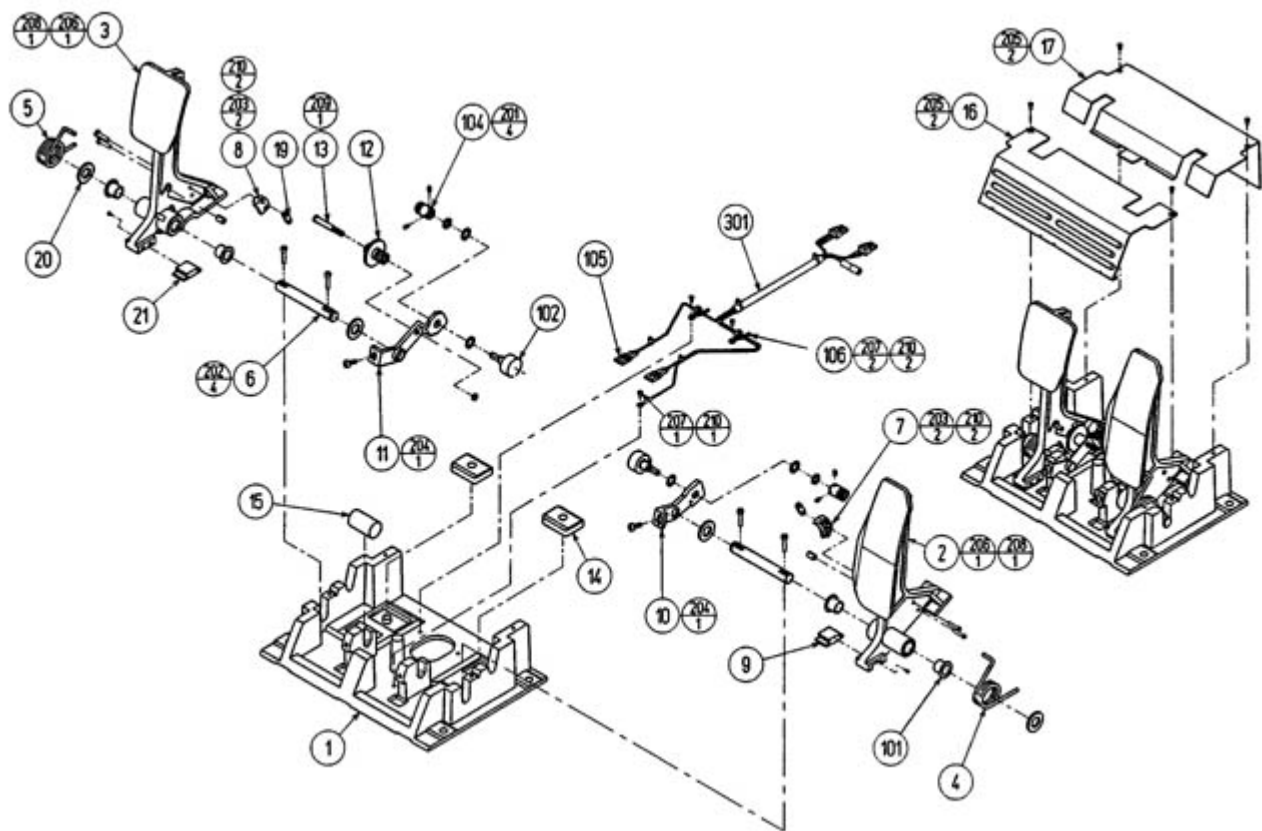

| ITEM NO. | PART NO. | DESCRIPTION  |
|----------|----------|--------------|
| 1        | SPG-2201 | BASE         |
| 2        | SPG-2202 | ACCEL PEDAL  |
| 3        | SPG-2203 | BRAKE PEDAL  |
| 4        | SPG-2204 | ACCEL SPRING |
| 5        | SPG-2205 | BRAKE SPRING |
| 6        | SPG-2206 | SHAFT        |
| 7        | SPG-2207 | ACCEL GEAR   |
|          |          |              |

|     |               |                               |
|-----|---------------|-------------------------------|
| 8   | SPG-2208      | BRAKE GEAR                    |
| 9   | SPG-2209      | NEUTRAL STOPPER               |
| 10  | SPG-2210      | VR PLATE ACCEL                |
| 11  | SPG-2211      | VR PLATE BRAKE                |
| 12  | SPG-2212      | AMPL GEAR                     |
| 13  | SPG-2213      | GEAR SHAFT                    |
| 14  | SPG-2214      | STOPPER                       |
| 15  | SPG-2215      | RUBBER CUSHION                |
| 16  | SPG-2216      | COVER                         |
| 17  | SPG-2217      | VR COVER                      |
| 19  | SPG-2219      | GEAR STAY                     |
| 20  | SPG-2220      | WSHR                          |
| 21  | SPG-2221      | NEUTRAL STOPPER D             |
| 101 | 100-5263      | BEARING 12                    |
| 102 | 220-5484      | VOL CONT B-5K OHM             |
| 104 | 601-7944      | GEAR 15                       |
| 105 | 310-5029-F15  | SUMI TUBE F F 15mm            |
| 106 | 280-0419      | HARNESS LUG                   |
| 201 | 028-A00304-P  | SET SCR HEX SKT CUP P<br>M3x4 |
| 202 | 020-000520-0Z | HEX SKT H CAP SCR BLK<br>M5x4 |
| 203 | 000-P00420    | M SCR PH M4x20                |
| 204 | 000-P00508-W  | M SCR PH W/FS M5x8            |
| 205 | 000-T00408-0C | M SCR TH CRM M4x8             |
| 206 | FAS-450005    | SPR PIN BLK 0Z 6x10           |
| 207 | 000-P00405    | M SCR PH 4x5                  |
| 208 | FAS-000001    | M SCR TH CRM M3x6             |
| 209 | 050-H00500    | HEX NUT M5                    |
| 210 | 060-F00400    | FLT WSHR M4                   |

7/12/2005


|     |                  |                               |
|-----|------------------|-------------------------------|
| 3   | SPG-2503         | STEERING SHAFT                |
| 4   | SPG-2504         | PULLEY 20 S5M                 |
| 5   | SPG-2505         | PULLEY 60 S5M                 |
| 6   | SPG-2506         | MOTOR BRKT                    |
| 7   | SPG-2507         | VR BRKT                       |
| 8   | SPG-2108         | STOPPER BOLT                  |
| 9   | SPG-2109         | STOPPER RUBBER                |
| 10  | SPG-2453         | KEY 4x4x40                    |
| 11  | ASK-3502         | MOTOR SPACER                  |
| 12  | ASK-3503         | MOTOR COLLAR                  |
| 13  | DYN-1270         | STOPPER KEY                   |
| 14  | SLC-1130         | ADJUST RING                   |
| 15  | SPG-2454         | MOTOR SHAFT<br>COLLAR         |
| 101 | 350-5448-91      | SERVO MOTOR 500W<br>SPG       |
| 102 | 100-5112         | BEARING 17                    |
| 103 | 601-8966         | GEAR HOLDER                   |
| 104 | 601-6172         | GEAR 48                       |
| 105 | 601-6959         | GEAR 64                       |
| 106 | 601-9173         | TIMING BELT                   |
| 107 | 220-5484         | VOL CONT B-5K OHM             |
|     | 220-5373         | VOL CONT B-5K                 |
| 108 | 310-5029-<br>F20 | SUMI TUBE F F20mm             |
| 201 | 028-A00408-<br>P | SET SCR HEX SKT CUP<br>P M4x8 |
| 202 | 028-A00308-<br>P | SET SCR HEX SKT CUP<br>P M3x8 |
| 203 | 065-S012S0-<br>Z | STP RING BLK OZ S12           |
| 204 | 065-S020S0-<br>Z | STP RING BLK OZ S20           |
| 205 | 000-P00408-<br>W | M SCR PH W/FS M4x8            |
| 206 | 000-P00412-<br>W | M SCR PH W/FS M4x12           |
| 207 | 030-000612-<br>S | HEX BLT W/S M6x12             |
| 208 | 060-F00600       | FLT WSHR M6                   |
| 209 | 050-U00600       | U NUT M6                      |
| 210 | 030-000840-<br>S | HEX BLT W/S M8x40             |
|     |                  |                               |

|     |            |                     |
|-----|------------|---------------------|
| 211 | 068-852216 | FLT WSHR 8.5-22x1.6 |
| 212 | 050-U00800 | U NUT M8            |

[\[Previous page\]](#)[\[Next page\]](#)[\[Table of Contents\]](#)

---

## ASSY SOUND BD (DUT-4150)

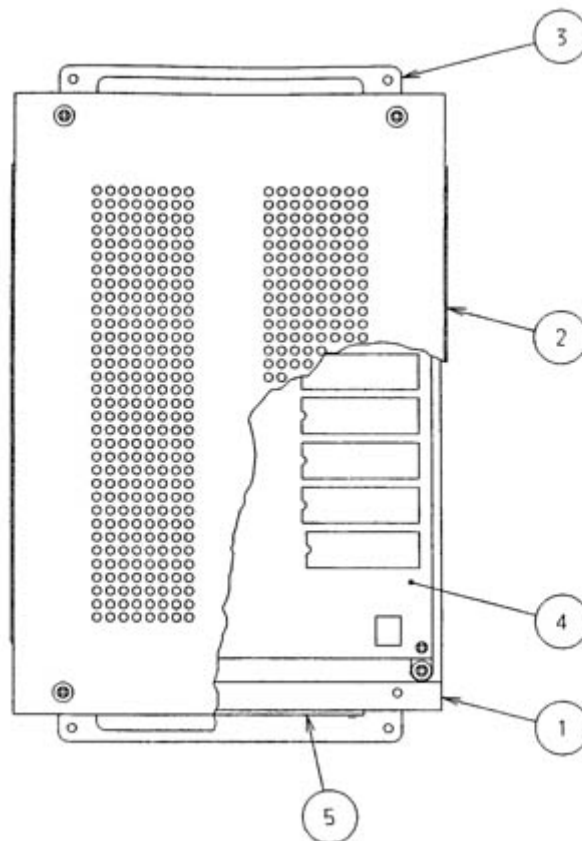


| ITEM NO. | PART NO. | DESCRIPTION           |
|----------|----------|-----------------------|
| 1        | 105-5315 | SHIELD CASE MPEG      |
| 2        | 105-5316 | SHIELD CASE LID MPEG  |
| 3        | 105-5317 | SHIELD CASE BRKT MPEG |
|          | 837-     | SOUND BD DAYTONA      |

|   |          |                         |
|---|----------|-------------------------|
| 4 | 13429    | USA 2                   |
| 5 | 839-1021 | FLT BD DIGITAL<br>SOUND |

[\[Previous page\]](#)[\[Next page\]](#)[\[Table of Contents\]](#)


ASSY MAIN BD BASE(DUTS-4400)

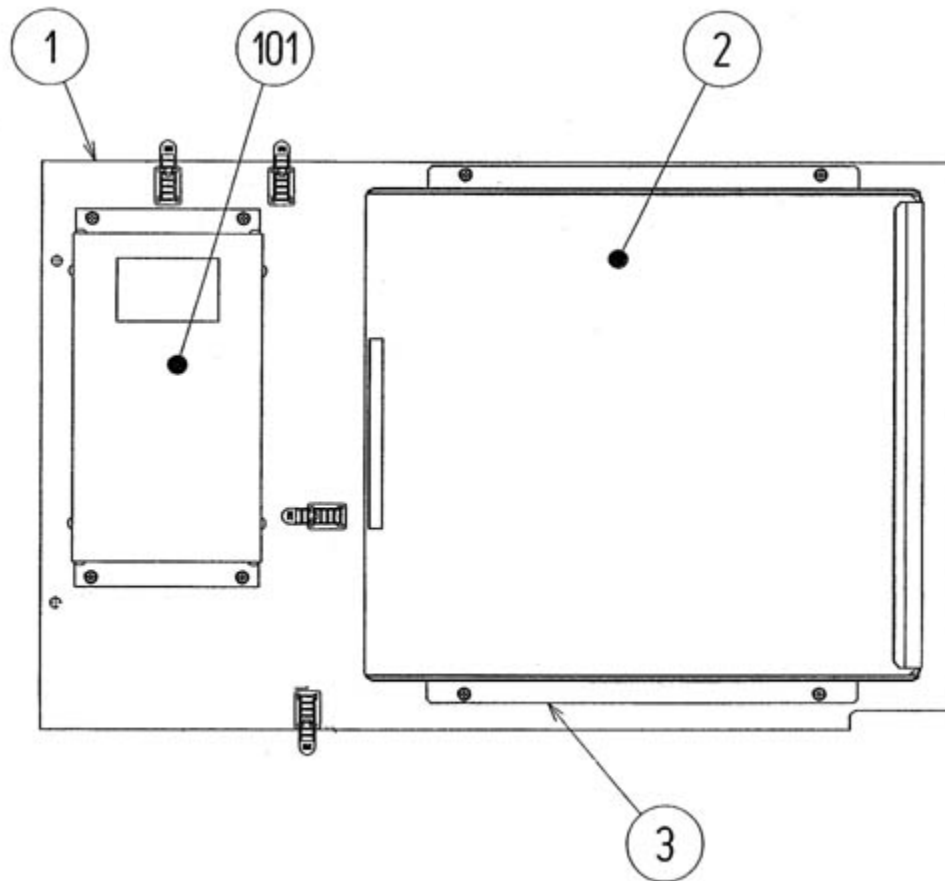

| ITEM NO. | PART NO.       | DESCRIPTION         |
|----------|----------------|---------------------|
| 1        | SRT-4401       | WOODEN BASE         |
| 2        | DUT-4600       | ASSY SHIELD CASE    |
| 3        | 105-5241       | SHIELD CASE BRKT    |
| 101      | 400-5330-02-91 | SW REGU FOR MODEL 3 |
|          | 400-5330-03    | SW REGU FRO MODEL 3 |

[\[Previous page\]](#)[\[Next page\]](#)[\[Table of Contents\]](#)

## ASSY ELEC BASE (DUT-4500)

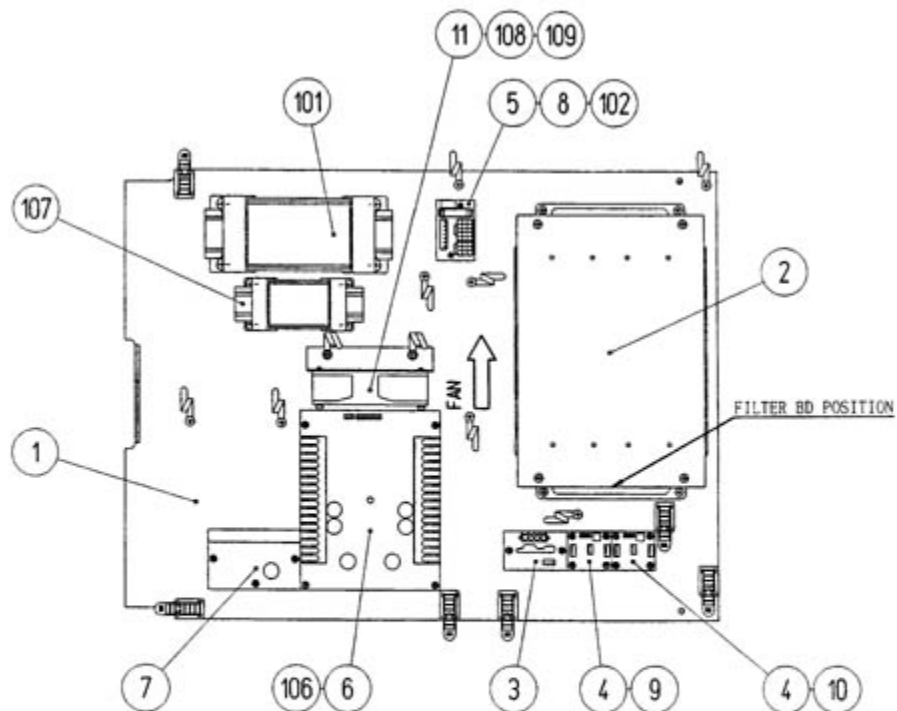

⑥ 838-13475 JUMPER SETTING

| P1   |     | P2    |     |
|------|-----|-------|-----|
| 1-20 | OFF | 6-15  | OFF |
| 2-19 | OFF | 7-14  | OFF |
| 3-18 | OFF | 8-13  | OFF |
| 4-17 | OFF | 9-12  | OFF |
| 5-16 | OFF | 10-11 | ON  |
| 1-8  | OFF | 2-7   | ON  |
| 3-6  | OFF | 4-5   | OFF |


| ITEM NO. | PART NO.    | DESCRIPTION             |
|----------|-------------|-------------------------|
| 1        | DUT-4501    | WOODEN BASE ELEC        |
| 2        | DUT-4150    | ASSY SOUND BD           |
| 3        | 839-0718-01 | 4A DC SSR BD CONN BROWN |
| 4        | 839-0542    | AUDIO MIX BD            |
|          |             |                         |

|     |                   |                                    |
|-----|-------------------|------------------------------------|
| 5   | 838-11856-01-UL   | CONNECT BD W/FUSE &<br>COVER UL    |
| 6   | 838-13475         | PWR AMP 4CH & MIXER                |
| 7   | 838-11651-91      | LOWPASS AMP                        |
| 11  | BY-4102           | FAN MOTOR BRACKET                  |
| 101 | 560-5393          | XFMR 200-240V 100V 8Ax2<br>WB      |
| 102 | LOCAL<br>PURCHASE | 7A slo FUSE                        |
| 106 | 211-5305          | C JMPR SCKT                        |
| 107 | 560-5394          | XFMR 100V 14V10.5A WB              |
| 108 | 260-0011-02       | AXIAL FLOW FAN AC 100V<br>50-60 Hz |
| 109 | 601-8543          | FAN GAURD                          |

[\[Previous page\]](#)[\[Next page\]](#)[\[Table of Contents\]](#)

---


### ASSY DRIVE BD (DUT-4550)

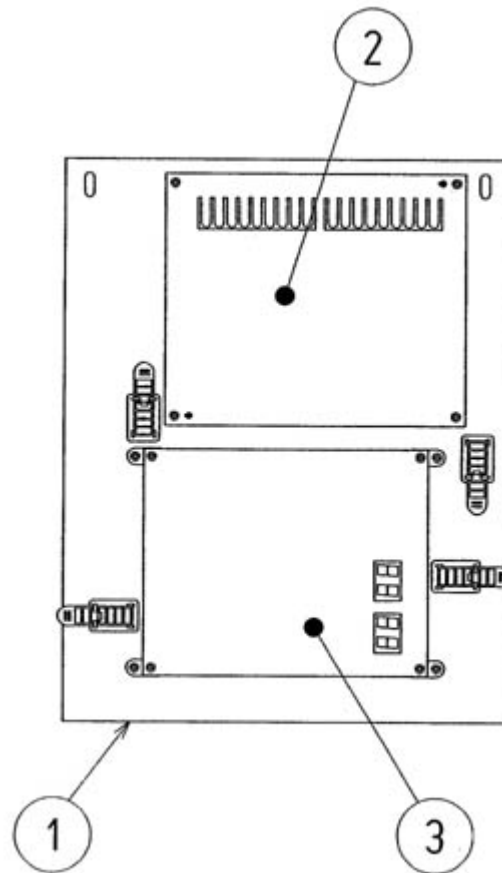

| ITEM NO. | PART NO.     | DESCRIPTION              |
|----------|--------------|--------------------------|
| 1        | SRT-4551     | WOODEN BASE DRIVE TWIN   |
| 2        | 838-12912-01 | SERVO MOTOR DRIVE BD NEW |
| 3        | 838-13481    | DRIVE BD DUT             |

[\[Previous page\]](#)[\[Next page\]](#)[\[Table of Contents\]](#)

### ASSY COCKPIT 1P (DUT-10001)

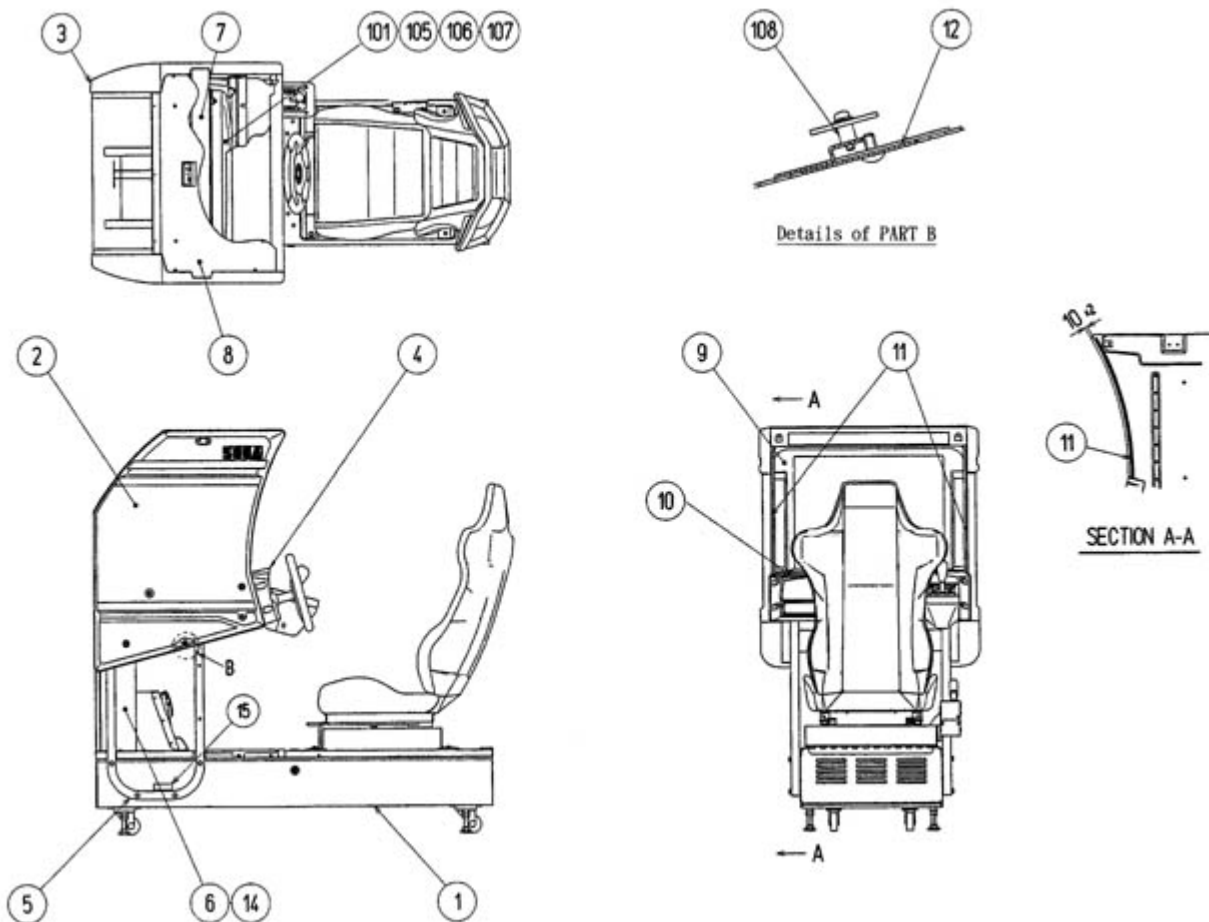


| ITEM NO. | PART NO.   | DESCRIPTION                    |
|----------|------------|--------------------------------|
| 1        | DUT-20001  | ASSY MAIN BASE 1P              |
| 2        | DUT-1030   | ASSY MONITOR COVER 1P          |
| 3        | DUT-1045   | ASSY MONITOR COVER R 1P<br>EXP |
| 4        | DUT-12001- | ASSY CONTROL PANEL TWIN        |

|     | 01             | EXP                                  |
|-----|----------------|--------------------------------------|
| 5   | SPG-1004       | MONITOR STAND                        |
| 6   | SRT-1002       | WIRE COVER BOX                       |
| 7   | INY-1016       | MONITOR SUPPORT                      |
| 8   | SPG-1005       | MASK HOLDER                          |
| 9   | TTR-1067X      | MONITOR MASK                         |
| 10  | SPG-1005       | MASK HOLDER                          |
| 11  | DYN-1025       | RUBBER CUSHION                       |
| 12  | INY-1015       | CRT ADJUST PANEL                     |
| 14  | DUT-4550       | ASSY DRIVE BD TWIN                   |
| 101 | 200-5242-24-04 | ASSY CLR DISPLAY 29 TYPE<br>100V     |
|     | 200-5243-24    | ASSY CLR DISPLAY 29 TYPE<br>24K 100V |
| 105 | 280-5112       | BUSH FOR TV                          |
| 106 | 280-5113       | COLLAR FOR TV                        |
| 107 | 280-5114       | SPACER 6.4-25x2                      |
| 108 | 280-5185-6     | SPACER TUBE L=6                      |

[\[Previous page\]](#)[\[Next page\]](#)[\[Table of Contents\]](#)

ASSY CONTROL PANEL (DUT-12001-01)

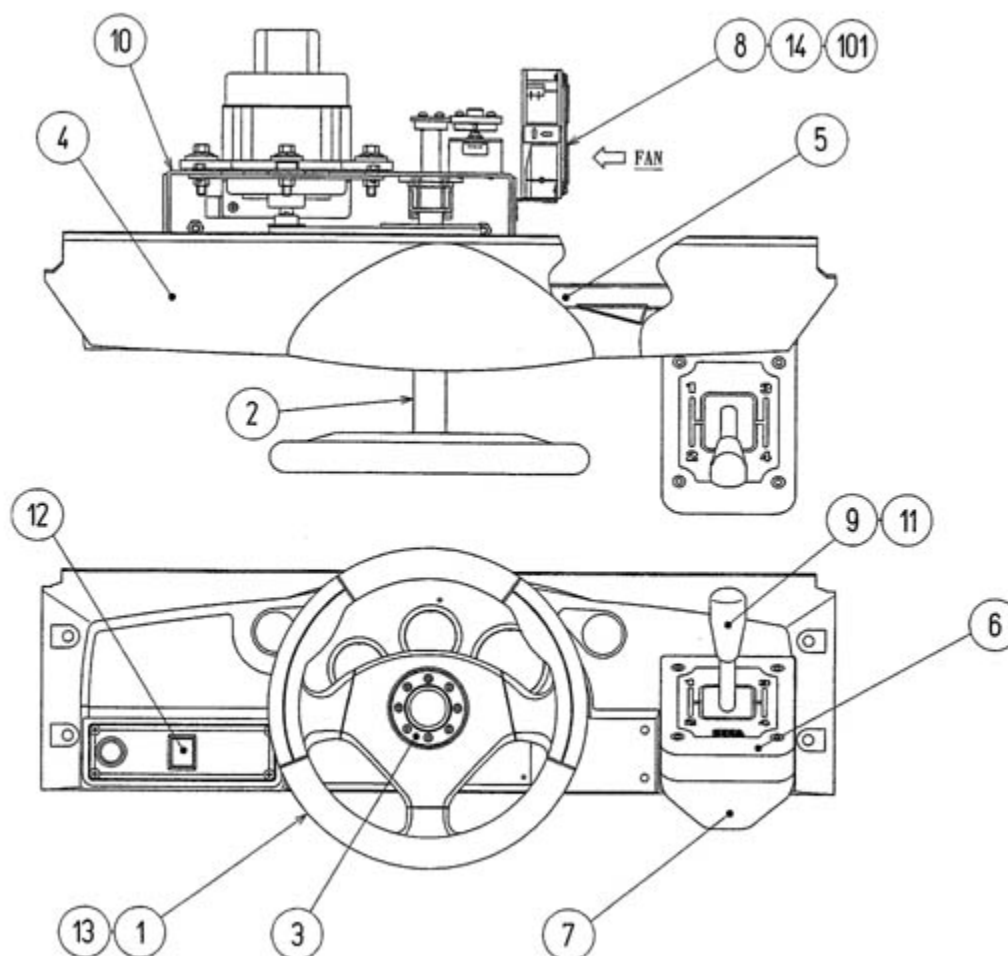


| ITEM NO. | PART NO.    | DESCRIPTION             |
|----------|-------------|-------------------------|
| 1        | SPG-2001    | STEERING WHEEL          |
| 2        | DYN-1209X   | HANDLE COLLAR           |
| 3        | SPG-2002    | STEERING EMBLEM         |
| 4        | DUT-1201-01 | CONTROL PANEL COVER ENG |
| 5        | SPG-1205    | CONTROL PANEL BRKT      |
| 6        | DYN-1222    | SHIFT COVER A           |

|     |             |                                     |
|-----|-------------|-------------------------------------|
| 7   | DYN-1223X   | SHIFT COVER B                       |
| 8   | SPG-1203    | FAN BRKT                            |
| 9   | SPG-1204    | SPL BLT M8                          |
| 10  | SPG-2500    | ASSY HANDLE MECHA                   |
| 11  | SPG-2150    | ASSY 4 SPEED SHIFTER                |
| 12  | SRT-1290    | ASSY VIRTUAL BUTTON<br>TWIN         |
| 13  | SPG-2039    | SPACER RING                         |
| 14  | 601-8543    | FAN GUARD                           |
| 101 | 260-0011-02 | AXIAL FLOW FAN AC 100V 50-<br>60 Hz |

[\[Previous page\]](#)[\[Next page\]](#)[\[Table of Contents\]](#)

---

## ASSY COCKPIT BASE (SRT-2300)

 


| ITEM NO. | PART NO. | DESCRIPTION       |
|----------|----------|-------------------|
| 1        | SRT-2470 | ASSY SIDE STEP    |
| 2        | SRT-2301 | COCKPIT BASE      |
| 3        | SRT-2302 | BANK SHAFT        |
| 4        | SRT-2303 | BANK SHAFT BRKT L |
| 5        | SRT-2304 | BANK SHAFT BRKT R |
| 6        | SRT-2305 | KEY 7x8x118       |
| 7        | SRT-2306 | SIDE STEP R       |
| 8        | SRT-2307 | FOOT REST         |

|     |               |                             |
|-----|---------------|-----------------------------|
| 9   | SRT-2308      | FOOT REST COVER             |
| 10  | SRT-2309      | BASS BRKT                   |
| 11  | SRT-2310      | BANK GUIDE BRKT L           |
| 12  | SRT-2311      | BANK GUIDE BRKT R           |
| 13  | SRT-2312      | KEY 7x8x65                  |
| 14  | SRT-2313      | GEAR SPACER                 |
| 15  | SRT-2359      | FLT WSHR 12.5-36-2          |
| 16  | SRT-2314      | NON SLIP MAT S              |
| 17  | SRT-2315      | CUSHION                     |
| 101 | 601-10035     | RUBBER SPRING<br>38x120     |
| 102 | 100-5317      | BEARING 40                  |
| 103 | 130-5172      | BASS SHAKER                 |
| 104 | 601-0460      | PLASTIC TIE BELT<br>100mm   |
| 105 | 280-5169      | CORD CLAMP TL-20S           |
| 106 | 280-5009-01   | CORD CLAMP 21               |
| 107 | 280-5275-SR10 | CORD CLAMP SR10             |
| 201 | 050-U00400    | U NUT M4                    |
| 202 | 060-F00400    | FLT WSHR M4                 |
| 203 | 050-H01200    | HEX NUT M12                 |
| 204 | 060-S01200    | SPR WSHR M12                |
| 206 | 030-000820-S  | HEX BLT W/S M8x20           |
| 207 | 030-000850-SB | HEX BLT W/S BLK<br>M8x50    |
| 209 | 030-000880-SB | HEX BLT W/S BLK<br>M8x80    |
| 210 | 060-F00800-0B | FLT WSHR BLK M8             |
| 211 | 060-F00800    | FLT WSHR M8                 |
| 212 | 050-U00800    | U NUT M8                    |
| 213 | 000-T00408-0C | M SCR TH CRM M4x8           |
| 214 | 000-F00410    | M SCR FH M4x10              |
| 215 | 000-P00408-W  | M SCR PH W/FS M4x8          |
| 216 | 068-441616-0C | FLT WSHR CRM 4.4-<br>16x1.6 |

[\[Previous page\]](#)[\[Next page\]](#)[\[Table of Contents\]](#)

---

## ASSY SIDE STEP (SRT-2470)

 

| ITEM NO. | PART NO. | DESCRIPTION       |
|----------|----------|-------------------|
| 1        | SRT-2471 | SIDE STEP         |
| 2        | SRT-2472 | STEP MAT          |
| 3        | SRT-2473 | CORNER SASH L     |
| 4        | SRT-2474 | CORNER PLATE<br>A |
| 5        | SRT-2475 | CORNER PLATE<br>B |
| 6        | SRT-2476 | NON-SLIP MAT L    |

