JALECO

BIG STRIKER™

INSTRUCTION MANUAL

JALECO EUROPE
Rowlandson House, 289 Ballards Lane
Finchley, London N12 8NP United Kingdom
Tel.081-446-8431 Fax.081-445-6493

JALECO USA, INC.
310 Era Drive, Northbrook, IL 60062 U.S.A.
Tel.708-480-1811 Fax.708-480-9231

JALECO LTD.
2-19-7 Yohga, Setagaya-ku, Tokyo 158, Japan
Tel.03-3708-4830 Fax.03-3708-4822 Telex.J27891

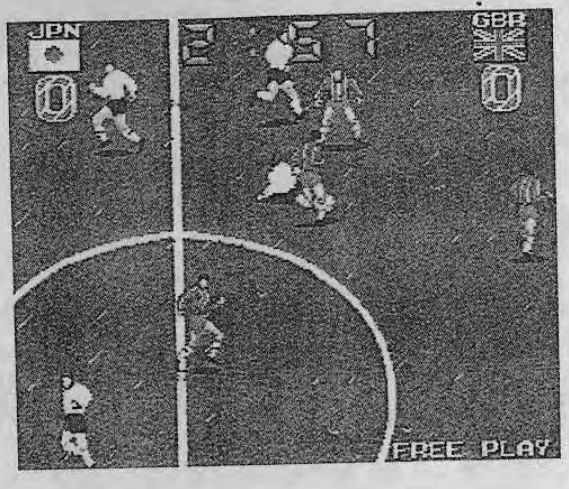

BIG STRIKER™

EDGE CONNECTOR DIAGRAM (EDGE CONNECTOR OF JAMMA SPECS.)

COMPONENT SIDE			SOLDER SIDE
GND	1	A	GND
GND	2	B	GND
HEADPHONE L&R(-)			
+5V	3	C	+5V
+5V	4	D	+5V
	5	E	
+12V	6	F	+12V
KEY TO PREVENT ERRONEOUS INSERTION	7	H	KEY TO PREVENT ERRONEOUS INSERTION
COIN METER #1	8	J	COIN METER #2
	9	K	
SPEAKER 1 (+) HEADPHONE L (+)	10	L	SPEAKER 1 (-)
	11	M	
VIDEO RED	12	N	VIDEO GREEN
VIDEO BLUE	13	P	VIDEO SYNC
VIDEO GND	14	R	SERVICE SWITCH
	15	S	
COIN SW #1	16	T	COIN SW #1
START SW #1	17	U	START SW #2
1P UP	18	V	2P UP
1P DOWN	19	W	2P DOWN
1P LEFT	20	X	2P LEFT
1P RIGHT	21	Y	2P RIGHT
1P PUSH 1	22	Z	2P PUSH 1
1P PUSH 2	23	a	2P PUSH 2
	24	b	
	25	c	
	26	d	
GND	27	e	GND
GND	28	f	GND

SPEAKER #2 (+) HEADPHONE R (+)	1	2	SPEAKER #2 (-)

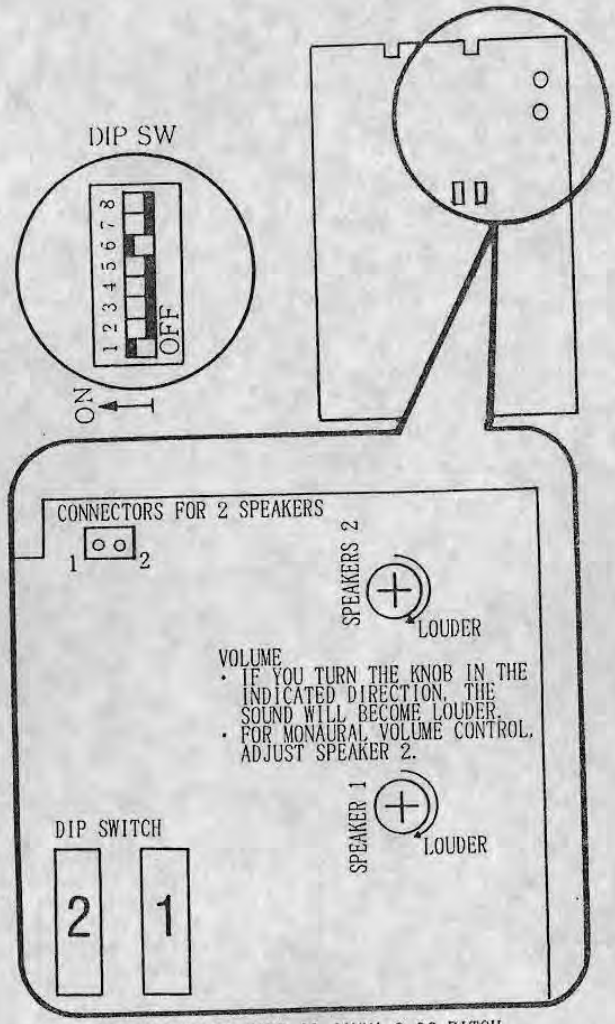

- THE EDGE CONNECTOR USED IS JAMMA 3.96 PITCH
- THE CONNECTOR USED FOR SPEAKER 2 IS 2.5 PITCH

CONTROLS

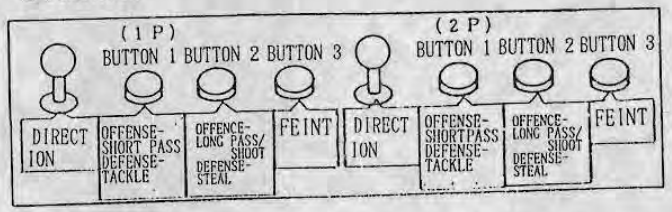

- 8 DIRECTIONS
- SIDE SCROLLING
- 3 BUTTONS

●DIP SWITCH 1

(No.)	COIN CHUTE 1				COIN CHUTE 2			
	1	2	3	4	5	6	7	8
1 COIN 1 CREDIT	OFF	OFF	OFF	OFF				
1 〃 2 〃	ON	OFF	OFF	OFF				
1 〃 3 〃	OFF	ON	OFF	OFF				
1 〃 4 〃	ON	ON	OFF	OFF				
1 〃 5 〃	OFF	OFF	ON	OFF				
1 〃 6 〃	ON	OFF	ON	OFF				
2 〃 1 〃	OFF	ON	ON	OFF				
3 〃 1 〃	ON	ON	ON	OFF				
4 〃 1 〃	OFF	OFF	OFF	ON				
2 〃 3 〃	ON	OFF	OFF	ON				
1 COIN 1 CREDIT					OFF	OFF	OFF	OFF
1 〃 2 〃					ON	OFF	OFF	OFF
1 〃 3 〃					OFF	ON	OFF	OFF
1 〃 4 〃					ON	ON	OFF	OFF
1 〃 5 〃					OFF	OFF	ON	OFF
1 〃 6 〃					ON	OFF	ON	OFF
2 〃 1 〃					OFF	ON	ON	OFF
3 〃 1 〃					ON	ON	ON	OFF
4 〃 1 〃					OFF	OFF	OFF	ON
2 〃 3 〃					ON	OFF	OFF	ON
FREE PLAY	ON	ON	ON	ON	ON	ON	ON	ON

●DIP SWITCH 2

(No.)		1	2	3	4	5	6	7	8
SCREEN	REGULAR	OFF							
	INVERSE	ON							
DIFFICULTY LEVEL	STANDARD		OFF	OFF					
	HARD		ON	OFF					
	EASY		OFF	ON					
	VERY HARD		ON	ON					
GAME TIME	STANDARD				OFF	OFF			
	SHORT				ON	OFF			
	LONG				OFF	ON			
	REALLY SHORT				ON	ON			
DEMO SOUND	ON						OFF		
	OFF						ON		
CREDITS NEEDED TO PLAY	2 CREDITS							OFF	
	1 CREDITS							ON	
TEST MODE	ON								OFF
	OFF								ON

- SOME MONITOR SCREENS ARE INVERTED. IF THIS IS THE CASE, PLEASE SET THE SWITCH IN THE OPPOSITE DIRECTION. THE SCREEN DIRECTION SHOULD CHANGE. (THE PLAYER'S CONTROLS SHOULD REMAIN THE SAME.)
- ALL SWITCHES ARE SET TO OFF WHEN IT LEAVES THE FACTORY FOR SHIPMENT.
- MAKE SURE TO TURN OFF THE POWER BEFORE SETTING THE DIP SWITCHES.
- IF DIP SWITCH 2. #8. IS SET TO ON. WHEN THE POWER IS TURNED ON. THE TEST MODE WILL RUN. USE THE 1P JOYSTICK TO MAKE YOUR SELECTION AND THE 1P START BUTTON TO EXECUTE.

JALECO