

TABLE OF CONTENTS

PART 1

- * INSTALLATION
- * CARE IN OPERATION
- * HOW TO PLAY
- * GOT-YA VIDEO DIAGRAM

PART 2

- * ADJUSTMENT OF GAME PC BOARD AND ADJUSTMENT OF DIP SWITCH
- * INTERNAL SIDE-VIEW POSITION OF CABINET
- * EXTERNAL FRONT-VIEW POSITION OF CABINET
- * 110 VAC LINE SCHEMATIC
- * COIN IN ASSEMBLY/MICRO-SWITCH WIRING
- * FLUORESCENT FIXTURE ASSEMBLY
- * CPU BOARD DIAGRAM
- * VIDEO BOARD DIAGRAM
- * COUNTER BOARD DIAGRAM
- * VRAM BOARD DIAGRAM
- * COIN COUNTER DIAGRAM
- * POWER SUPPLY ASSEMBLY DIAGRAM
- * POWER SUPPLY LAYOUT

PART 3

- * TOP BOARD (F1001) SCHEMATIC
- * BOTTOM BOARD (F1002) SCHEMATIC
- * CPU BOARD (F1001) CHIP PACK PARTS LIST
- * VIDEO BOARD (F1002) CHIP PACK PARTS LIST

INTRODUCTION

GAME-A-TRON PRESENTS A GROWING LINE OF VIDEO GAMES FOR THE AMUSEMENT INDUSTRY. EVER CHANGING - EVER CHALLENGING - EVER PROFITABLE. THE LEADER IS GAME-A-TRON.

The Operators Manual provides information to help in servicing this machine. Problems extending beyond this manual should be handled by experienced technical personell.

Boards being returned to the manufacturer for servicing should be placed in anti-static bags to prevent damage to the program. Game-A-Tron will not be responsible for damage, due to improper packaging.

Game-A-Tron offers the most realistic graphic displays in the industry. Our space age cabinetry and sound effects enhance player appeal. Advanced electronic design insures minimum maintenance cost and down time, there by increasing profits.

- CAUTION ———

READ MANUAL BEFORE LOCATION SET-UP, NOT DOING SO MAY CAUSE REDUCED PROFITS.



- INSTALLATION -

- 1. The GOT-YA Game by GAME-A-TRON is for "INDOOR USE", DO NOT install outdoors.
 - 2. WHEN INSTALLING, AVOID THE FOLLOWING PLACES:
 - * Near indoor pools or showers
 - * Where leaks exist
 - * Under direct sunlight
 - Near heaters or other heat emitting devices
 - * Where hazardous items are (volatile fluids, gas cylinders etc.)
 - Where vibrations are severe (near construction sites where jack hammers etc. are used)
 - * Inclined place
 - * Near fire extinguishing equipment
 - * Near emergency exits

- CARE IN OPERATION -

1. INSPECTION

- * Are the IC boards and other connectors firmly connected?
- * Connect ground wire as prescribed. (Never connect to gas pipes, water pipes or electrical conduits).
- * Arrange line cords and ground wires in the aisles so they will not be tripped over.

2. CARE IN HANDLING

- * Always turn off power supply switch before handling.
- * Avoid inserting and pulling the plug in rapid succession.
- * Do not check the IC board circuit with a tester.

3. CARE IN USAGE

* Care should be taken to avoid dragging or dropping the machine when transporting to prevent damage to the CRT.

4. USE FUSE OF STIPULATED RATING


* As high voltage is present in the monitor and TV PCB, adjustments or repairs should be left to a serviceman and should never be touched by the layman.

HOW TO PLAY

- * One or Two can Play! One Coin One Play!
- * When coin is deposited, ROCK will come out on the TV Using the lever, up & down, right & left, eat every DOT
- * To get high scores, erase the Dot by attacking or escaping from ROCK, SCISSORS or PAPER
- *When \$ DOT is erased, Rock becomes SCISSORS or PAPER by its corresponding button.
- * ROCK beats SCISSORS. (ROCK breaks SCISSORS)
 SCISSORS beats PAPER. (SCISSORS cuts PAPER)
 PAPER beats ROCK (Paper wraps ROCK)
- * One symbol changes into one of the two freely.
- * Erasing all the DOTS, the next pattern will come out from the upper point. Using the lever correctly, you can enter into this pattern. Challenge higher scores by eating the DOT energy.
- * Continuous play is possible. When the game is over and there still comes out the Continue Game Sign, continuous play is possible by pushing either One Play or Two Play button already credited

If new play is required, start the game after the Continue Game Sign fades away.

1UP HI-SCORE 2UP

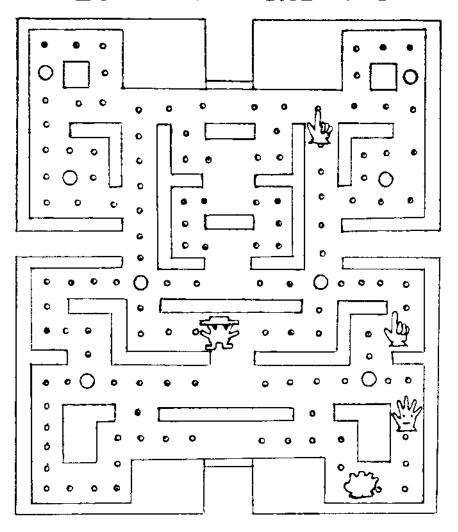

_ _ _ _ _ _ _

ADJUSTMENT OF GAME PC BOARD - ADJUSTMENT OF DIP SWITCH

SW 2: GAME DIFFICULTY

Con.	ON
Lib.	OFF

SW 3: EXTRA BONUS ONE OVER 15000 POINT.

YES	ON	
NO	OFF	

SW 4: NUMBER OF OWN PLAYER

3	20
5	OFF


SW 6: PATTERN TEST

ENDLESS GAME	ON
NORMAL GAME	OFF


REMARK: Before main switch on

-Test pattern, After main switch on -


Endless game pattern.

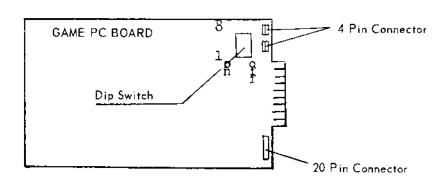



VOLUME ADJUSTMENT




SIDE VIEW POSITION

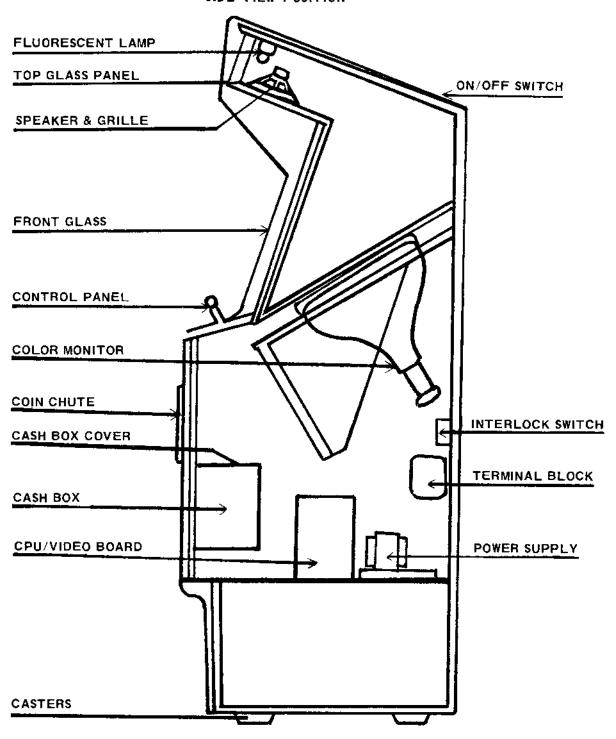

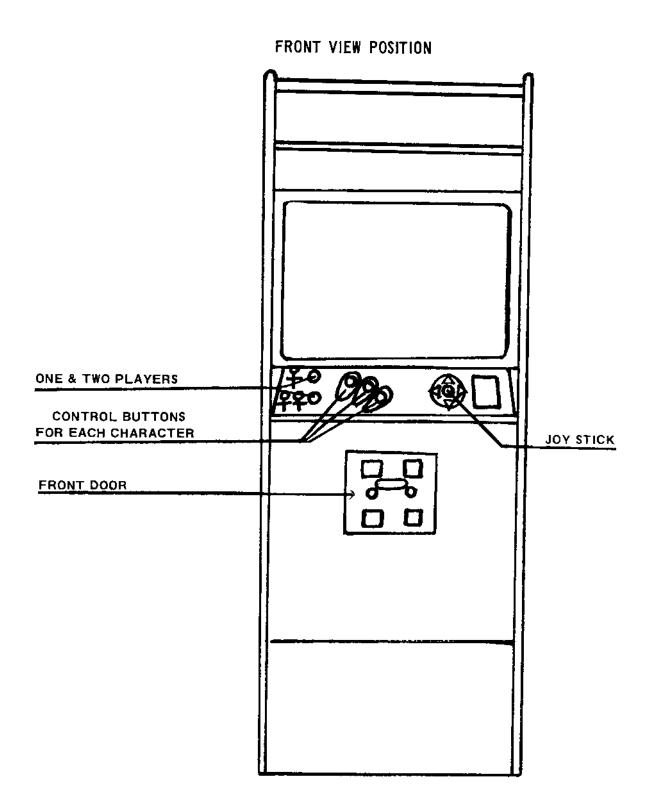


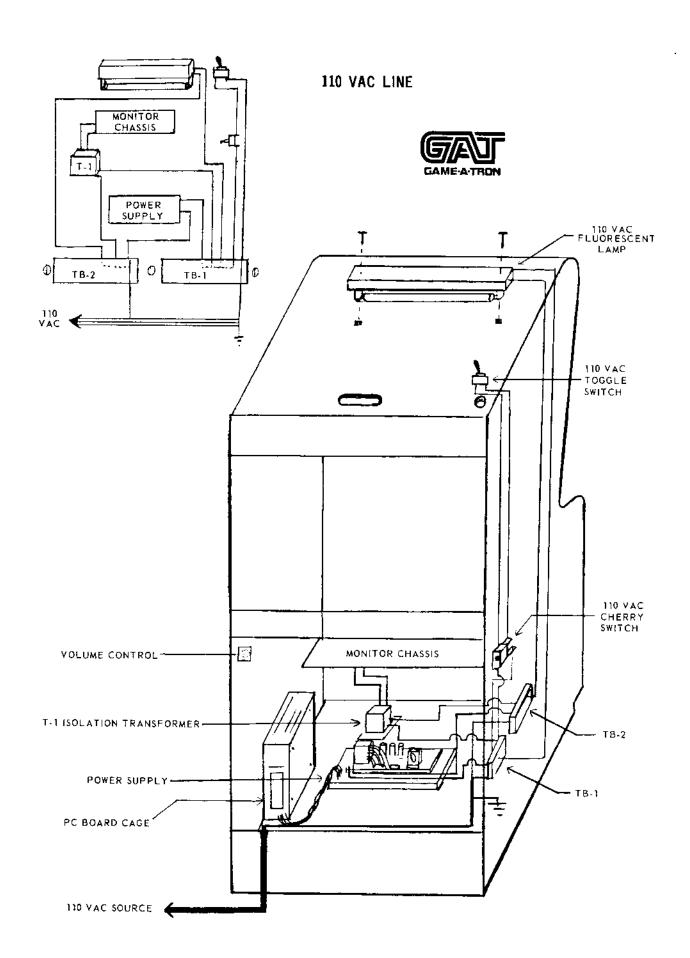

COIN IN ASSEMBLY

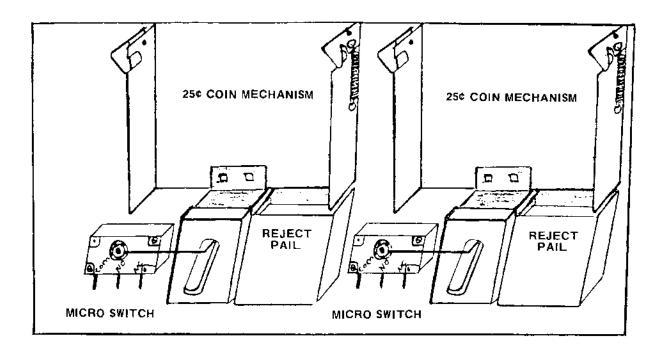



MICRO-SWITCH WIRING

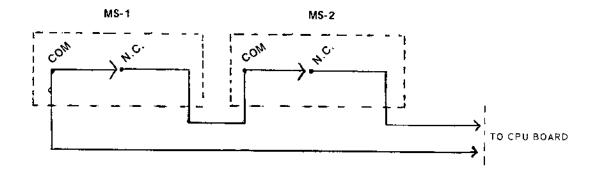



N.C. NORMALLY CLOSED M.S. MICRO SWITCH


FLUORESCENT FIXTURE ASSEMBLY

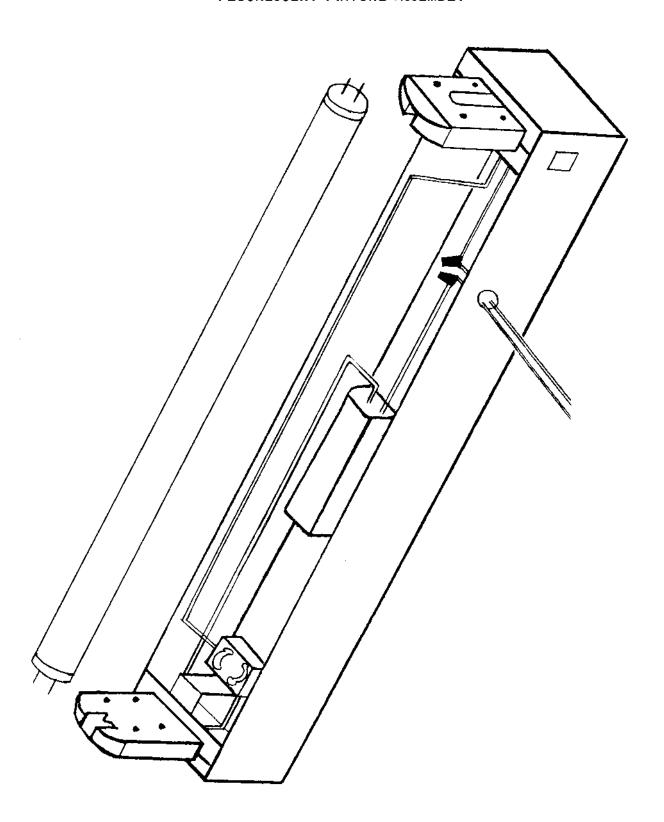

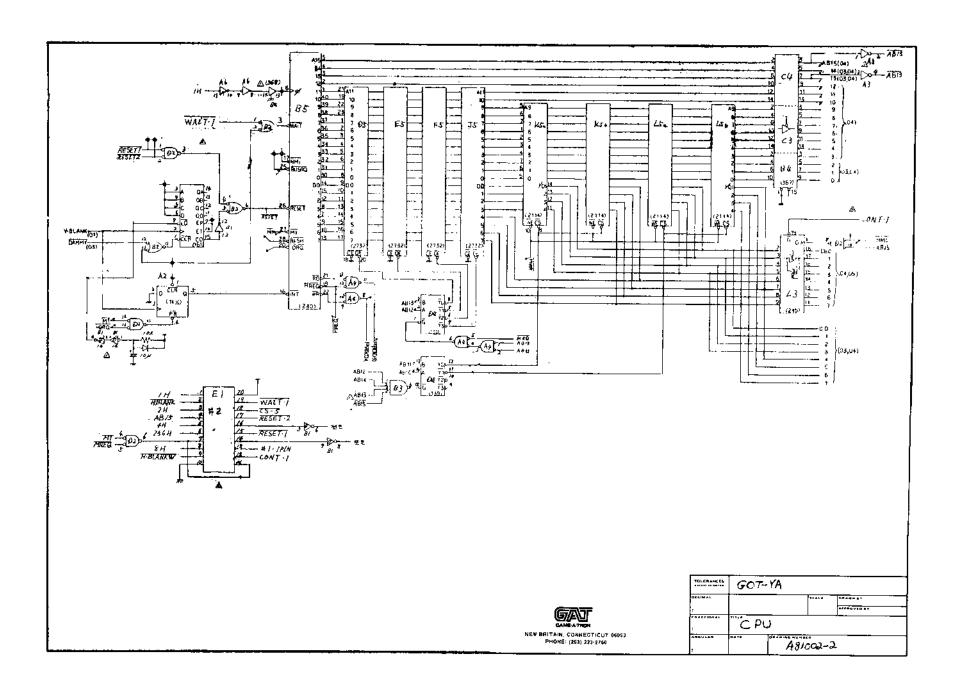


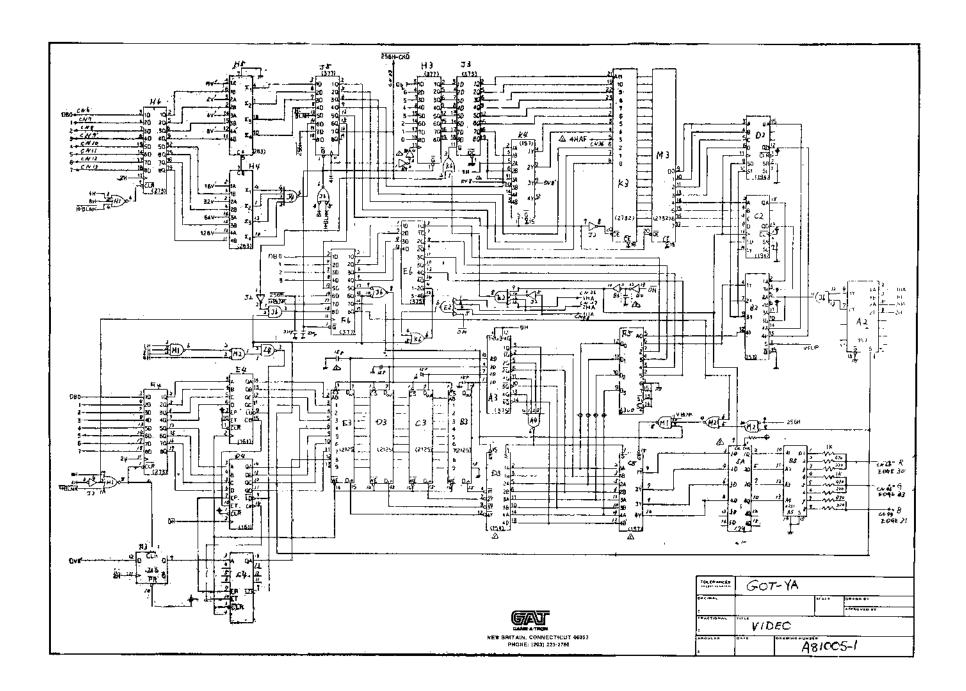

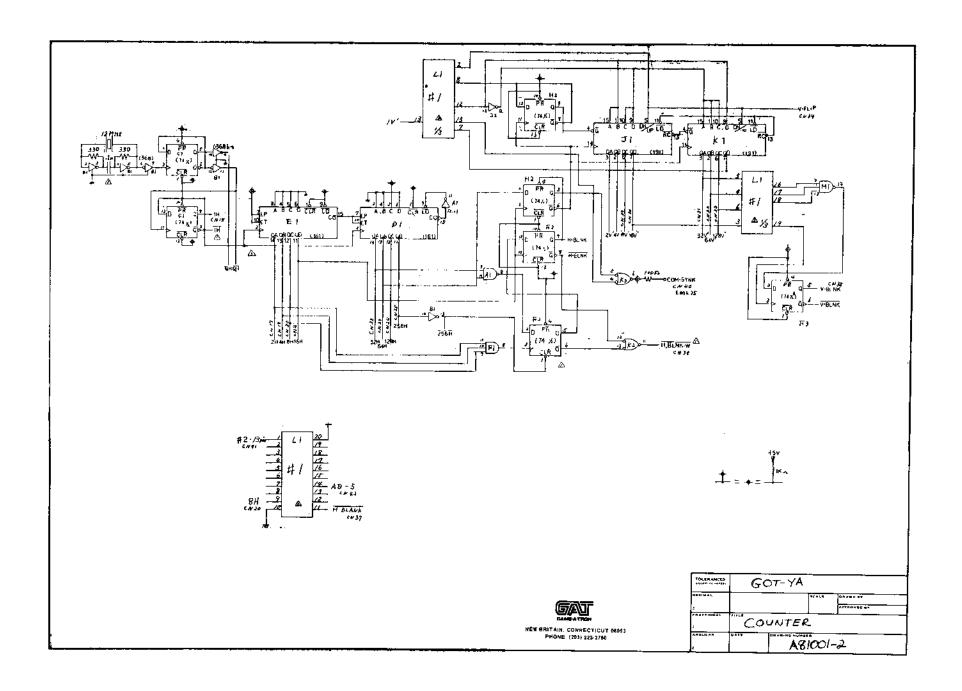


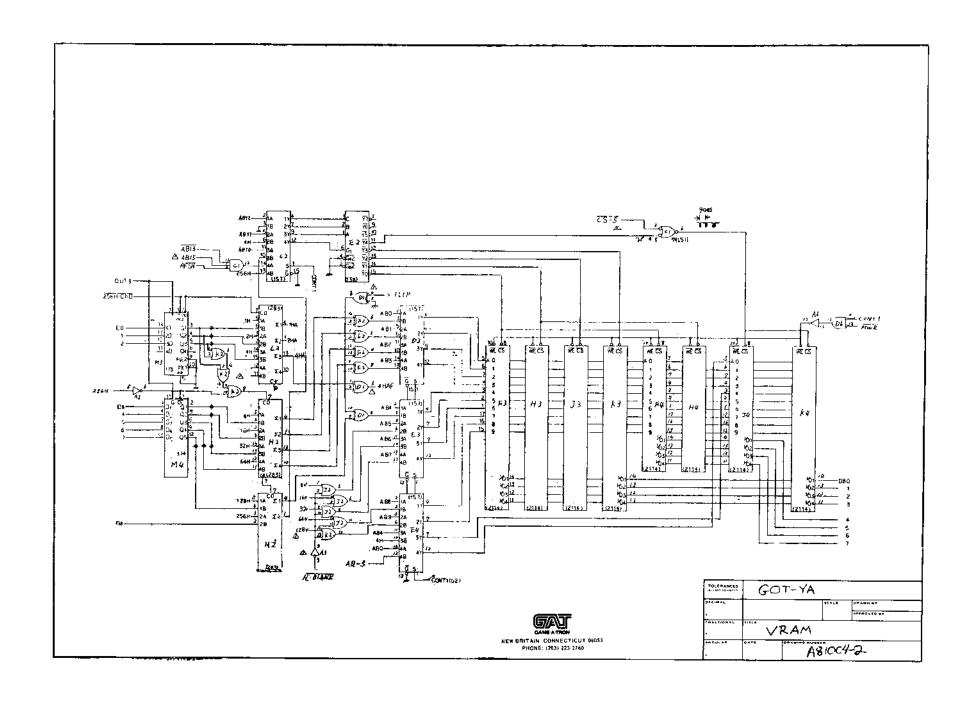


GOT-YA COIN COUNTER DIAGRAM

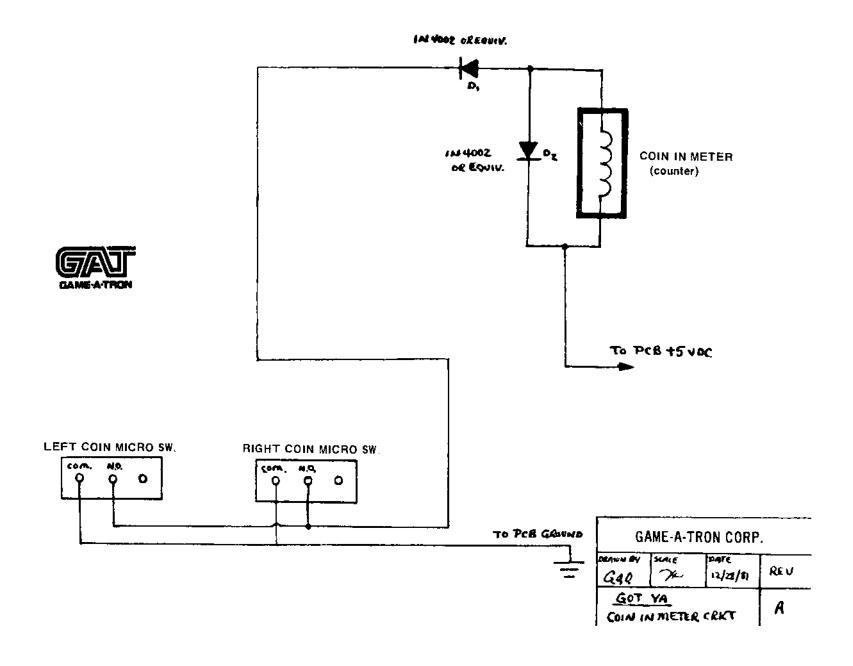

POWER SUPPLY ASSEMBLY

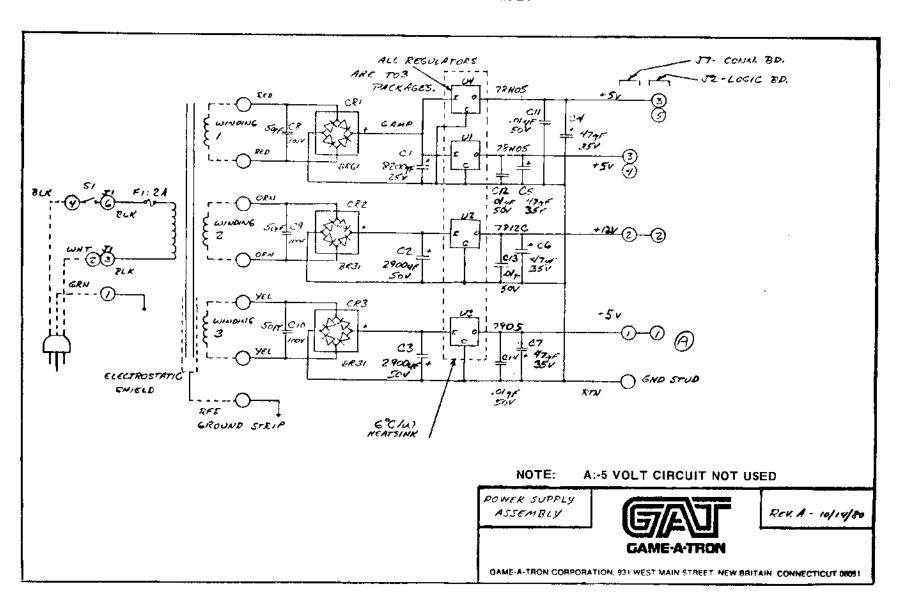


POWER SUPPLY LAYOUT

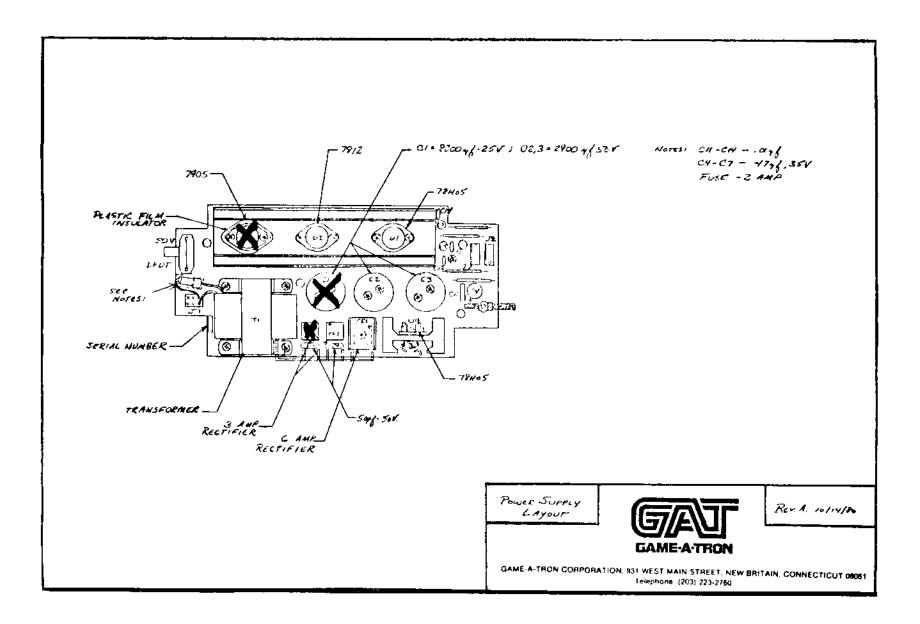

TOP BOARD

C700 1006 (F1001) GOT-YA


GAME-A-TRON 24 DEC. 1981

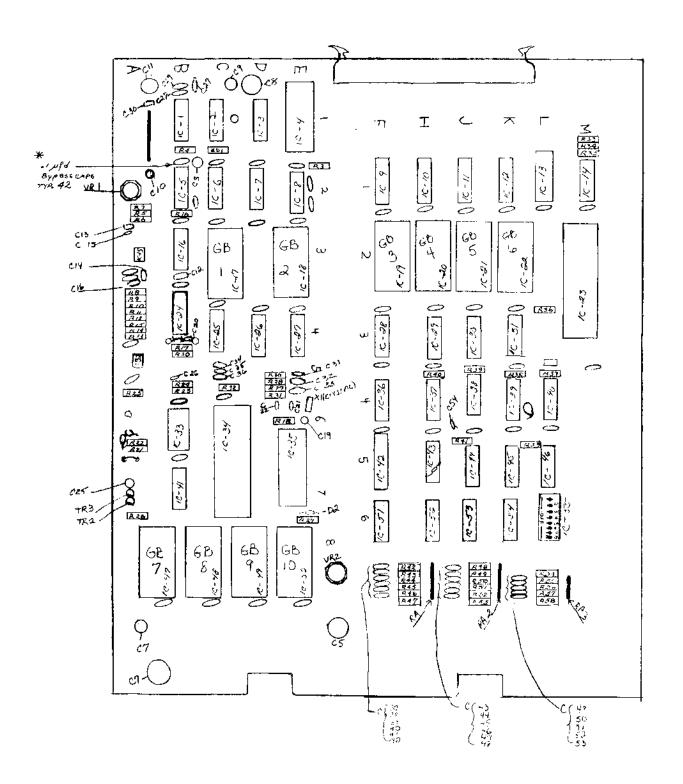

BOTTOM BOARD

C700 1007 (F1002) GOT-YA

GAME-A-TRON 24 DEC. 1981

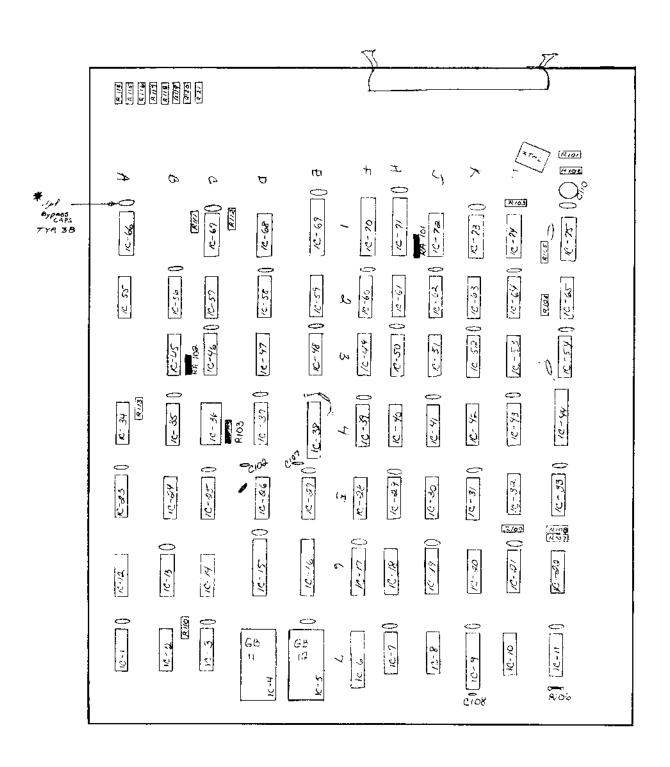

CPU BOARD NO. F1001 CHIP PACK PARTS LIST

QUAN.	LOCATION NUMBER	PART NUMBER
1	IC-1	74LS14
l i	IC-2	74121
i	IC-3	74LS174
1	IC-4	8212
4	IC-5, IC-6, IC-29, IC-30	74LS32
2	IC-7, IC-39	74LS08
2	IC-8, IC-37	74LS74
4	IC-9, IC-10, IC-11, IC-12	2114
1	IC-13	8143
1	IC-14	74LS04
1	IC-15	UA741
1	IC-16	74LS383
2	IC-17, IC-18	2716
1	1C-27	74LS174
1	IC-23	D780C
2	IC-24, IC-46	74L\$11
1	IC-25	7412
6	IC-26, IC-31, IC-51, IC-52, IC-53, IC-54	74LS367
8	IC-19, IC-20, IC-21, IC-22, IC-47, IC-48, IC-49, IC-50	2732
1	1C-28	74LS13P
1	IC-33	7910
1	IC-34	HD38882
1	IC-35	38880
1	IC-36	74LS20
1	IC-40	74LS14
1	IC-41	74L\$138
1	IC-42	74LS373
1	IC-43	74LS139
1	IC-44	74LS00
1	1C-45	74LS02

VIDEO BOARD NO. F1002 CHIP PACK PARTS LIST

QUAN.	LOCATION NUMBER	PART NUMBER
7	IC-1, IC-12, IC-14, IC-39, IC-40, IC-41, IC-52	74LS157
2	IC-23, IC-32	74LS00
1	1C-34	74LS174
2	IC-2, IC-3	74L5194
2	IC-4, IC-5	2732
1	IC-6	74L\$273
5	IC-7, IC-8, IC-61, IC-62, IC-63	74L\$283
2	IC-9, IC-16	74LS377
2	IC-10, 4C-21	74LS191
4	IG-11, IC-65, IC-74, IC-22	74LS74
2	IC-13, IC-60	74LS02
1	IC-15	74L\$373
8	IC-17, IC-18, IC-19, IC-20, IC-28, IC-29, IC-30, IC-31	2114
2	IC-24, IC-33	74LS08
1	IC-25	M53225P
1	IC-26	74LS32
1	IC-27	74LS04
1	IC-35	74157
1	IC-36	мВ7052
2	IC-37, IC-46	74LS375
1	IC-38	74L\$377
1	IC-42	74LS138
1	IC-43	74L\$11
1	1C-44	8143
1	IC-45	74LS158
٦	IC-47	74LS20
1	1C-48	74LS27
1	1C-49	74LS32
2	IC-50, IC-51	74LS86
5	1C-53, 1C-59, 1C-64, 1C-67, 1C-68	74LS161
1	1C-54	74LS10
4	IC-55, IC-56, IC-57, IC-58	D2125
	IC 66	8042
1	IC-69 IC-70	74LS273
1	IC-71	74L \$245
1	IC-71	74L\$374
'	IC-72	74LS173
1	IC-75	74LS32
'		74LS368